



Diagram — Model G-747

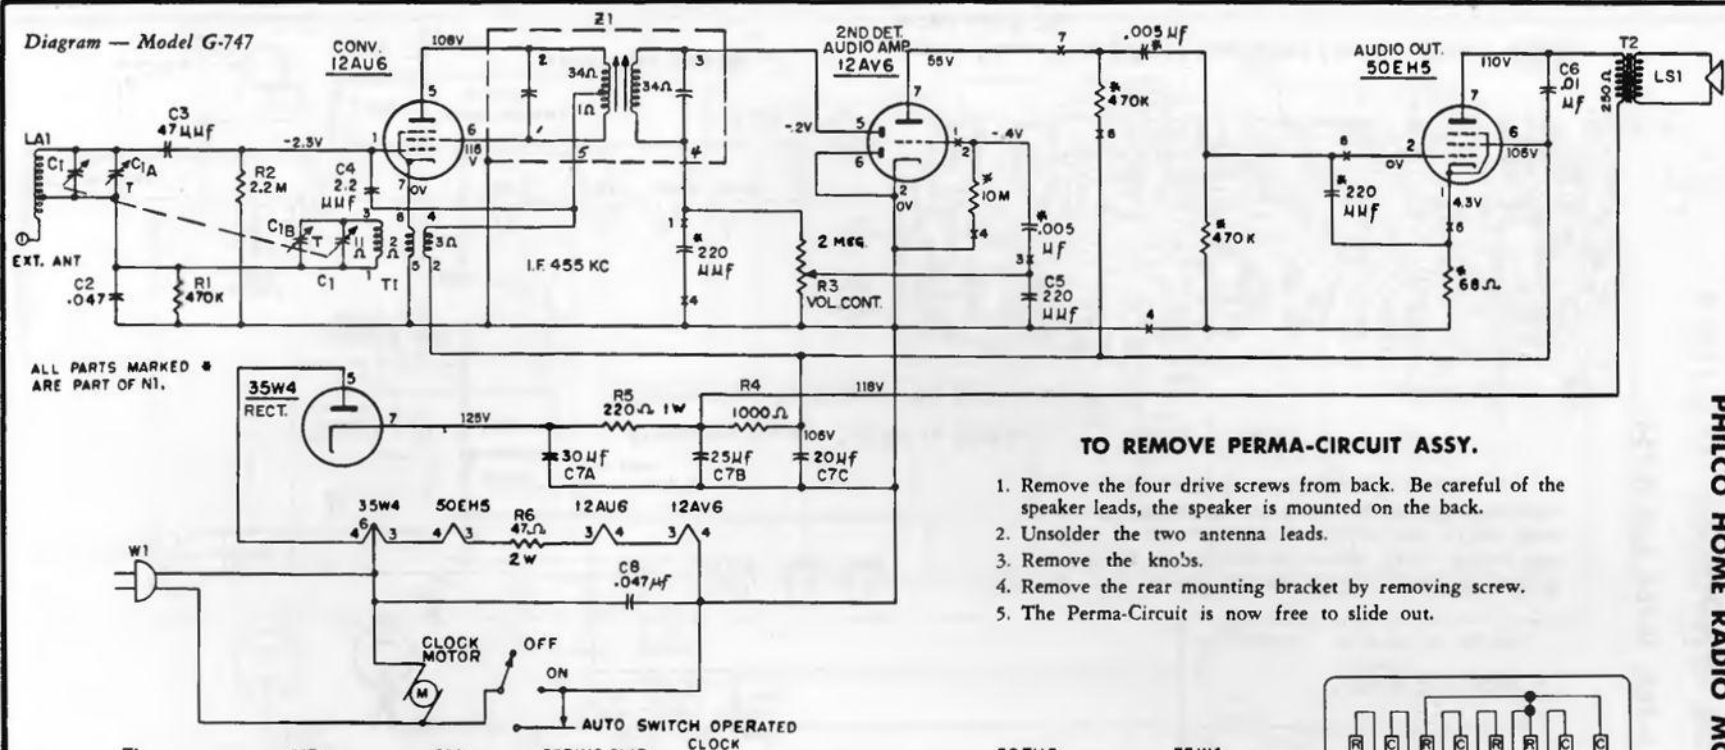


ALL PARTS MARKED *
ARE PART OF N1.

TO REMOVE PERMA-CIRCUIT ASSY.


1. Remove the four drive screws from back. Be careful of the speaker leads, the speaker is mounted on the back.
2. Unsolder the two antenna leads.
3. Remove the knobs.
4. Remove the rear mounting bracket by removing screw.
5. The Perma-Circuit is now free to slide out.

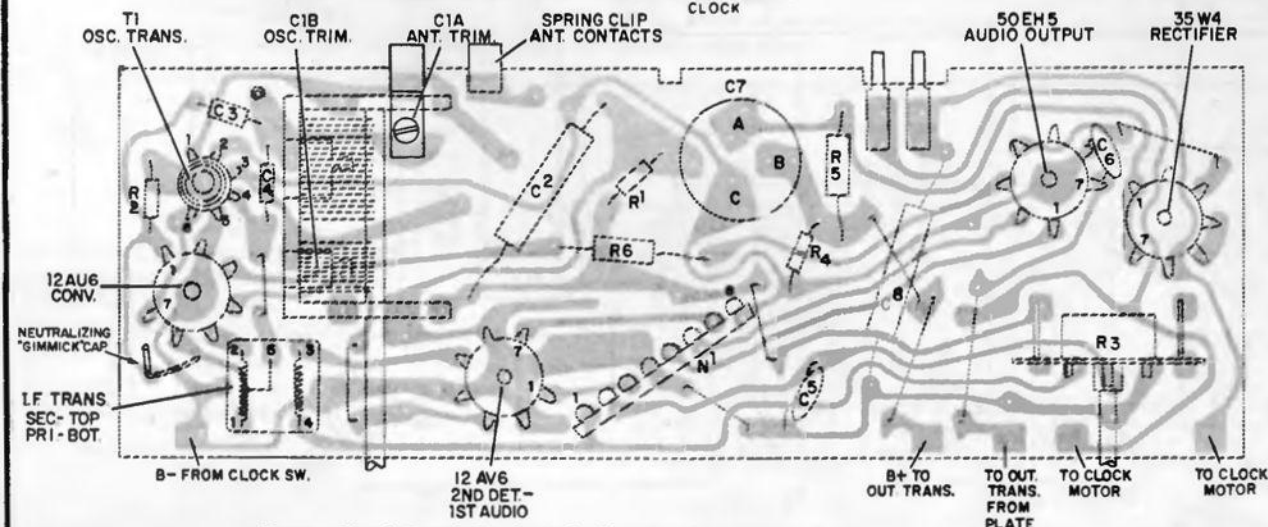

Perma-Circuit Panel, Under Side, Showing Component Layout

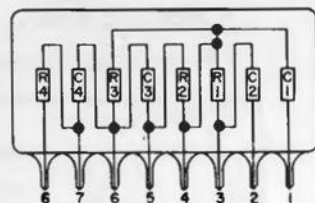

N1 BACK VIEW, SHOWING INTERNAL CONNECTIONS.

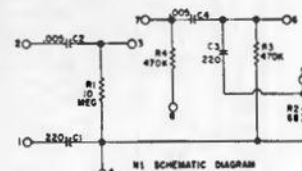

NOTES

- * All components marked with an asterisk are contained in one unit, N1.
- All resistors are $\frac{1}{2}$ watt, 10%, carbon type, unless otherwise noted.
- Voltages read with a 20,000 ohms/volt meter, from point shown to B—, under no signal condition.