



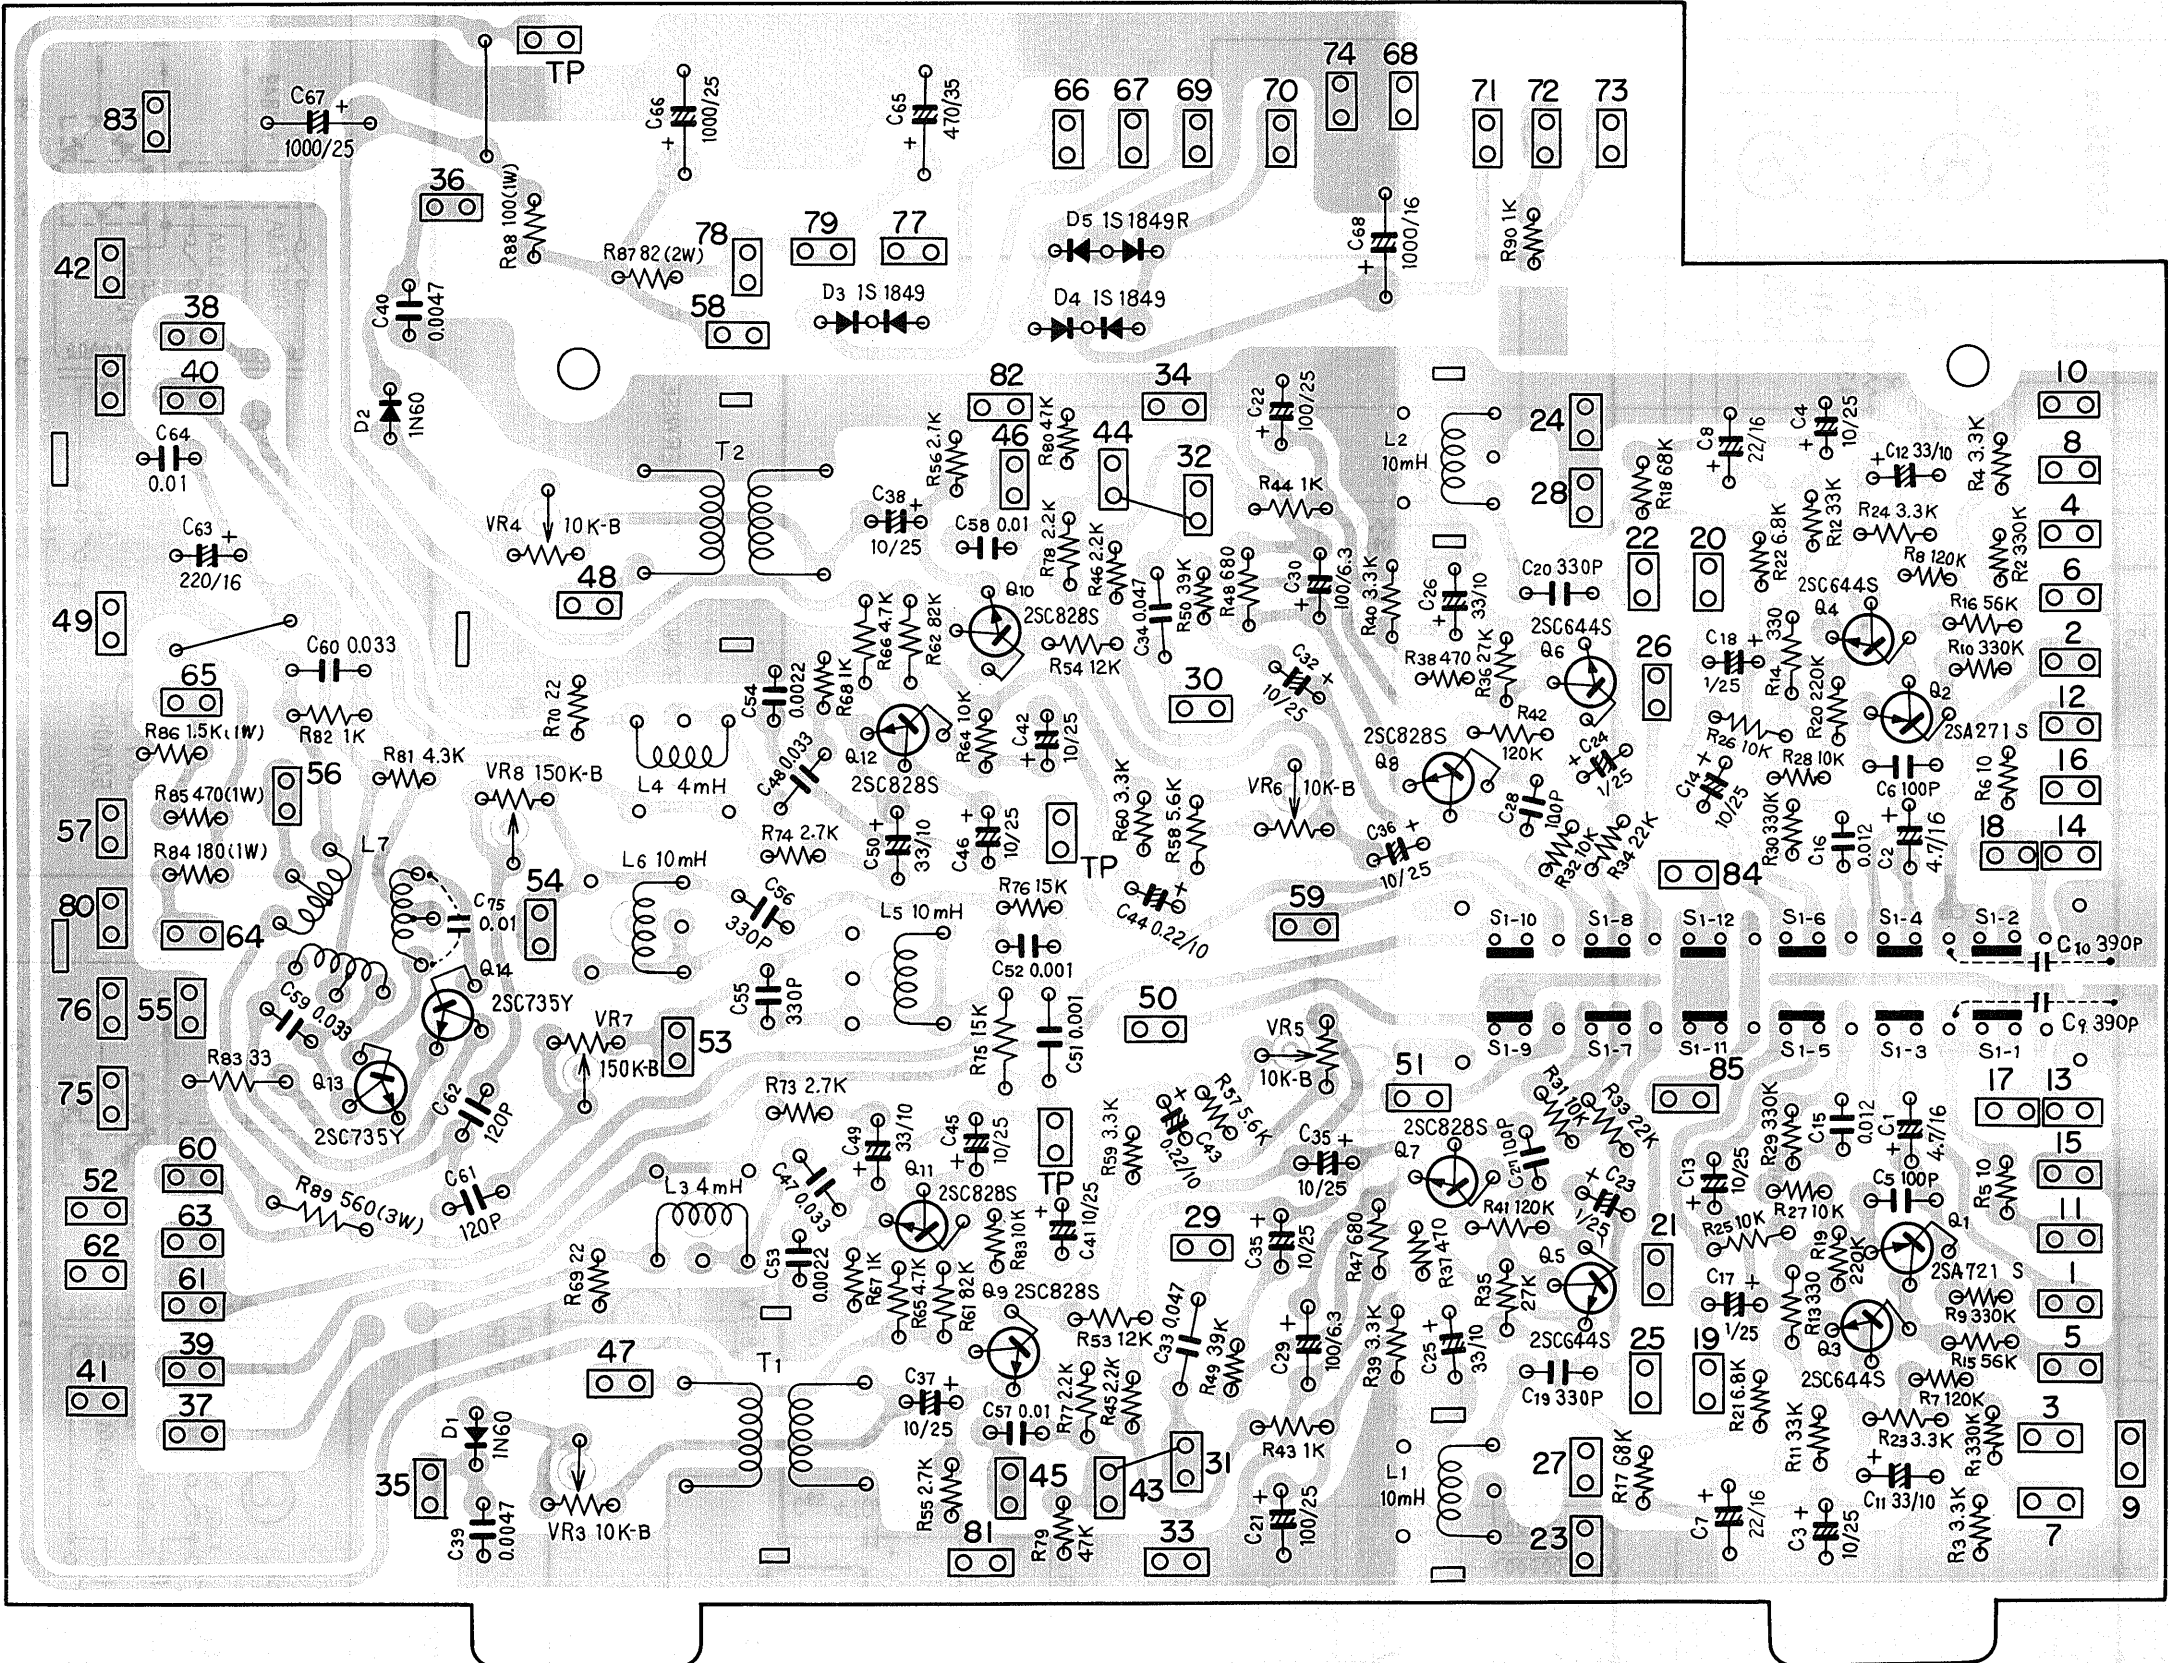


S1 : REC. ↔ P.B. SELECT SWITCH (REC. POSITION)

Sensing circuit ass'y RWG-042

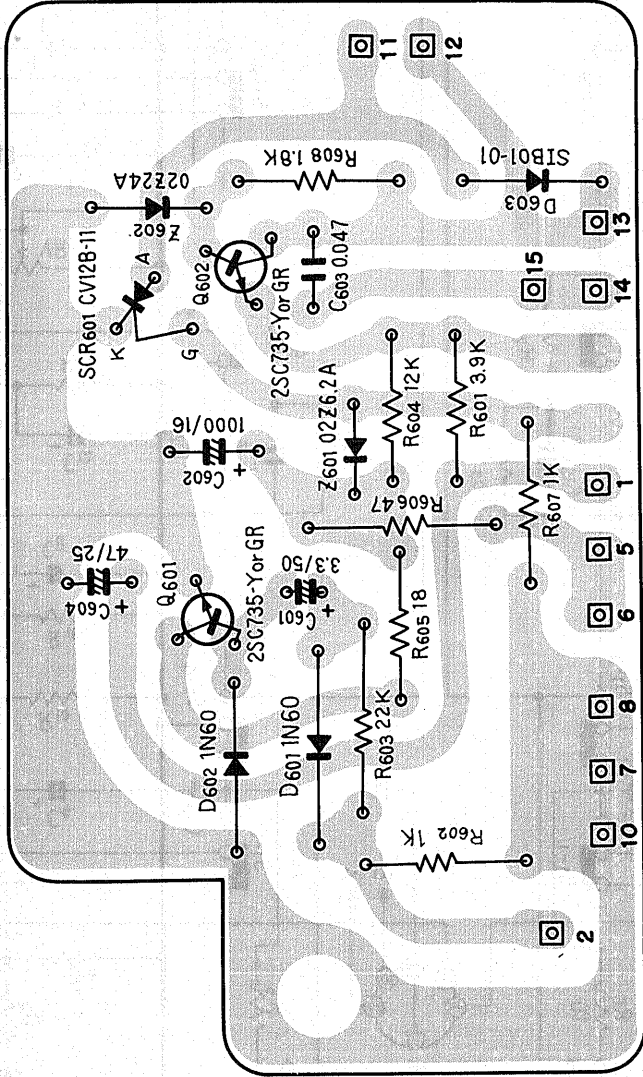


Muting switch ass'y RWS-005

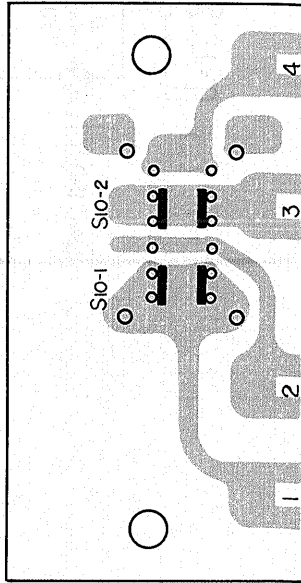

S10 : MUTING SWITCH (PLAY POSITION)

Push switch ass'y RWS-006

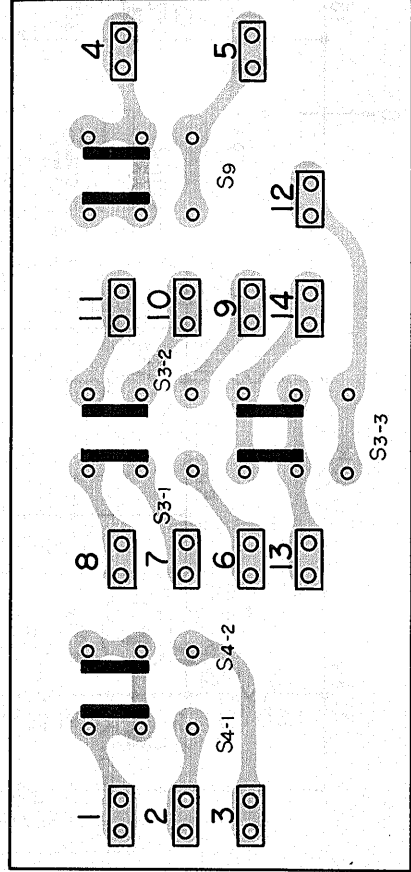


S3 : TAPE SELECT SWITCH (NORMAL POSITION)
S4 : NOISE FILTER SWITCH (OFF POSITION)
S9 : MODE SWITCH (STEREO POSITION)


CASSETTE TAPE DECK

CT-3131A


KCU BP PV Q

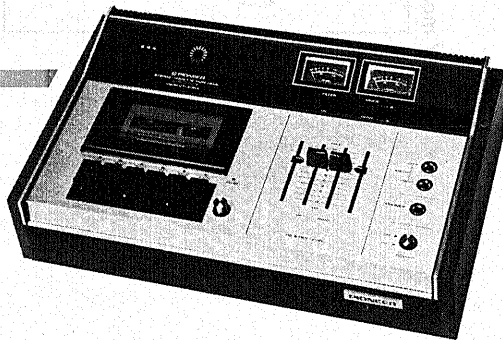


CT-3131A

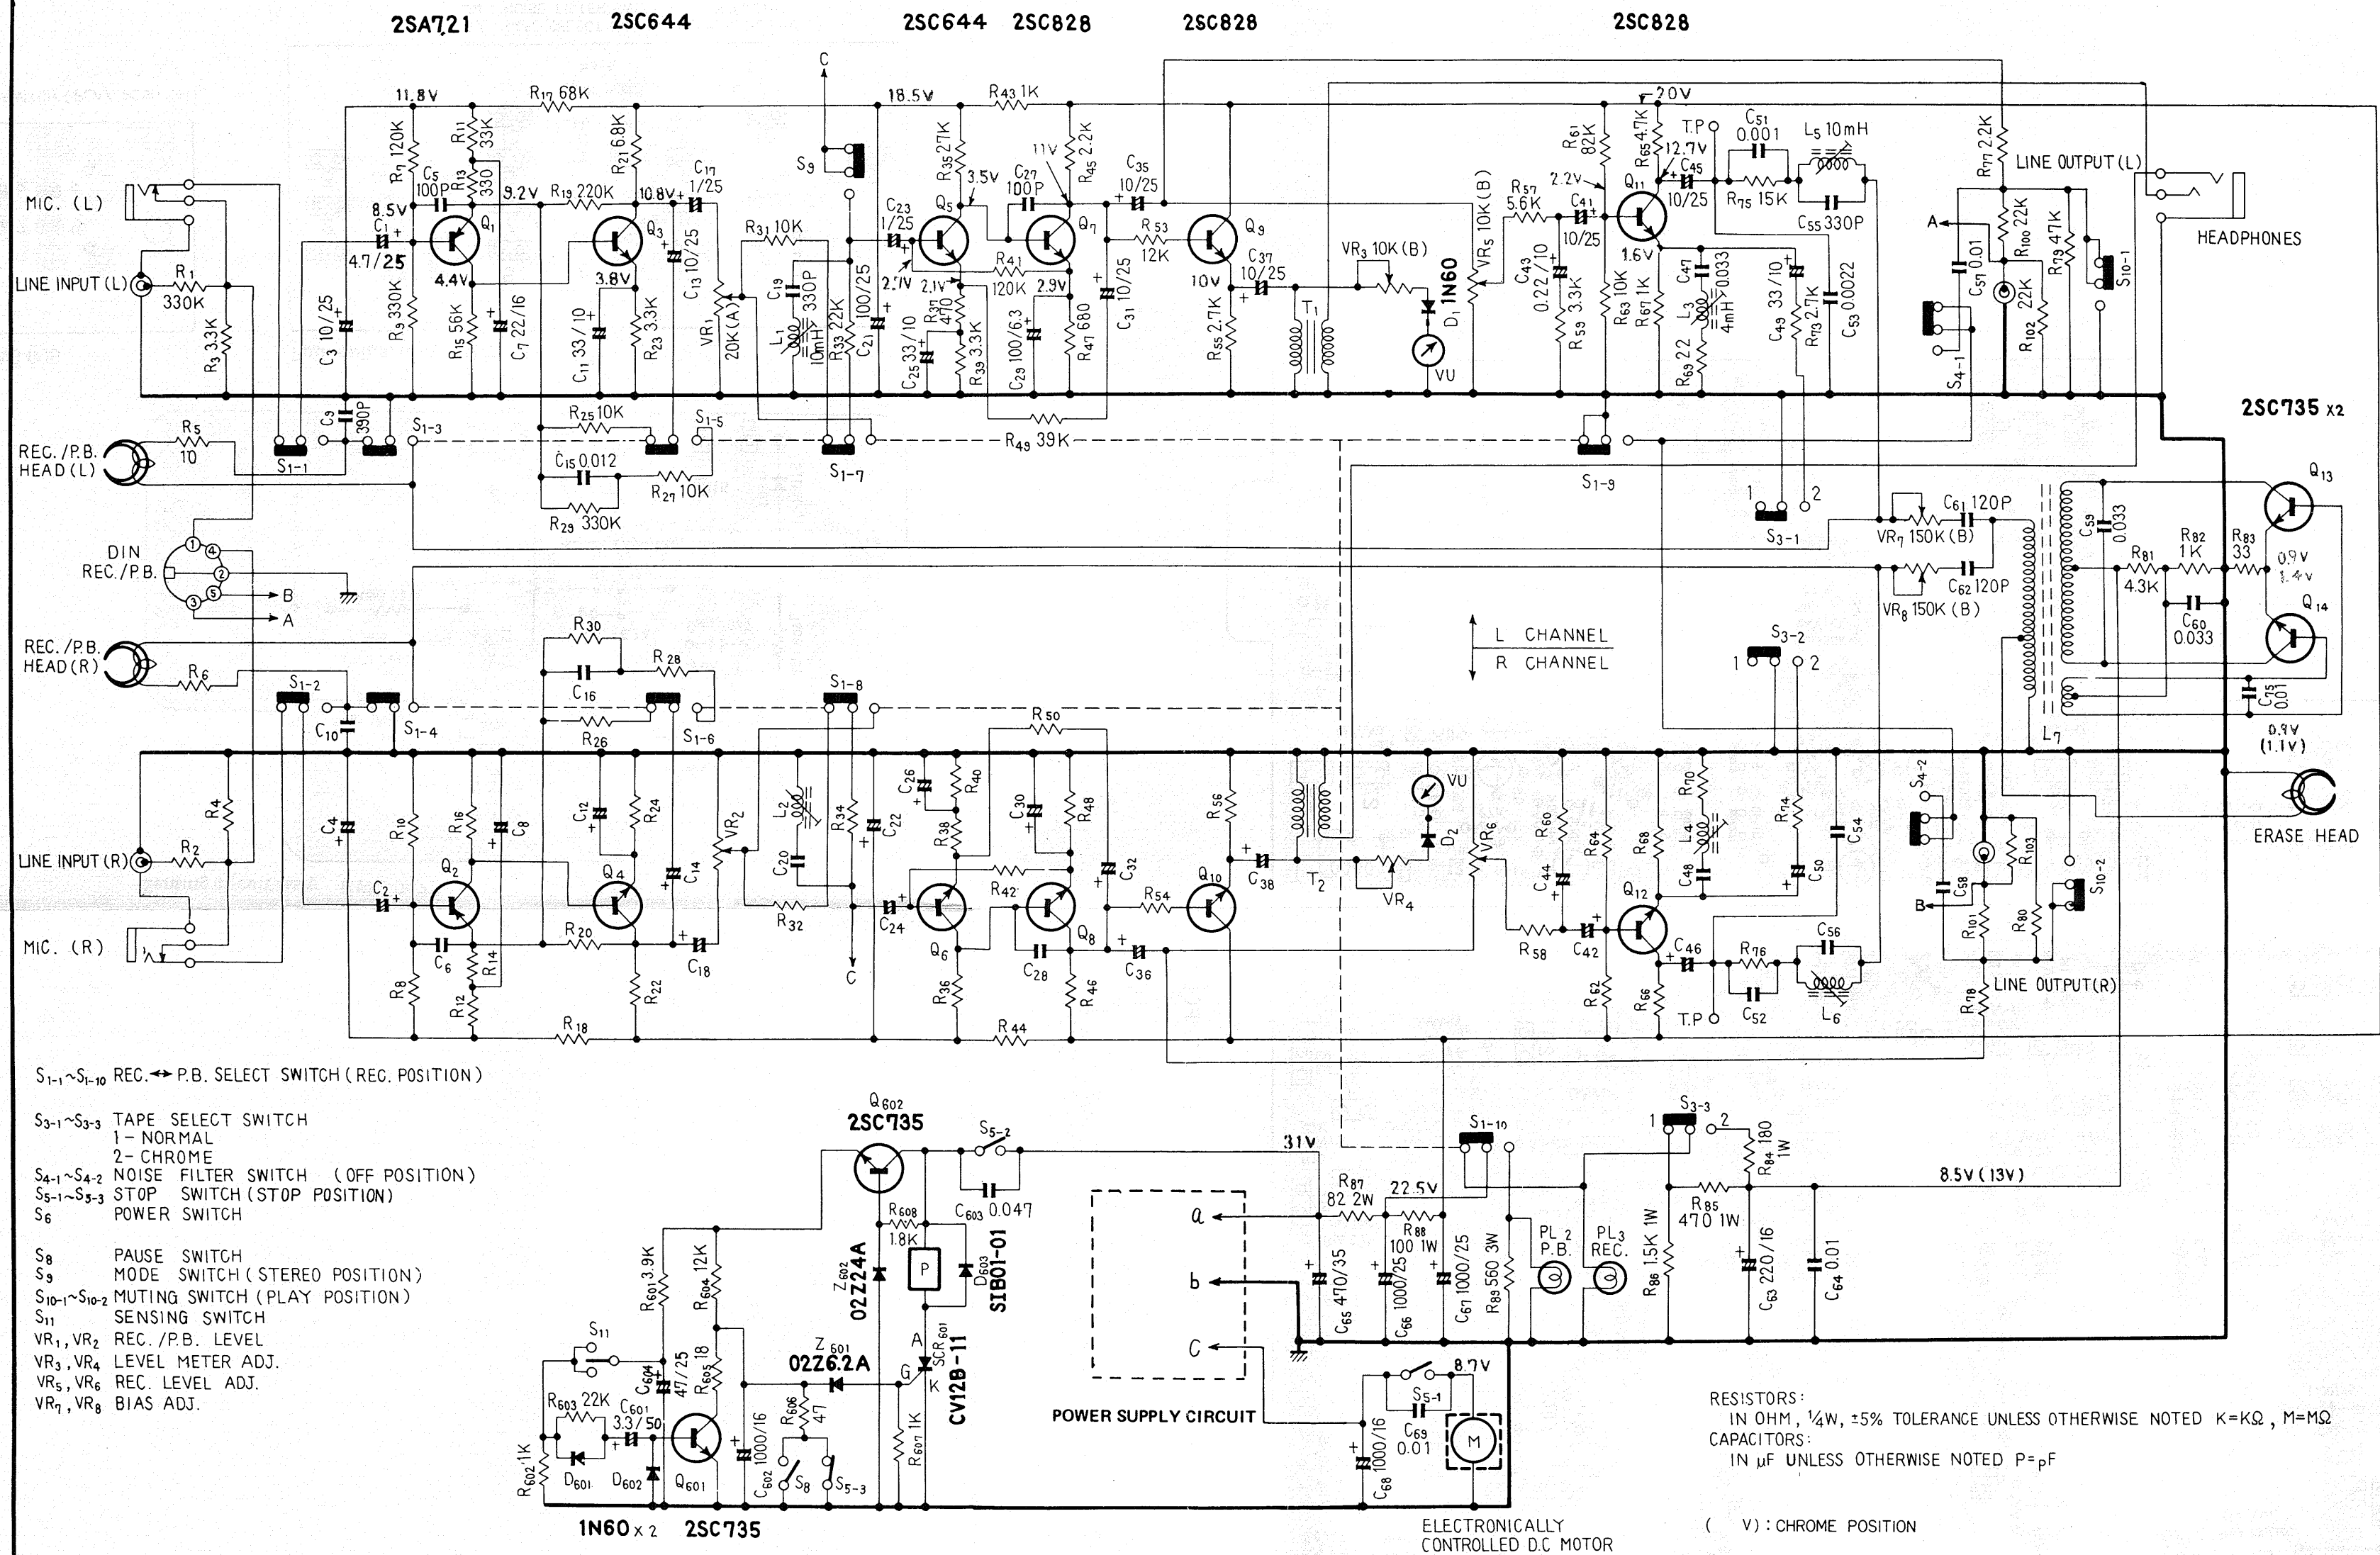


PV model

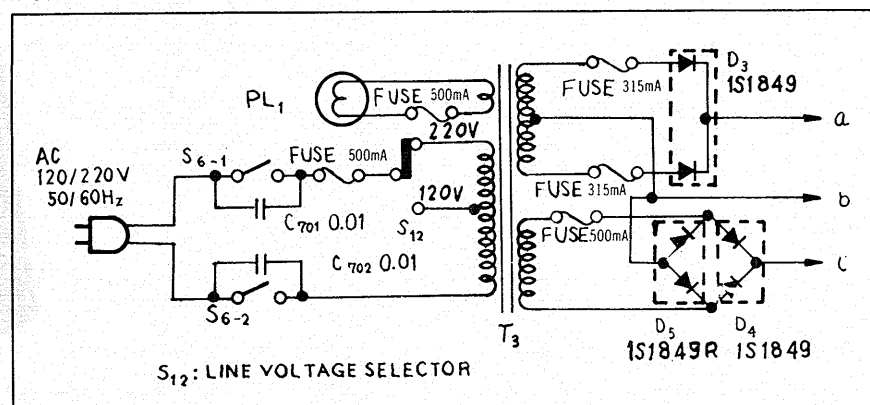

BP model

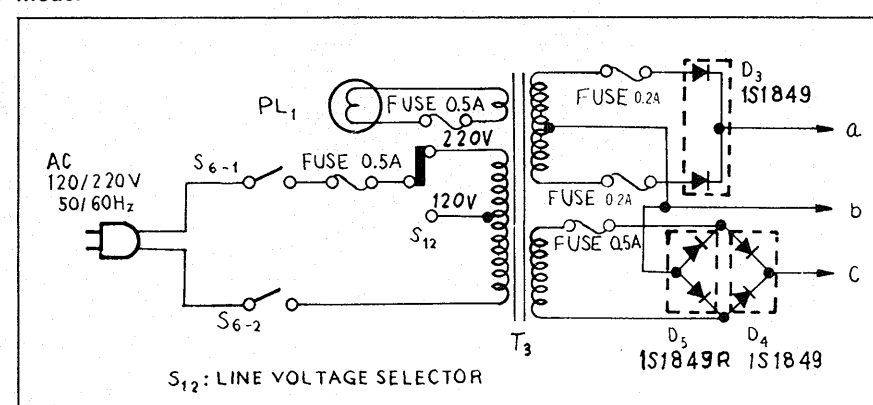

Q model

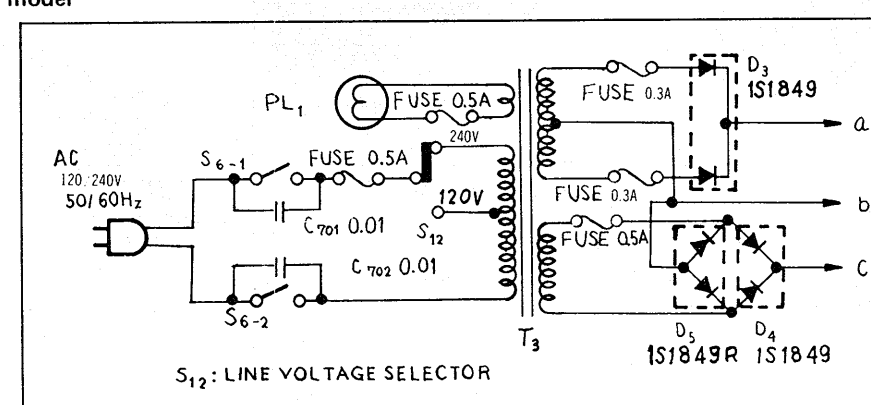

KCU model

