




Tuner ass'y AWE-014

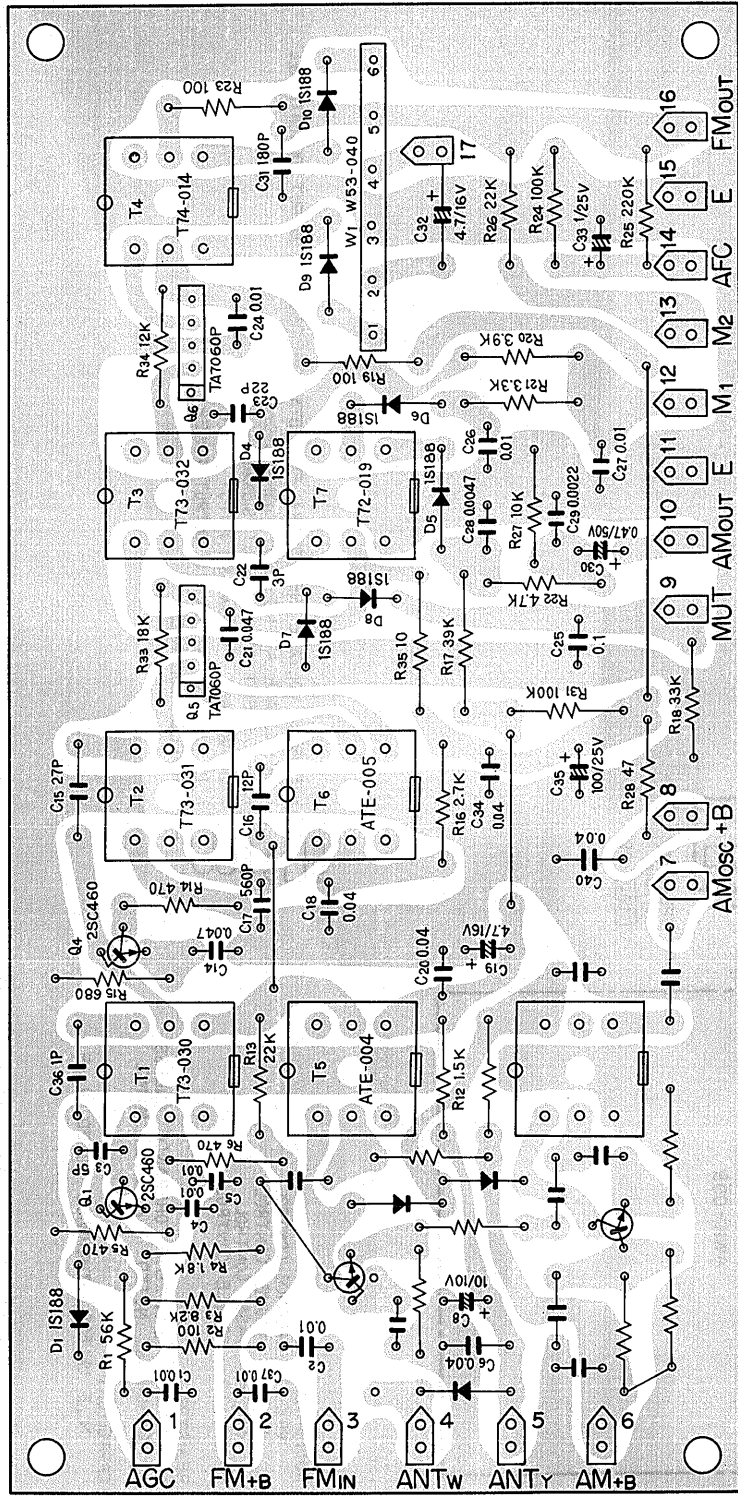


AF amp ass'y AWK-009

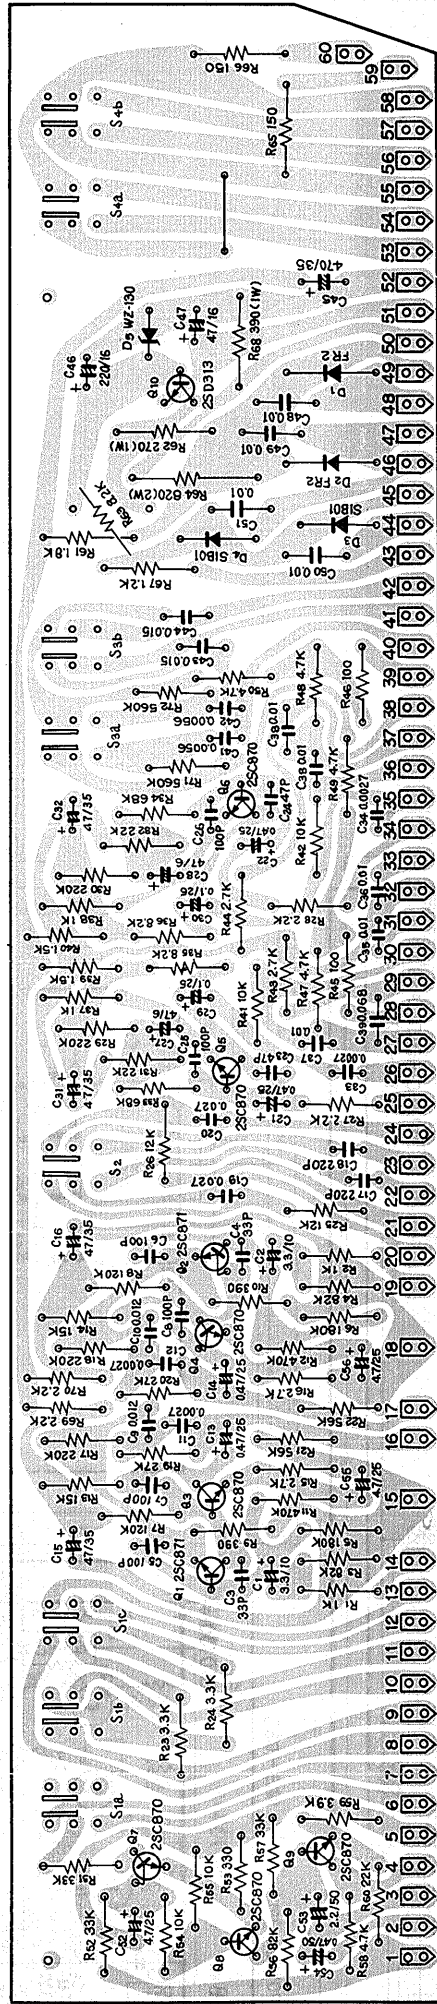



Power amp ass'y W15-055

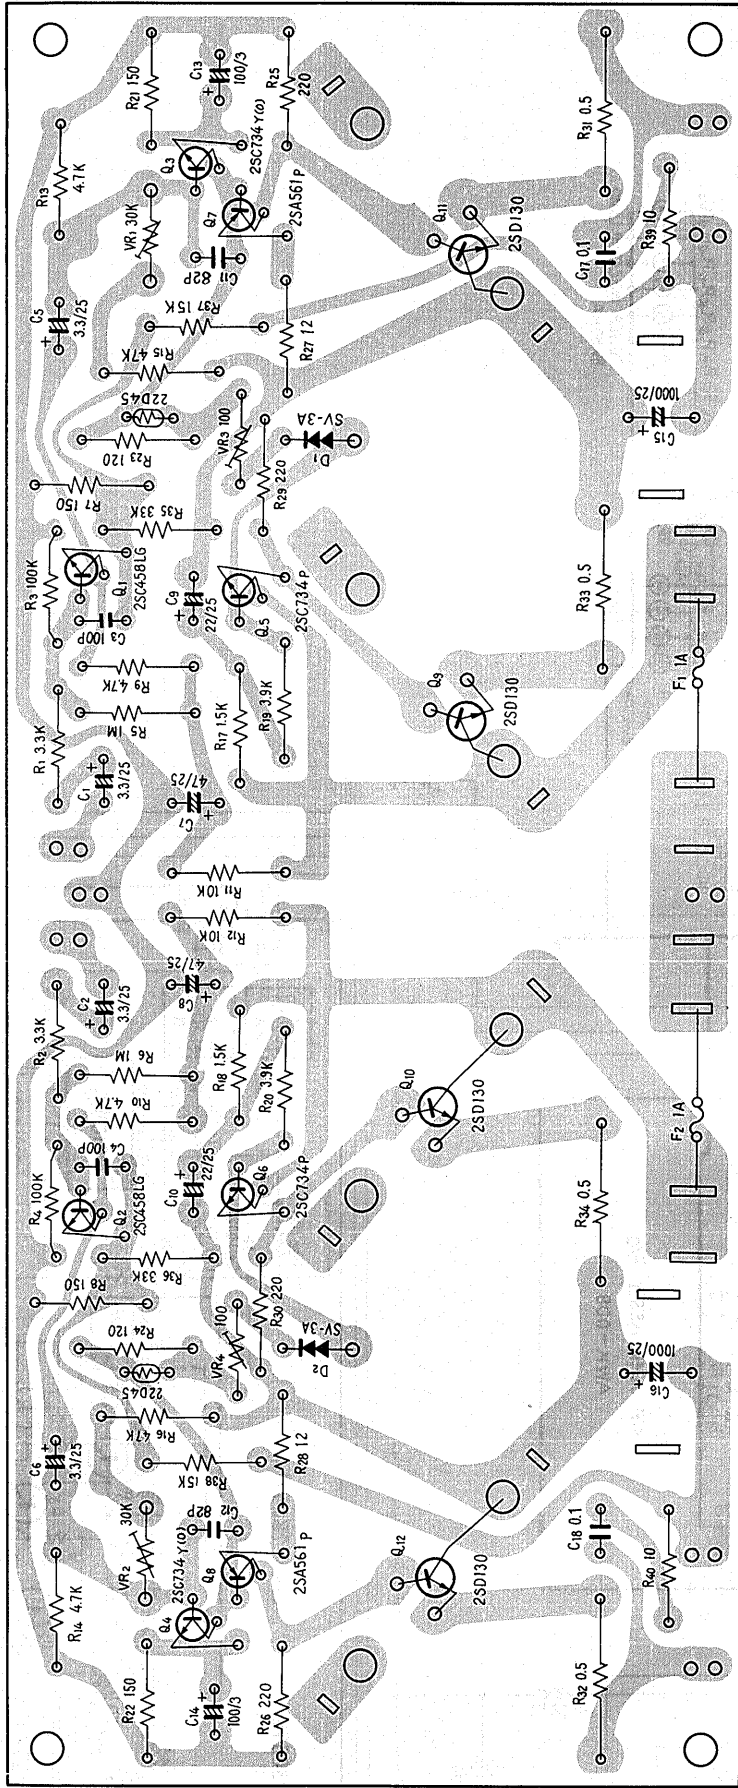

Switching circuit ass'y AWX-031

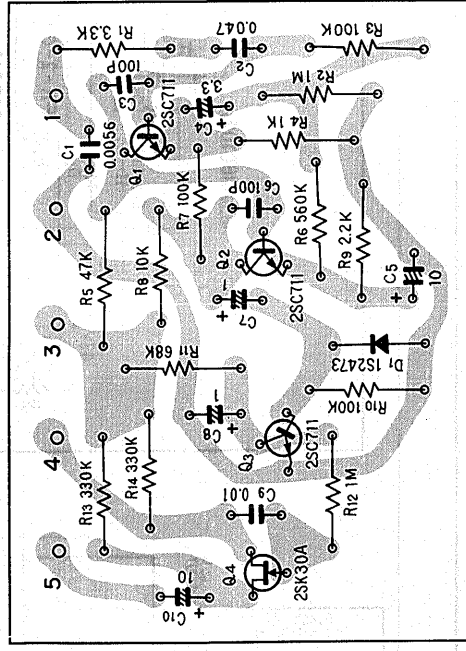


MPX circuit ass'y W13-026

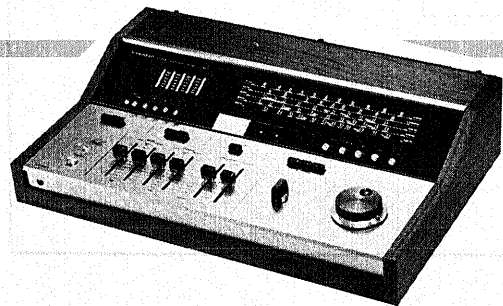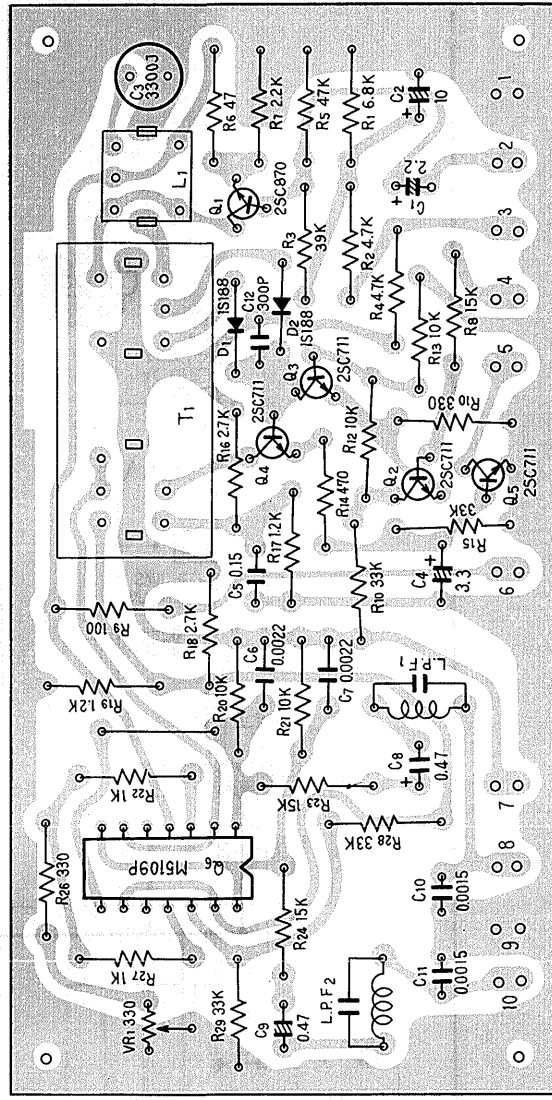

SW/MW/FM STEREO RECEIVER

KX-505

FSAW

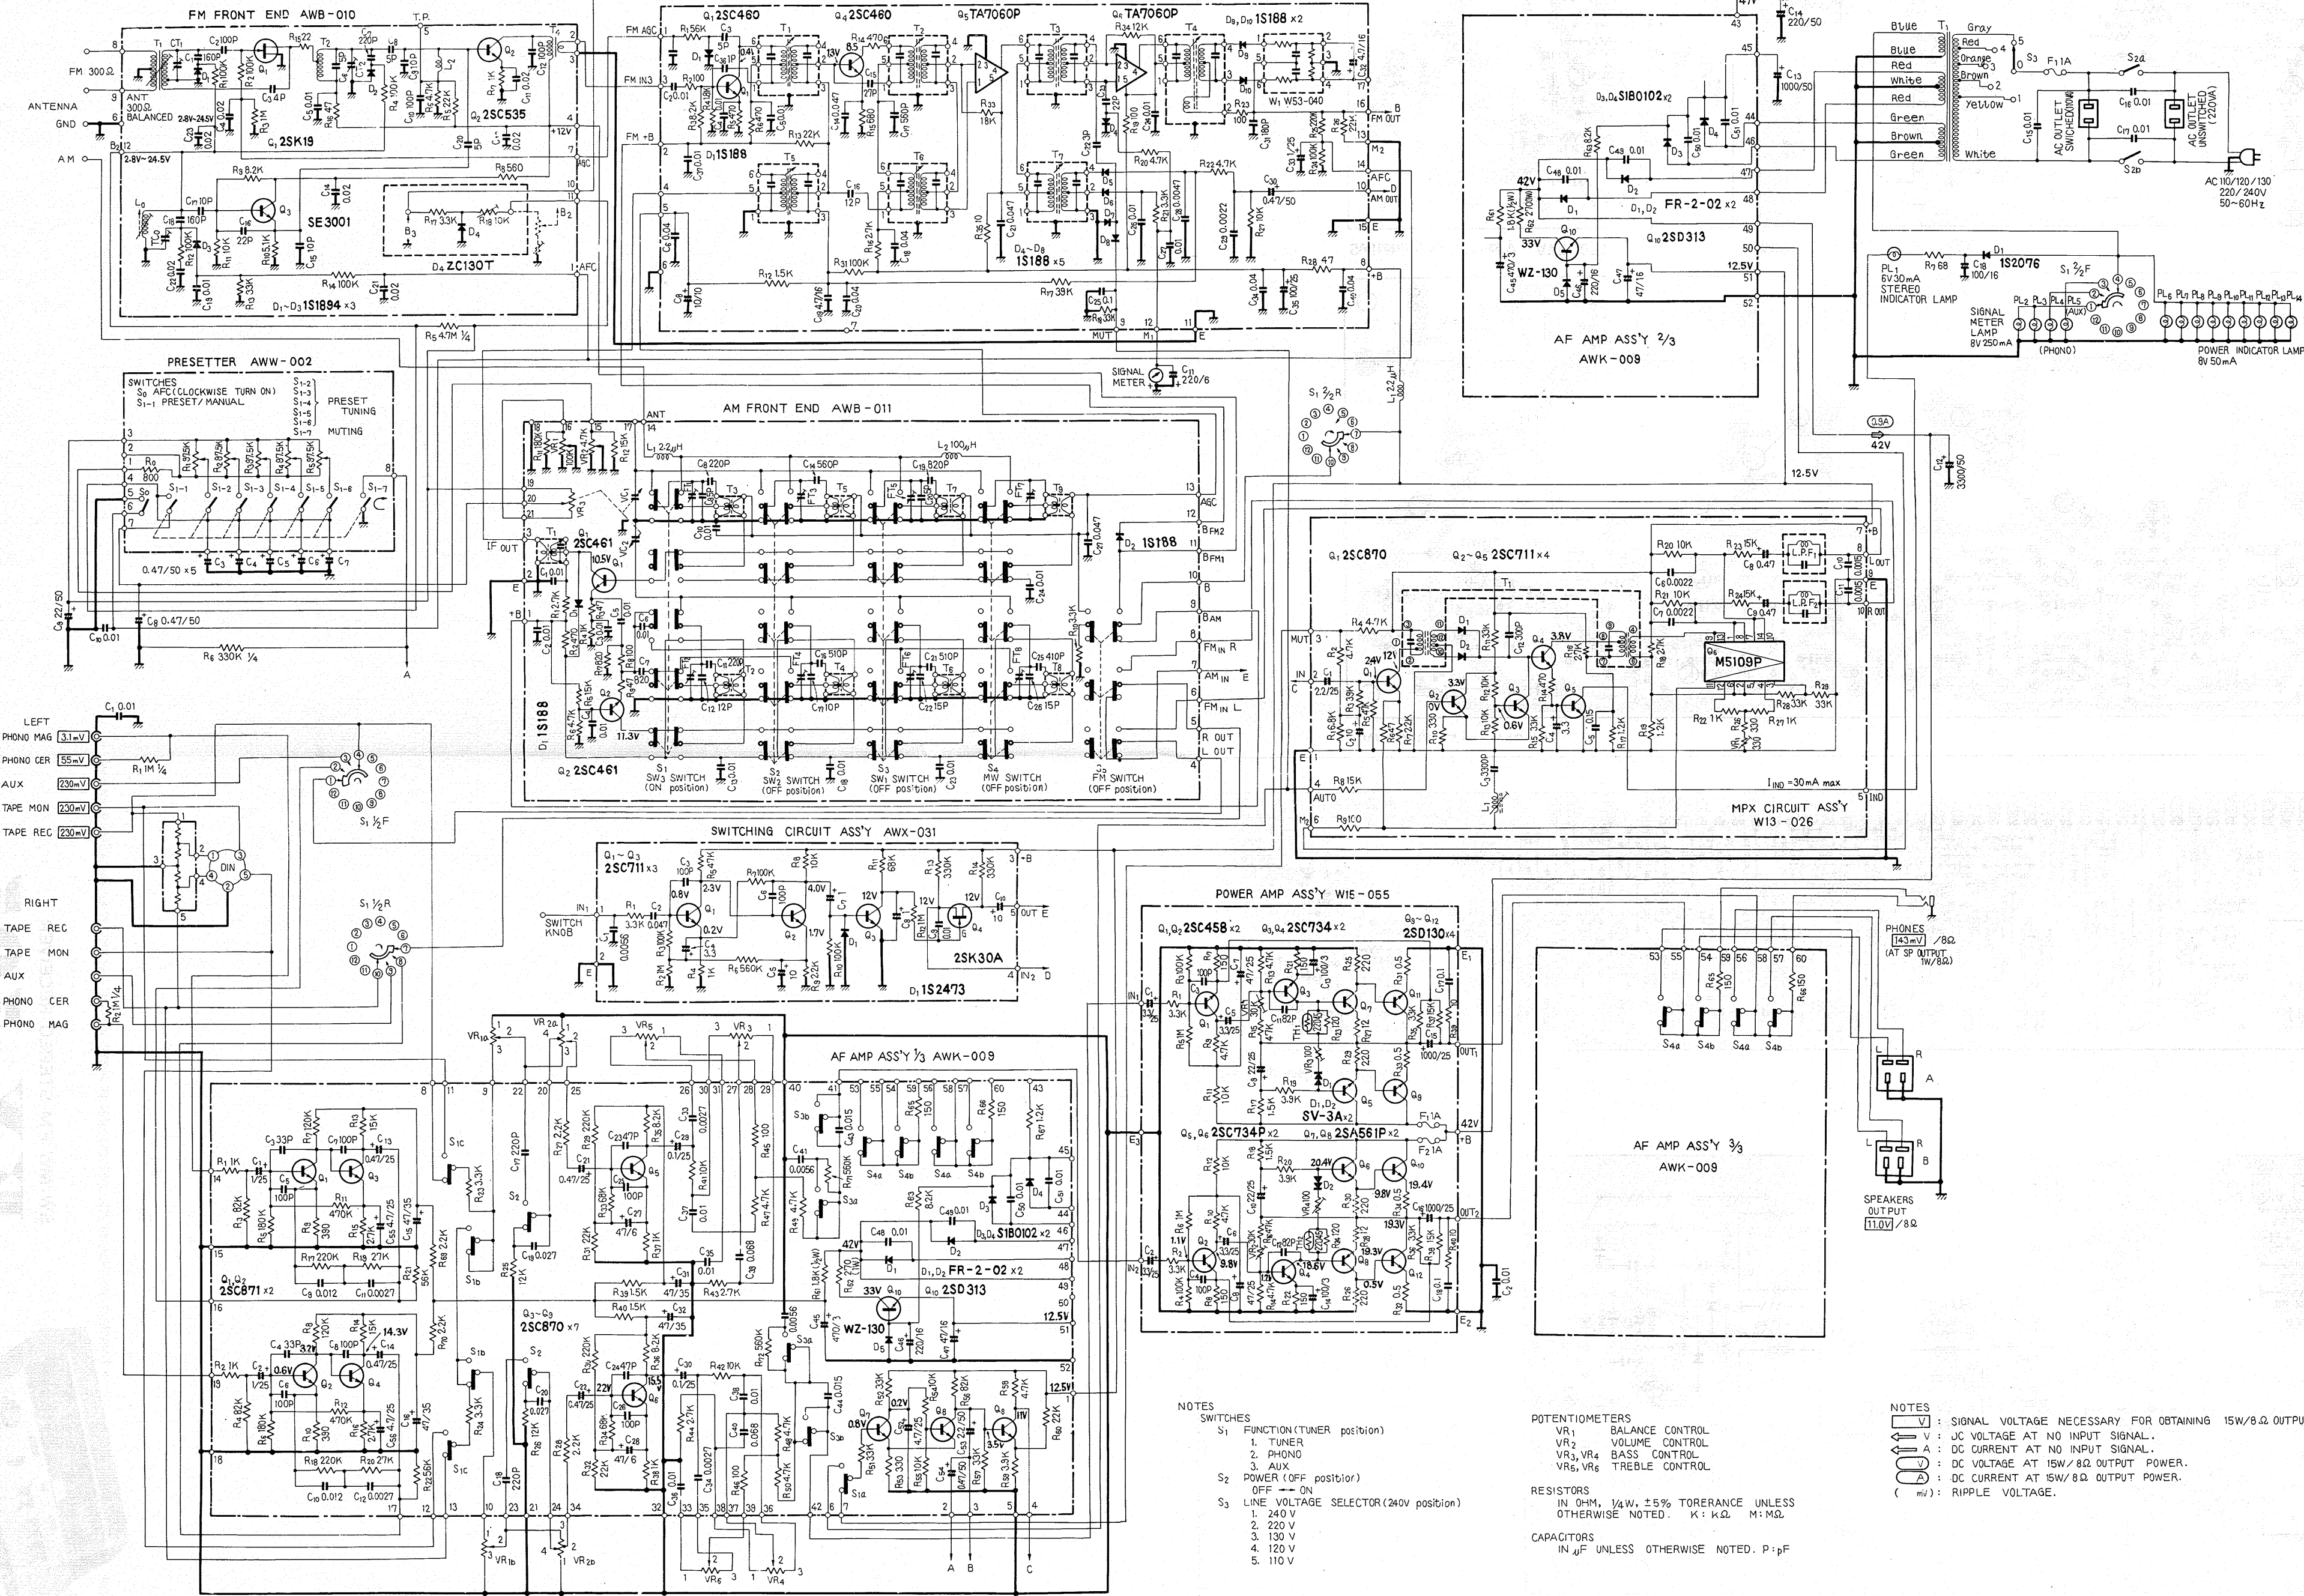

NOTES
SWITCHES
S1 FUNCTION (TUNER position)
1. TUNER
2. PHONO
3. AUX
S2 POWER (OFF position)
OFF - ON
S3 LINE VOLTAGE SELECTOR (240V position)
1. 240 V
2. 220 V
3. 120 V
4. 110 V

POTENTIOMETERS
VR1 BALANCE CONTROL
VR2 VOLUME CONTROL
VR3, VR4 BASS CONTROL
VR5, VR6 TREBLE CONTROL
RESISTORS
IN OHM, 1/4W, ±5% TOLERANCE UNLESS
OTHERWISE NOTED. K: KΩ M: MΩ
CAPACITORS
IN μF UNLESS OTHERWISE NOTED. P: pF

NOTES
V: SIGNAL VOLTAGE NECESSARY FOR OBTAINING 15W/8Ω OUTPUT POWER (1KHz).
V: JC VOLTAGE AT NO INPUT SIGNAL.
A: DC CURRENT AT NO INPUT SIGNAL.
V: DC VOLTAGE AT 15W/8Ω OUTPUT POWER.
A: DC CURRENT AT 15W/8Ω OUTPUT POWER.
(mV): RIPPLE VOLTAGE.