


STEREO AMPLIFIER

SA-700

UNIT \ ROUND LABEL	FA	FV	KL			
TUNER UNIT						
FM FRONT END						
FM IF UNIT						
MPX UNIT						
AM TUNER UNIT						
MUTING UNIT						
HEAD AMP UNIT	W15-049	W15-049	W15-049			
CONTROL AMP UNIT	W15-050	W15-050	W15-050			
MAIN AMP UNIT	W15-060	W15-060	W15-060			
POWER SUPPLY UNIT	W16-018	W16-018	W16-018			
SWITCH UNIT	W15-070	W15-070	W15-070			
SWITCH UNIT	W15-083	W15-083	W15-083			
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						
MC AMP UNIT	W15-068	W15-068	W15-068			

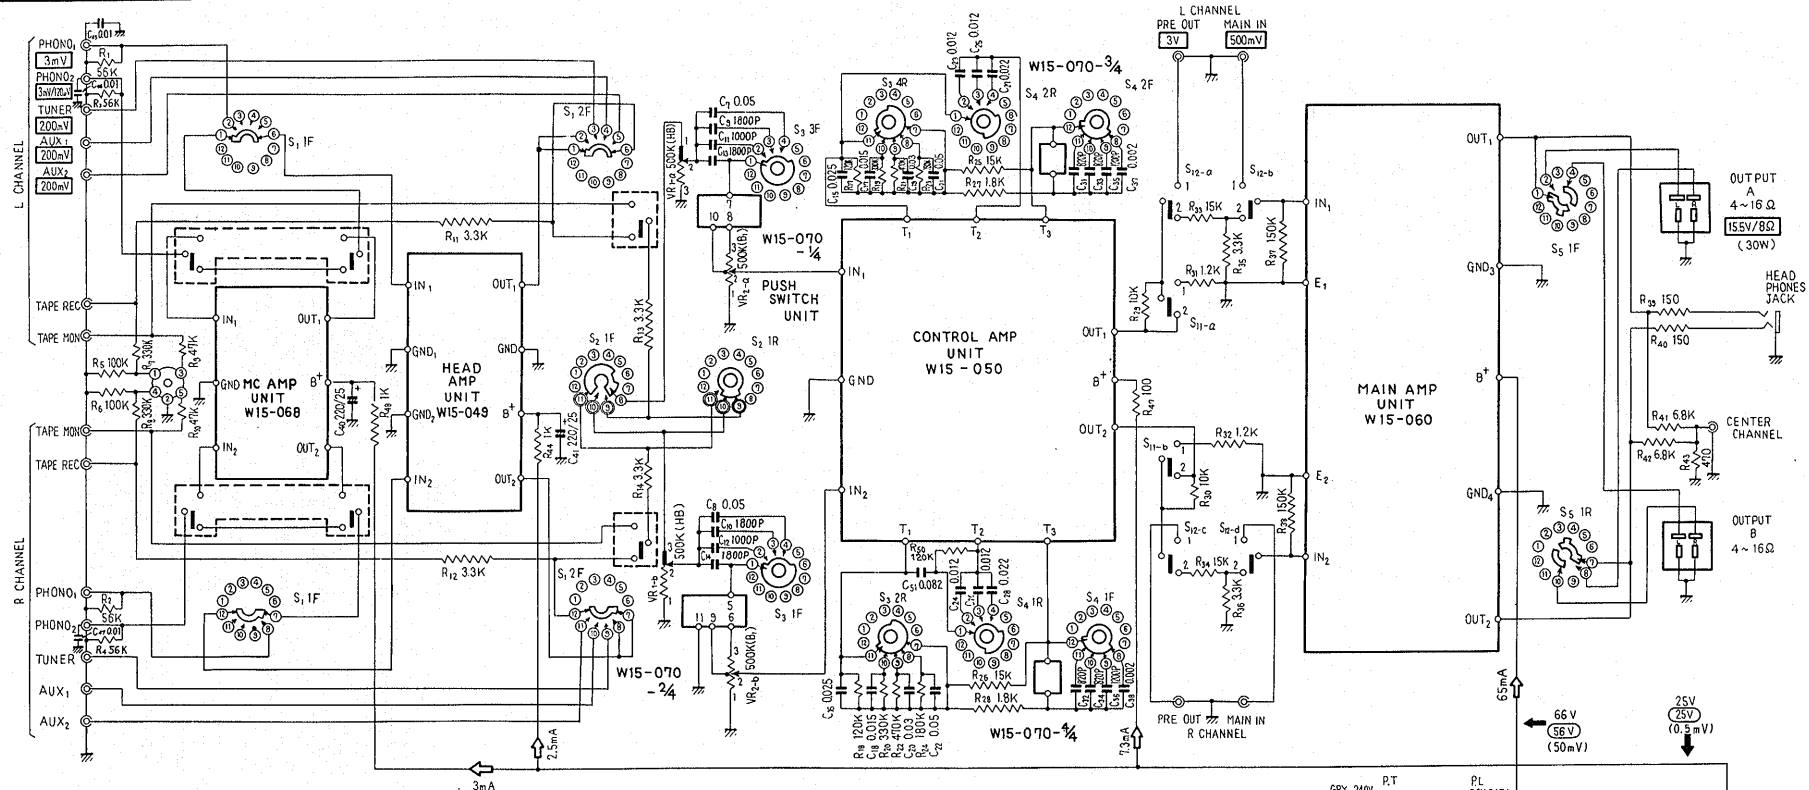



SWITCHES

S₁ INPUT SELECTOR

- (1) PHONO 2
- (2) PHONO 1
- (3) TUNER
- (4) AUX 1
- (5) AUX 2

S₂ MODE

- (1) STEREO REV
- (2) STEREO NORM
- (3) MONO L
- (4) MONO R
- (5) MONO L+R

S₃ BASS CONTROL

-9dB ~ +12dB (at 100Hz)

S₄ TREBLE CONTROL

-12dB ~ +9dB (at 10KHz)

S₅ OUTPUT SELECTOR

- (1) POWER OFF
- (2) A
- (3) SPKR'S OFF
- (4) B
- (5) A+B

S₁₁ MUTING

① -20dB ② 0dB

S₁₂ PRE & MAIN ① SEP. ② INTER-COUPL.

⊂ INCLUDED IN W15-070 (PUSH SWITCH UNIT)

POTENTIOMETERS

VR₁ BALANCE CONTROLVR₂ VOLUME CONTROL

RESISTORS

NON MARK: OHM, K: KILOHM, M: MEGOHM

CAPACITORS

NON MARK: μF
P: μμF

⇒ NO INPUT SIGNAL

→ DC CURRENT


→ DC VOLTAGE

V: NO SIGNAL INPUT


⊂ AT 30W/8Ω ONE CHANNEL
OUTPUT

⊂ SIGNAL VOLTAGE AT 30W/8Ω (1KHz)

ITEM NO.	VACANT
R ₁ ~ R ₄₈	R ₁₅ , 16, 45, 46
C ₁ ~ C ₄₄	C ₁₆ ~ 29, 30


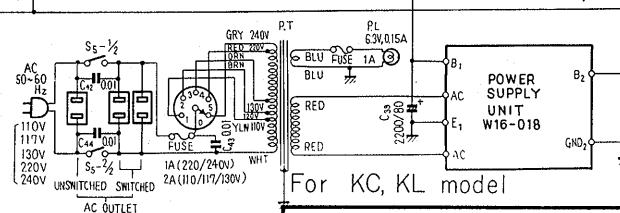


For KC, KL model

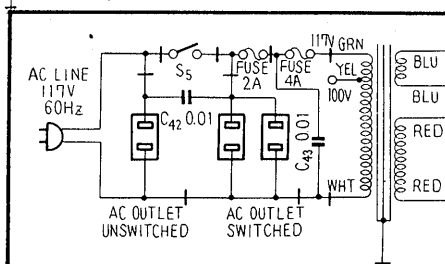


HEAD AMP UNIT

CONTROL AMP UNIT

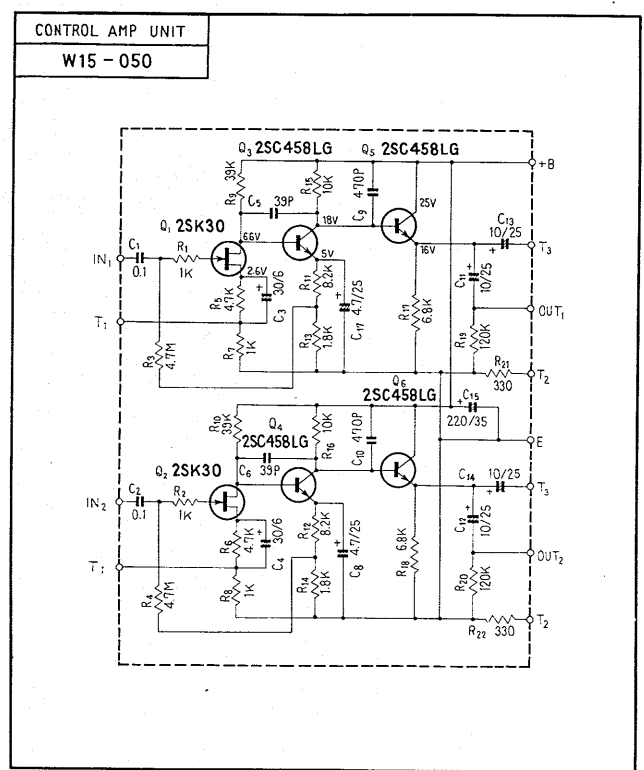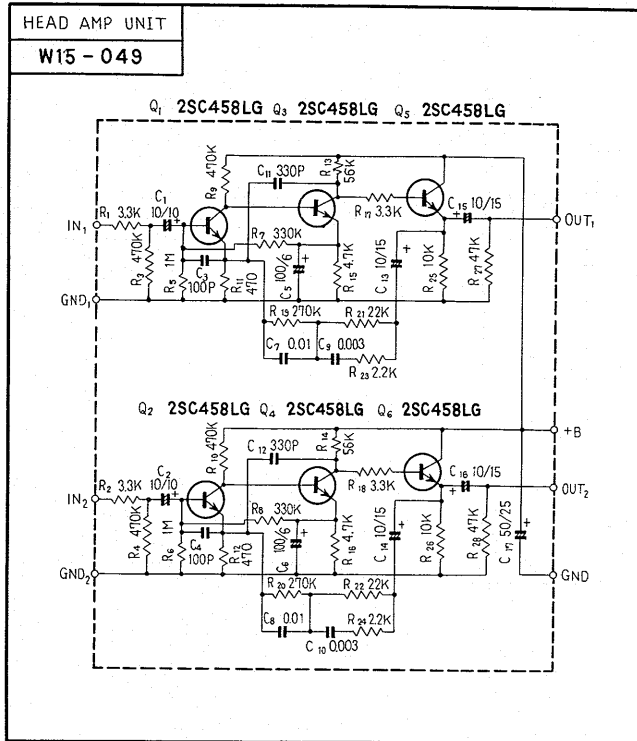


MAIN AMP UNIT

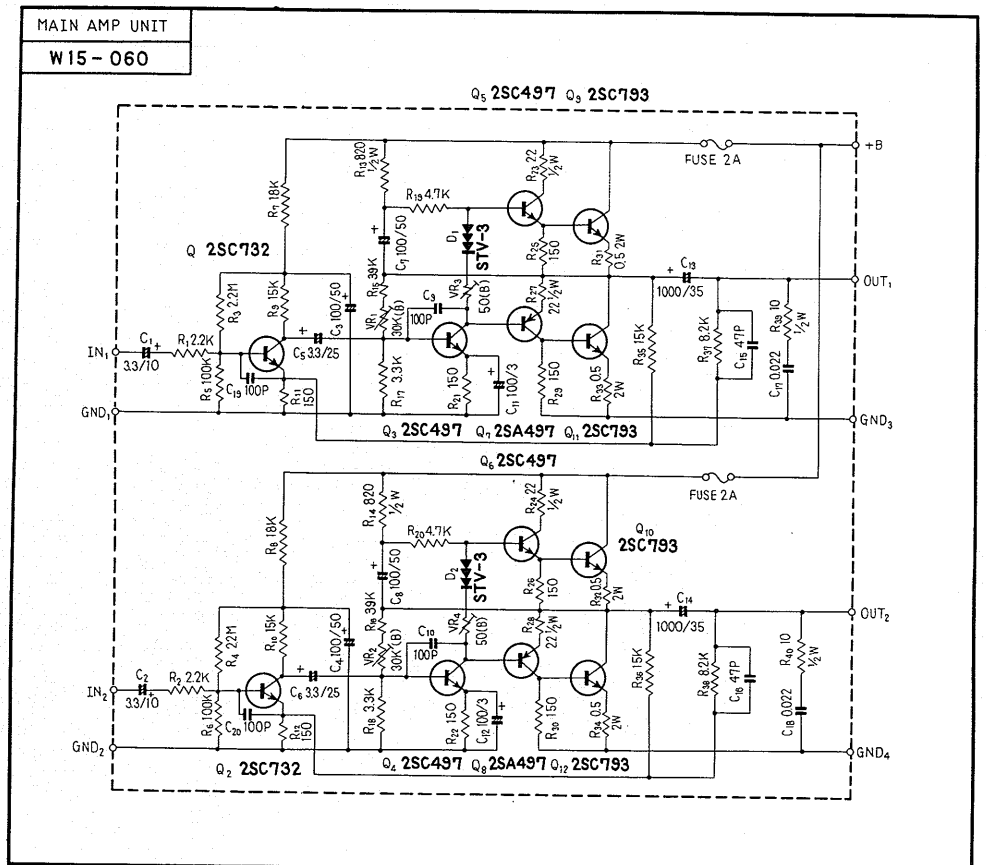

POWER SUPPLY UNIT

POWER SUPPLY UNIT


W16 - 018

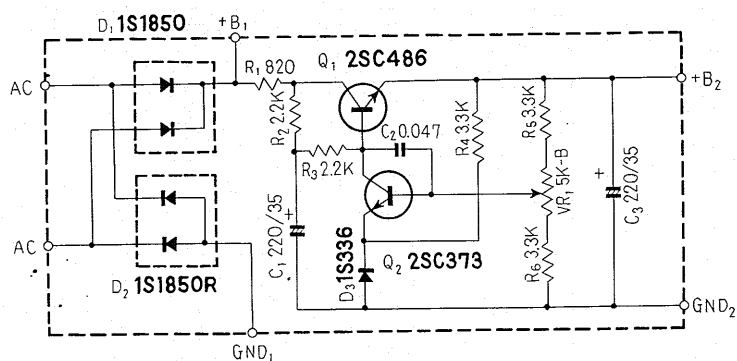

MC AMP UNIT

MC AMP UNIT

W15 - 068

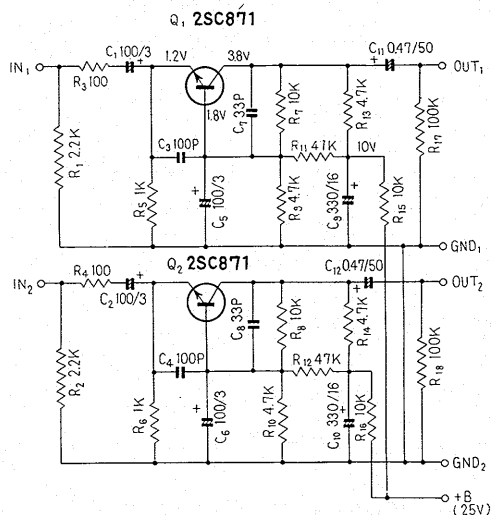

PUSH SWITCH UNIT

PUSH SWITCH UNIT

W15-070

