



- | | | | | | |
|----------------|----------|----------------|----------|----------------|------------|
| S ₁ | 1. HI FI | S ₂ | 1. TAPE | S ₃ | 1. AC OFF |
| (AND) | 2. SOFT | INPUT | 2. PHONO | MODE | 2. STEREO |
| SELECTOR | 3. SW | SELECTOR | 3. RADIO | SELECTOR | 3. MONO |
| | 4. FM | | 4. AUX | | 4. CHANNEL |
| | 5. AFC | | | | |