


AM/FM STEREO RECEIVER

SX-440

ROUND LABEL UNIT	KCLW	FVW	FVZW	NBW		
TUNER UNIT	W35-027	W35-027	AWE-004	W35-022		
FM FRONT END						
FM IF UNIT						
MPX UNIT						
AM TUNER UNIT						
MUTING UNIT						
AUDIO UNIT	W15-073	W15-073	W15-073	W36-011		
CONTROL AMP UNIT						
MAIN AMP UNIT						
POWER SUPPLY UNIT	W16-021	W16-021	W16-021	W16-063		
SWITCH UNIT						
SWITCH UNIT						
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						



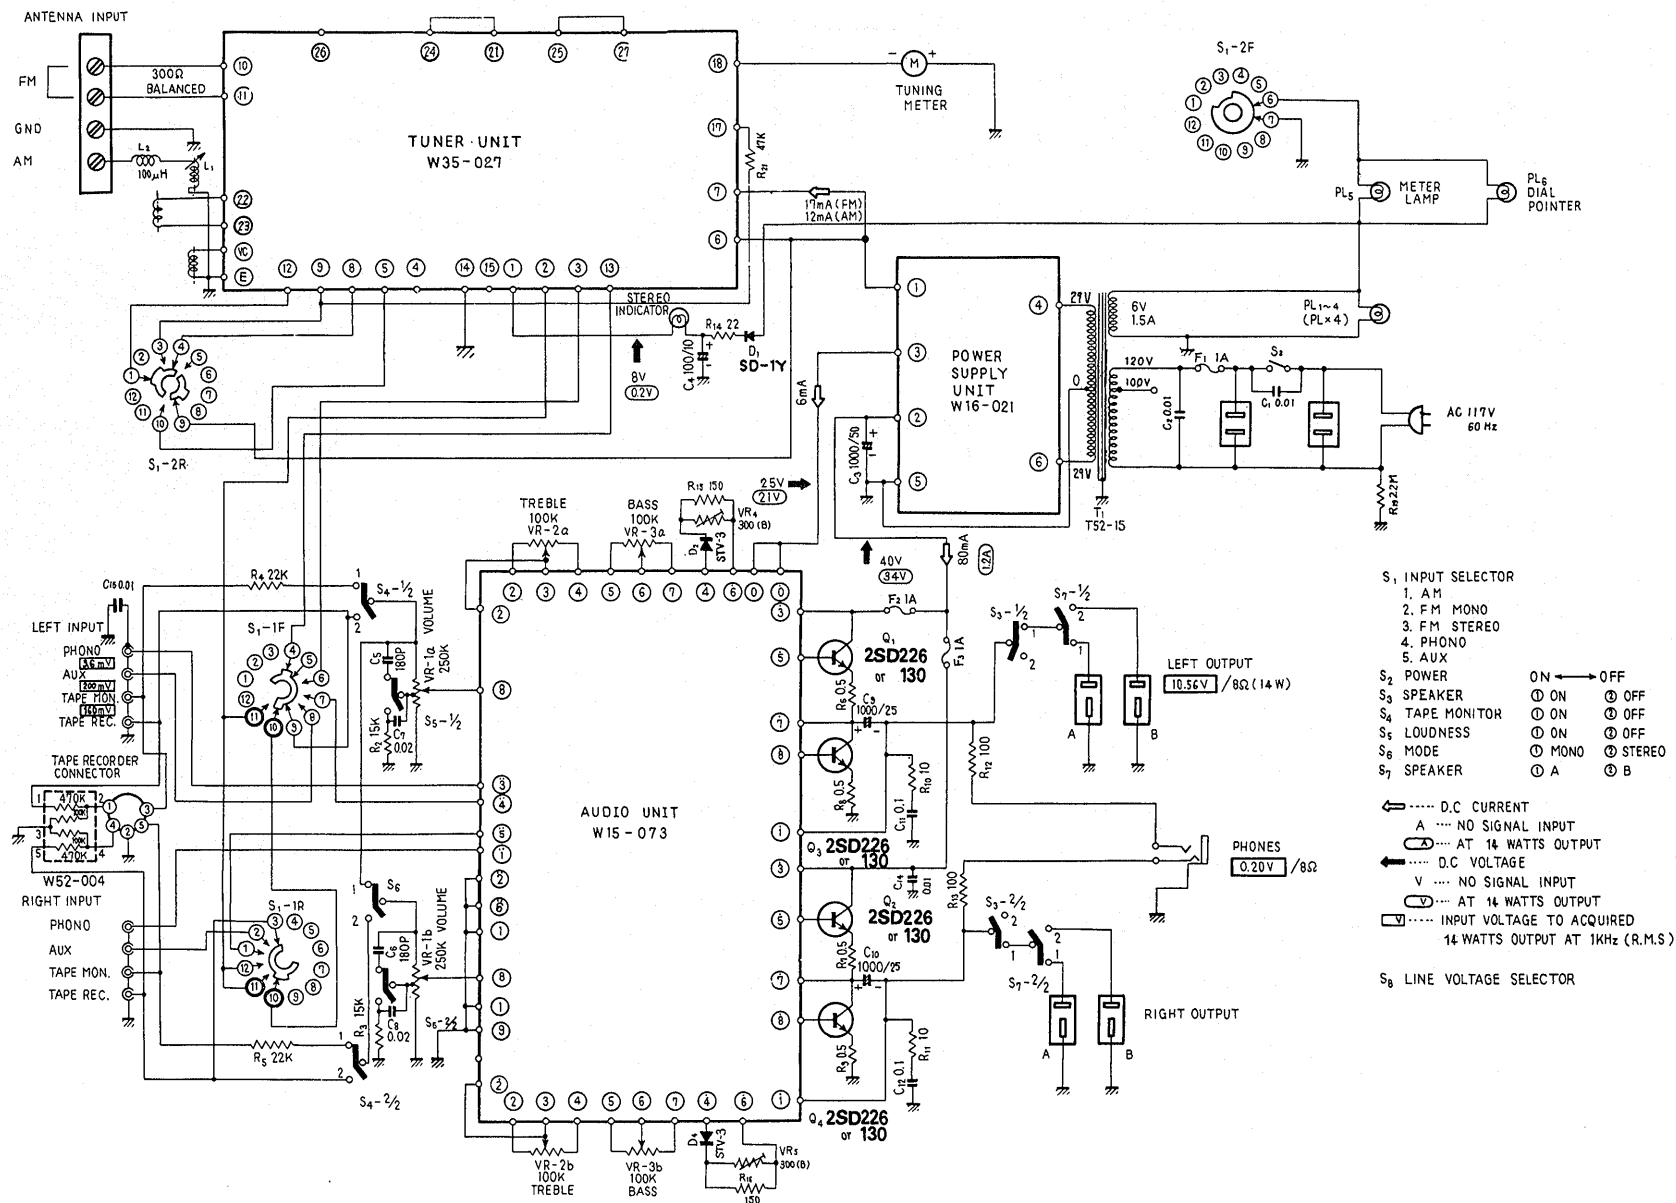

S₁ INPUT SELECTOR

- 1. AM
- 2. FM MONO
- 3. FM STEREO
- 4. PHONO
- 5. AUX

S₂ POWER

- ON → OFF

S₃ SPEAKER

- ① ON ③ OFF

S₄ TAPE MONITOR

- ① ON ③ OFF

S₅ LOUDNESS

- ① ON ③ OFF

S₆ MODE

- ① MONO ③ STEREO

S₇ SPEAKER

- ① A ③ B

S₈ LINE VOLTAGE SELECTOR

- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

S₉ INPUT VOLTAGE TO ACQUIRED

- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

S₁₀ INPUT VOLTAGE TO ACQUIRED

- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

S₁₁ INPUT VOLTAGE TO ACQUIRED

- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

S₁₂ INPUT VOLTAGE TO ACQUIRED

- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

S₁₃ INPUT VOLTAGE TO ACQUIRED


- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT


S₁₄ INPUT VOLTAGE TO ACQUIRED


- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT


S₁₅ INPUT VOLTAGE TO ACQUIRED


- ① NO SIGNAL INPUT
- ② AT 14 WATTS OUTPUT

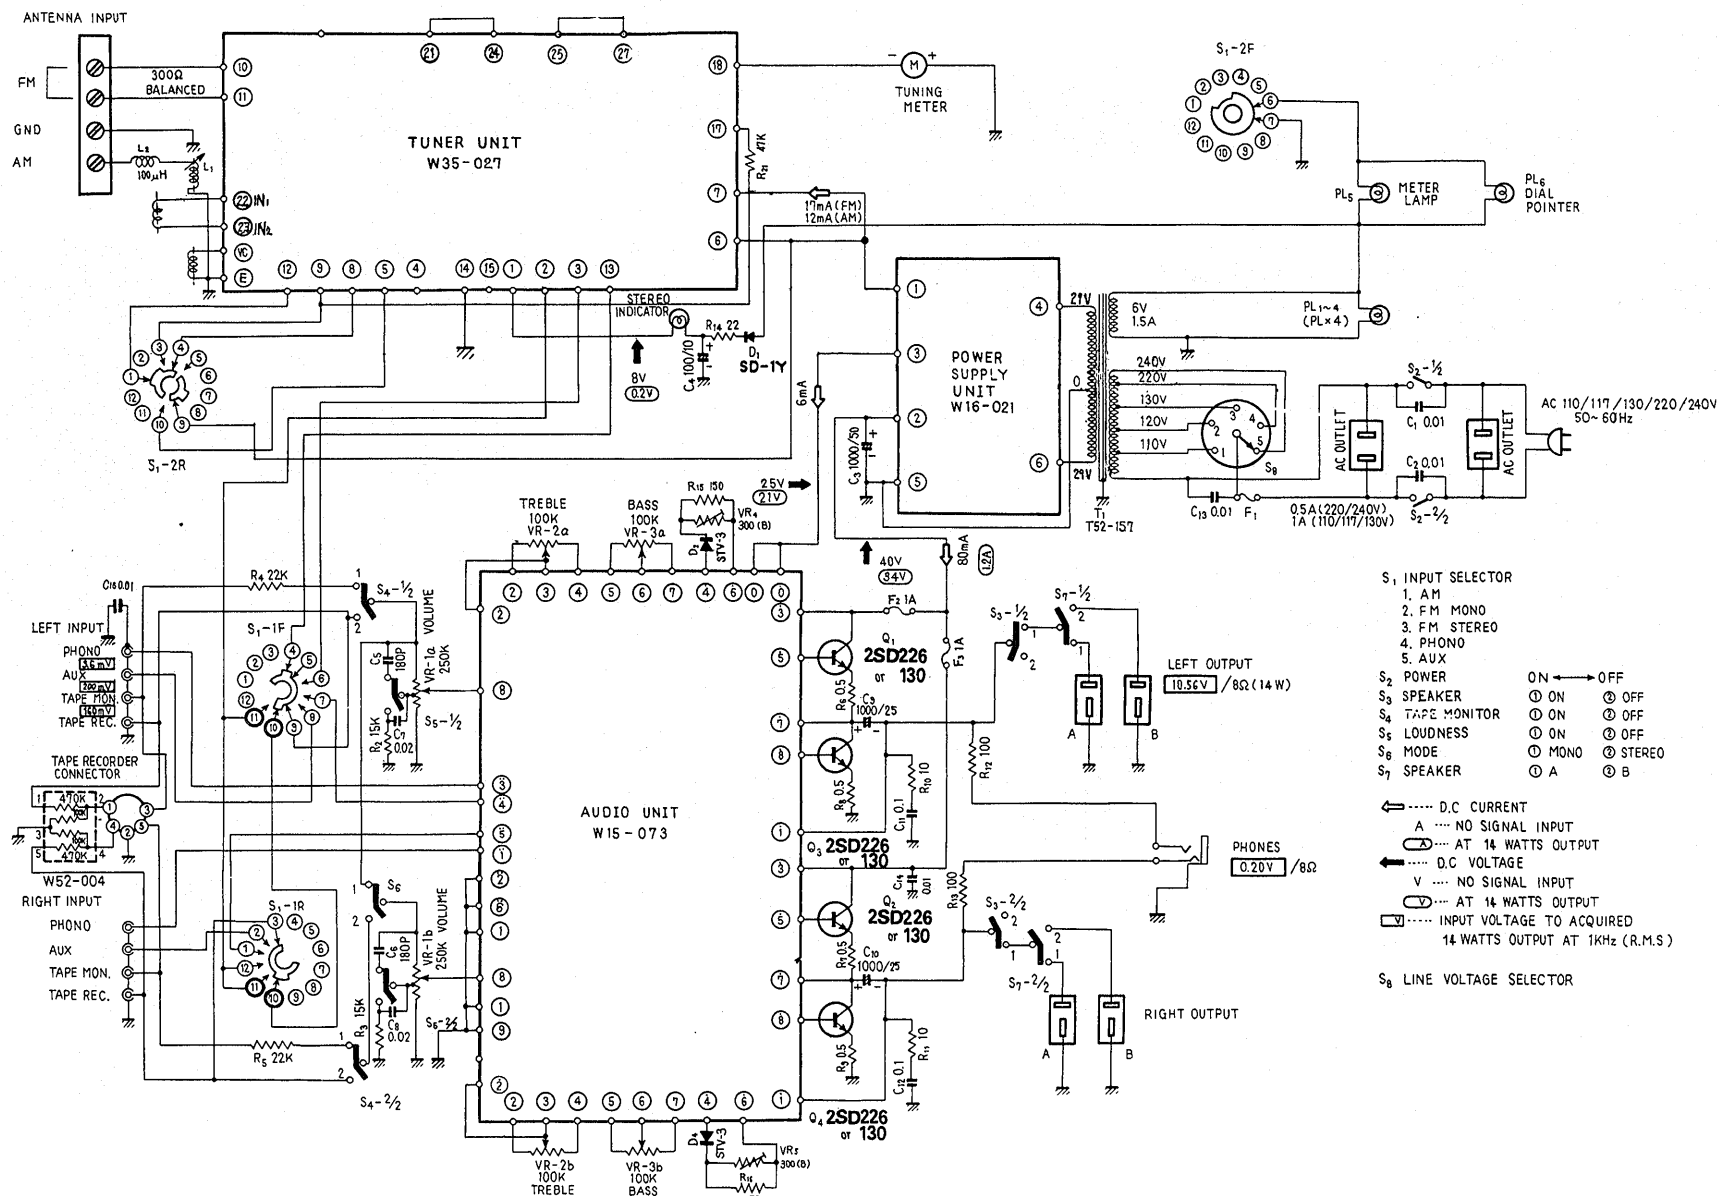


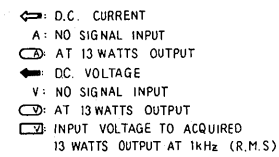

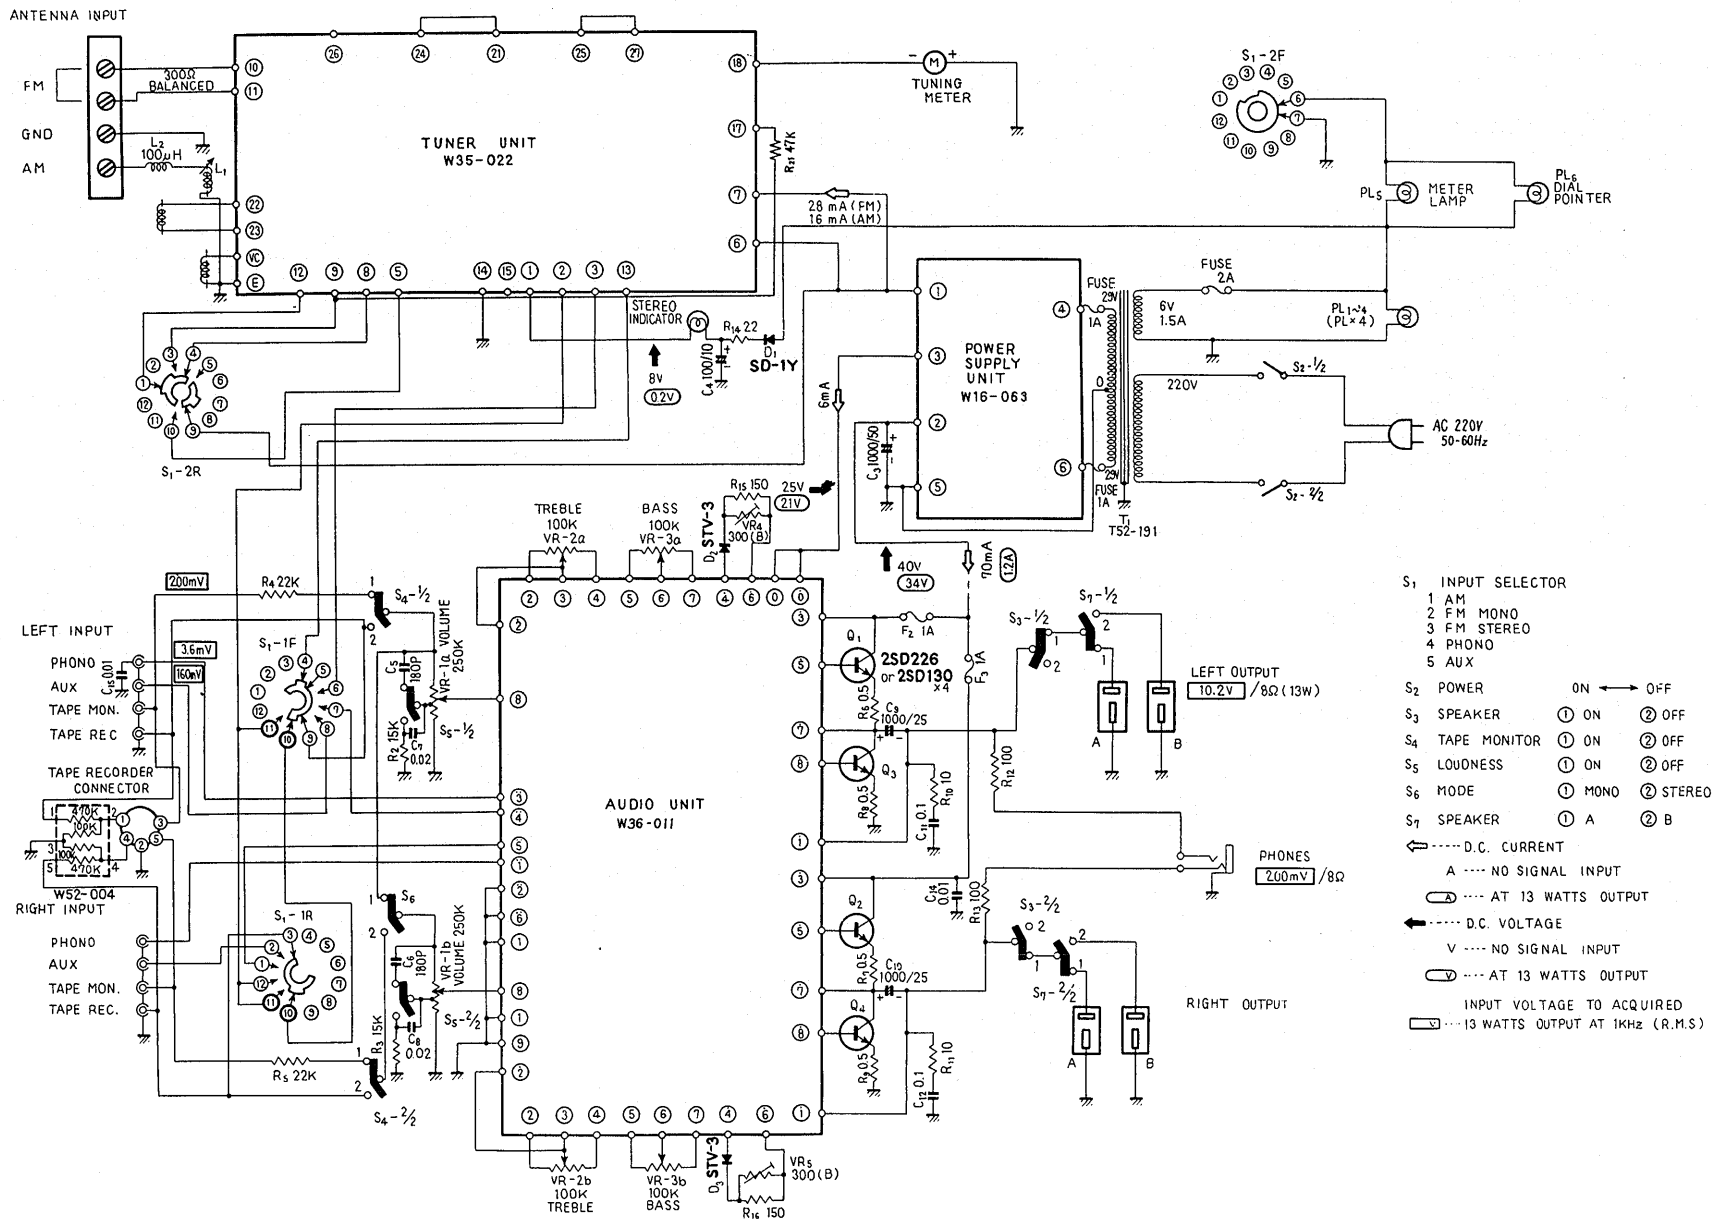

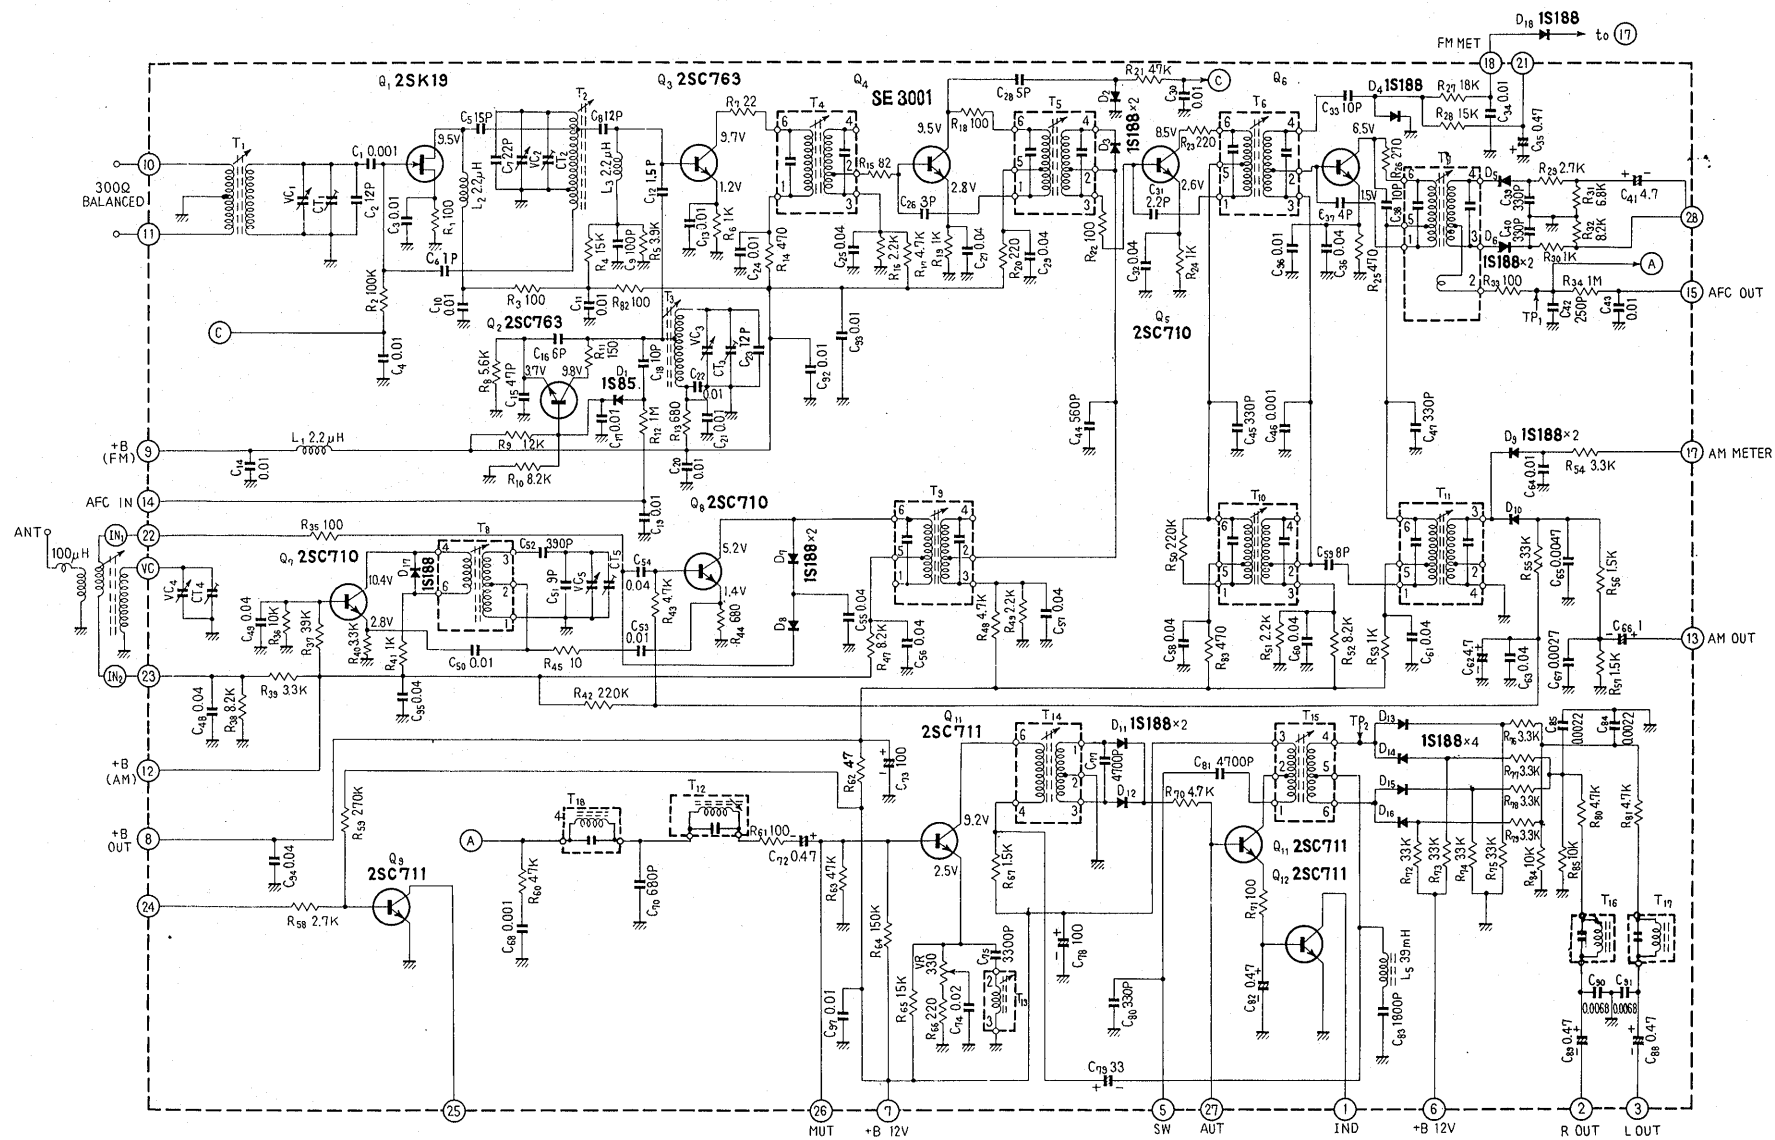

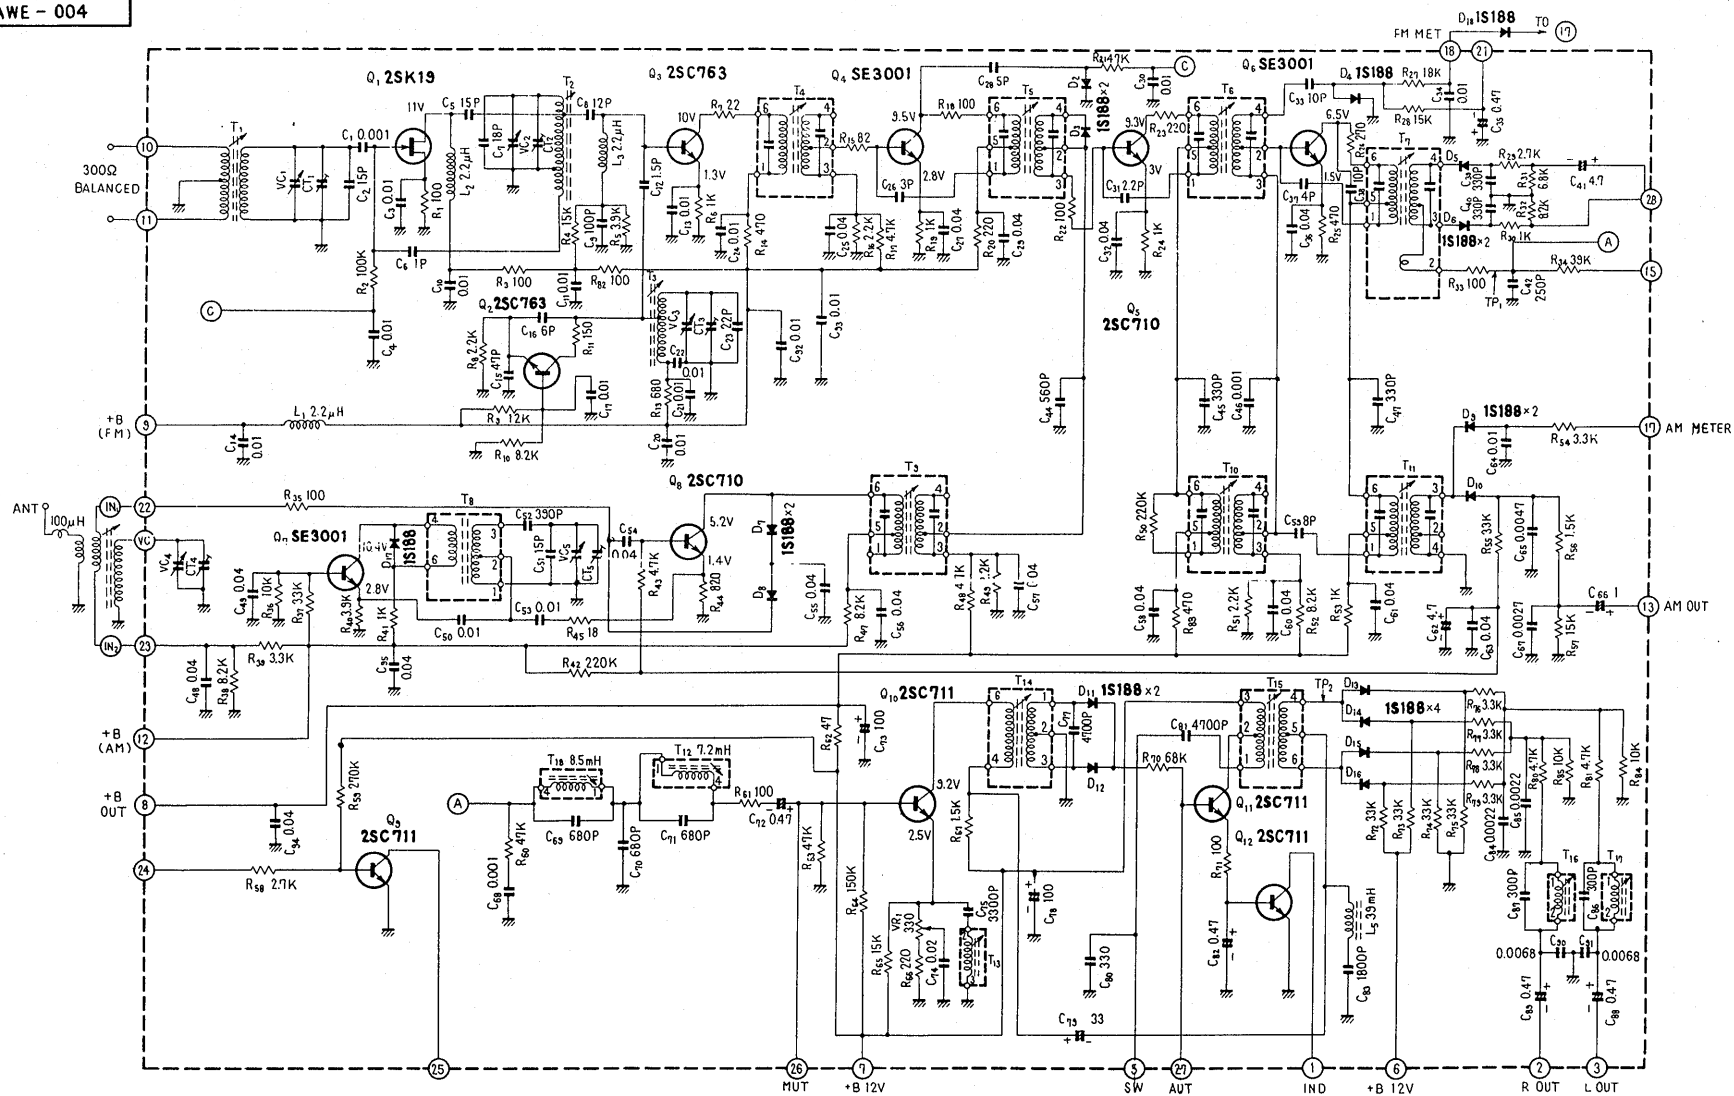


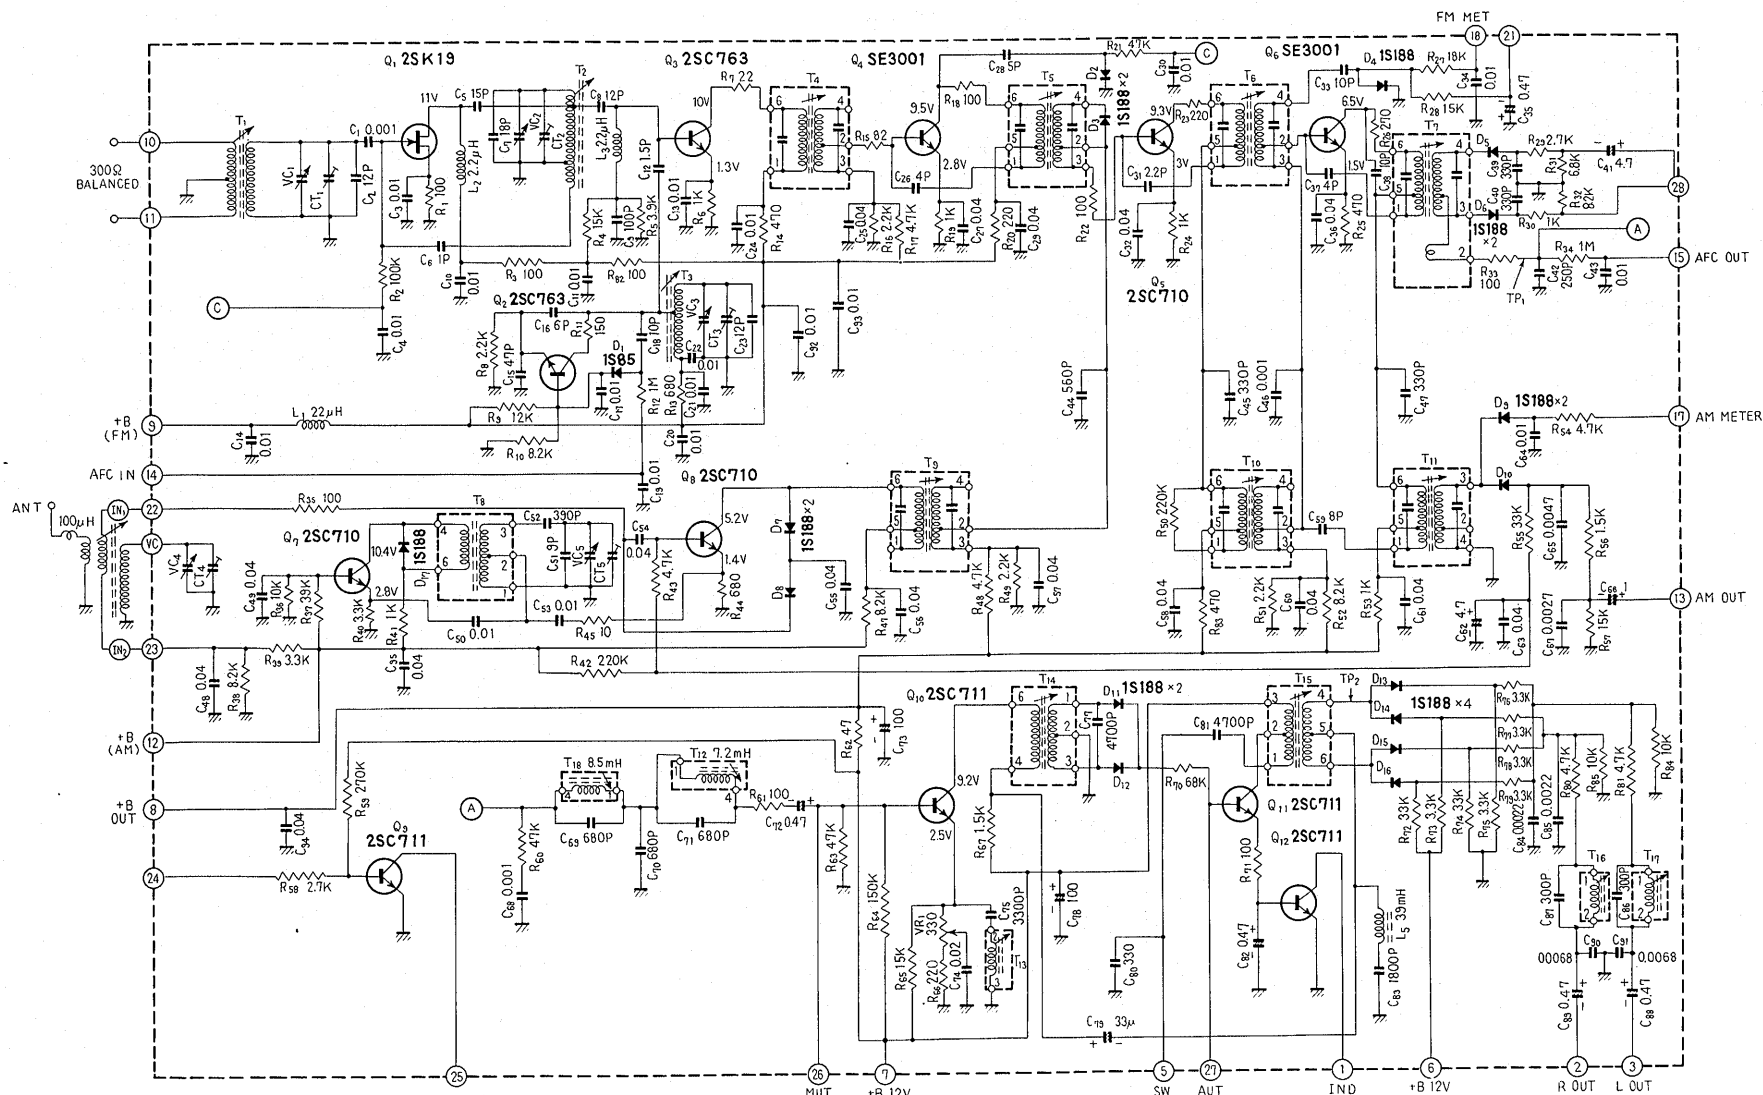

AUDIO UNIT

AUDIO UNIT

W15-073

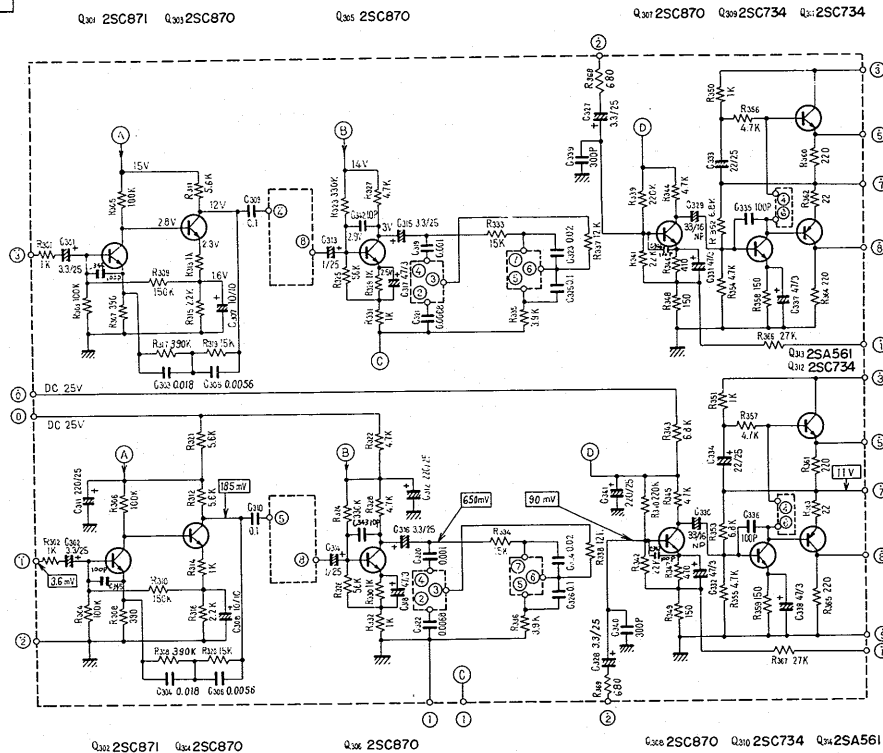

AUDIO UNIT for FBW model

AUDIO UNIT

W36-011

