


AM/FM STEREO RECEIVER

SX-6000

UNIT	FW	ROUND LABEL				
FM FRONT END	W11-028					
FM IF UNIT	W12-032					
MPX UNIT	W13-026					
AM TUNER UNIT	W14-015					
MUTING UNIT	W18-026					
HEAD AMP UNIT	W21-004					
CONTROL AMP UNIT	W15-079					
MAIN AMP UNIT	W23-002					
POWER SUPPLY UNIT	W16-026					
SWITCH UNIT	AWS-007					
SWITCH UNIT						
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT	AWG-006					
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						

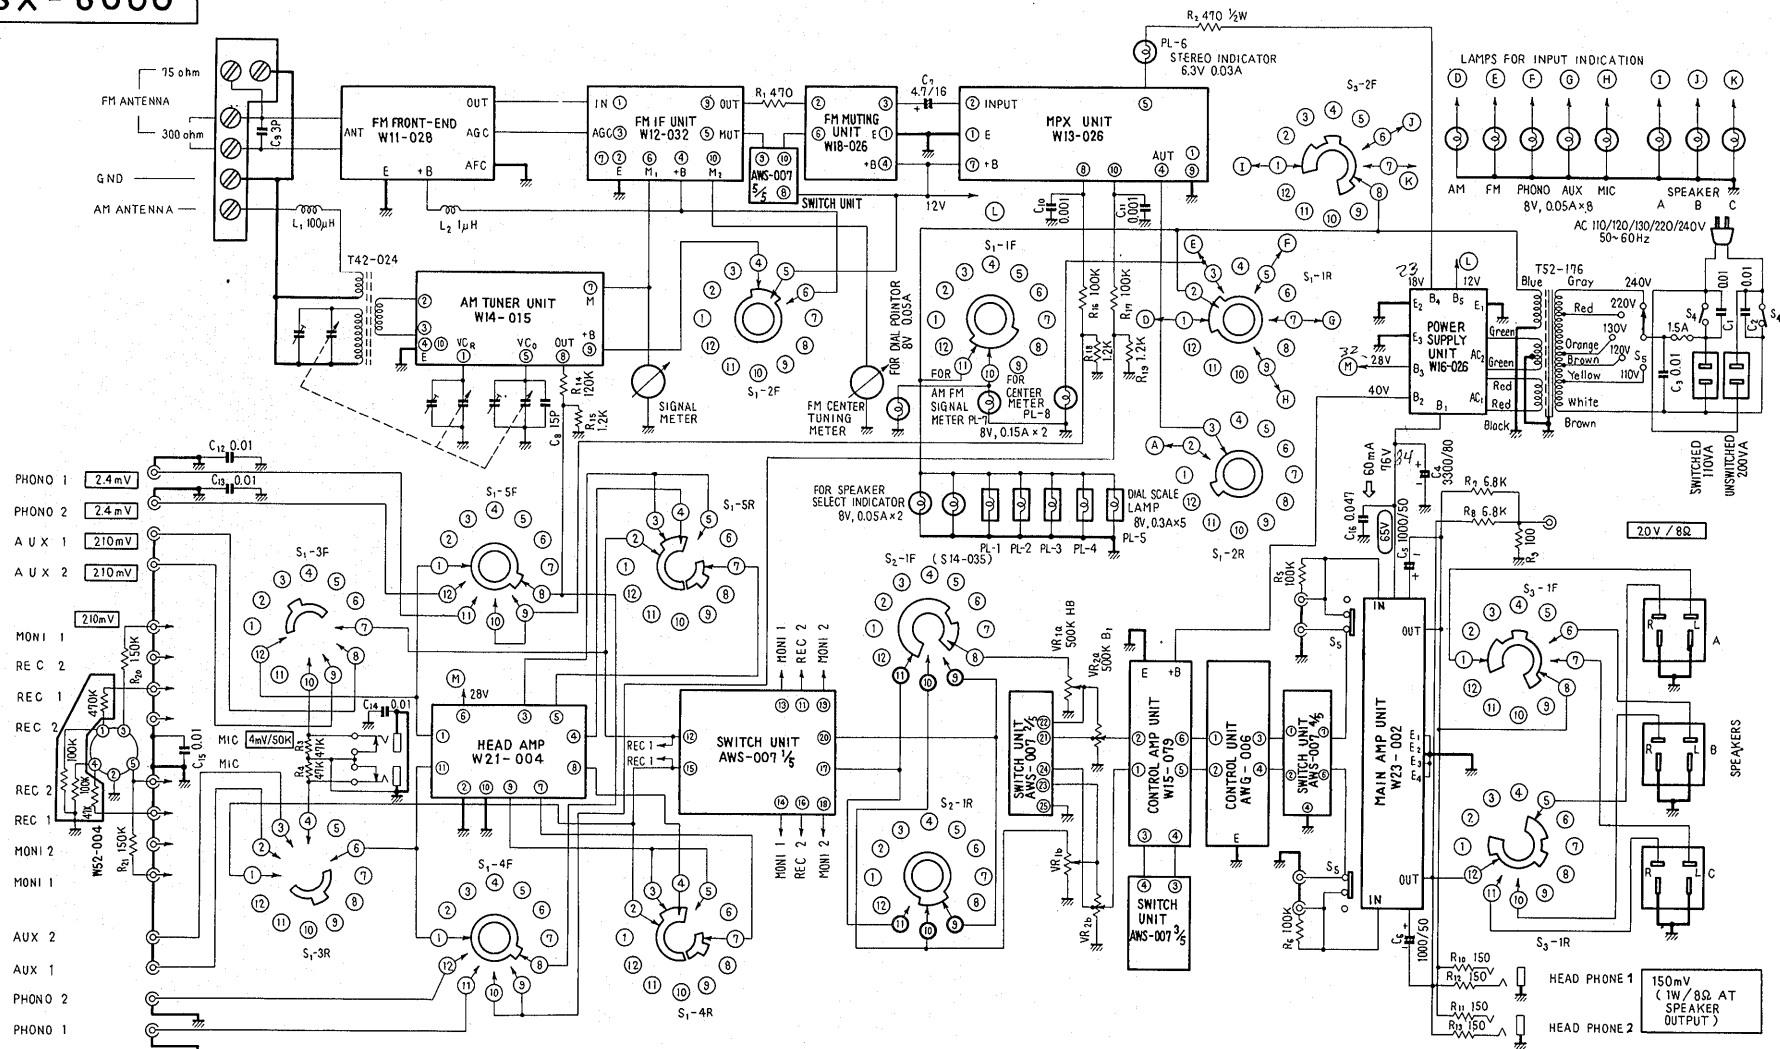



S₁ INPUT SELECTOR

- 1) AM
- 2) FM MONO
- 3) FM AUTO
- 4) PHONO 1
- 5) PHONO 2
- 6) AUX 1
- 7) AUX 2
- 8) MIC

S₂ MODE SELECTOR

- 1) STEREO REVERSE
- 2) STEREO NORMAL
- 3) MONO L
- 4) MONO R
- 5) MONO L+R

S₃ SPEAKER SELECTOR

- 1) SPEAKER A
- 2) SPEAKER OFF
- 3) SPEAKER B
- 4) SPEAKER C
- 5) SPEAKER A+B
- 6) SPEAKER B+C

S₄ POWER SWITCH

S₅ PRE & MAIN SELECTOR

- 1) INTERCOUPLED
- 2) SEPARATED

S₆ SUPPLY VOLTAGE SELECTOR


- 1) 240V
- 2) 220V
- 3) 130V
- 4) 120V
- 5) 110V

- ⬆ : DC CURRENT AT NO INPUT SIGNAL
 V : DC VOLTAGE AT NO INPUT SIGNAL
 ○ : DC VOLTAGE AT MAXIMUM INPUT SIGNAL
 □ : SIGNAL VOLTAGE AT 20W/8Ω SPEAKER OUTPUT

FM FRONT END

FM FRONT END



W11-028

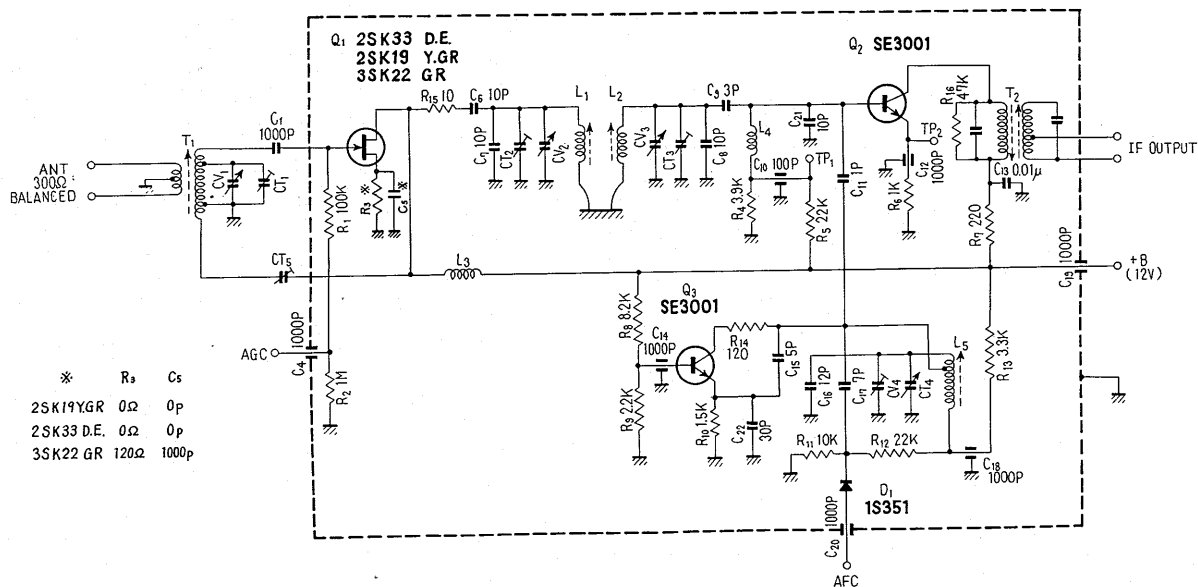


FM IF UNIT

FM IF UNIT


W12-032

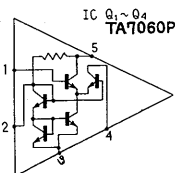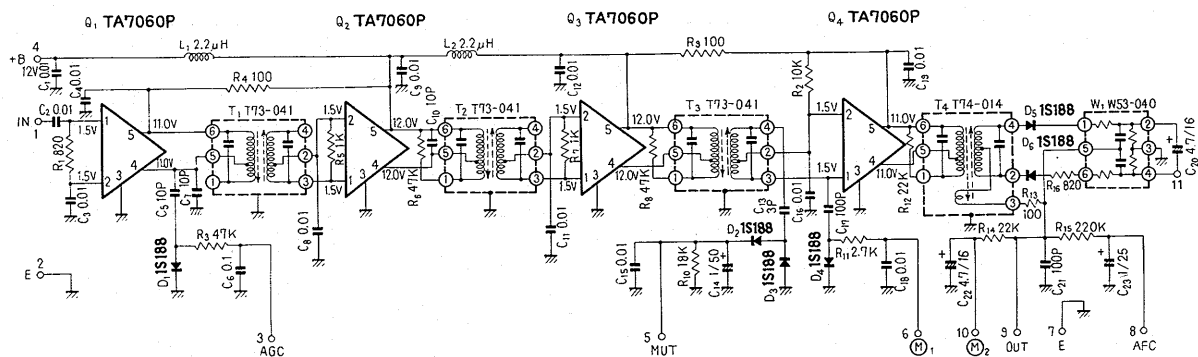


W 13-026

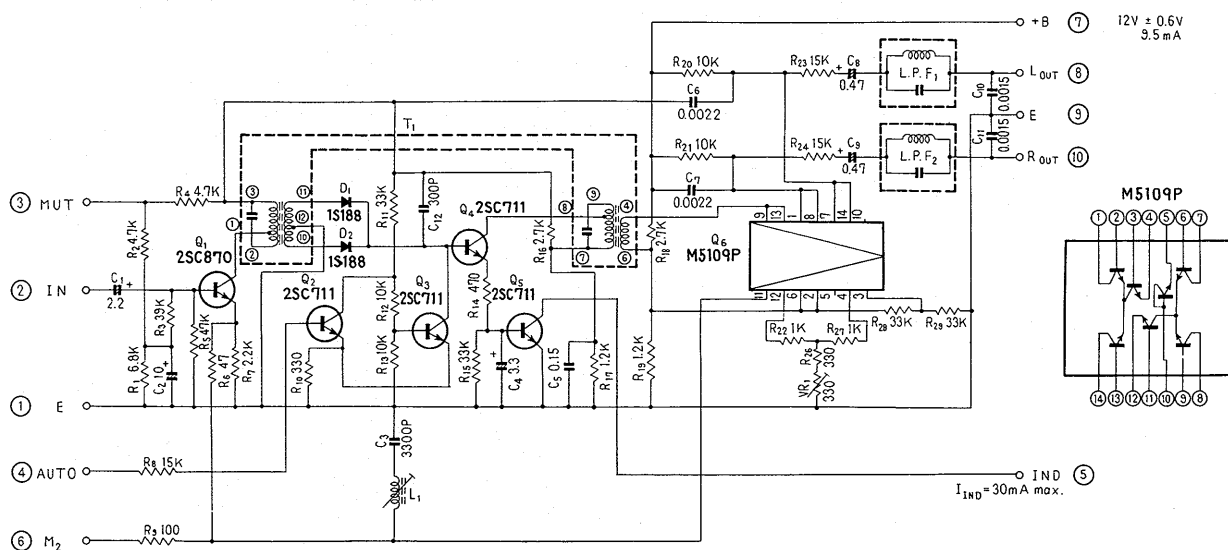


W 14 - 0 1 5

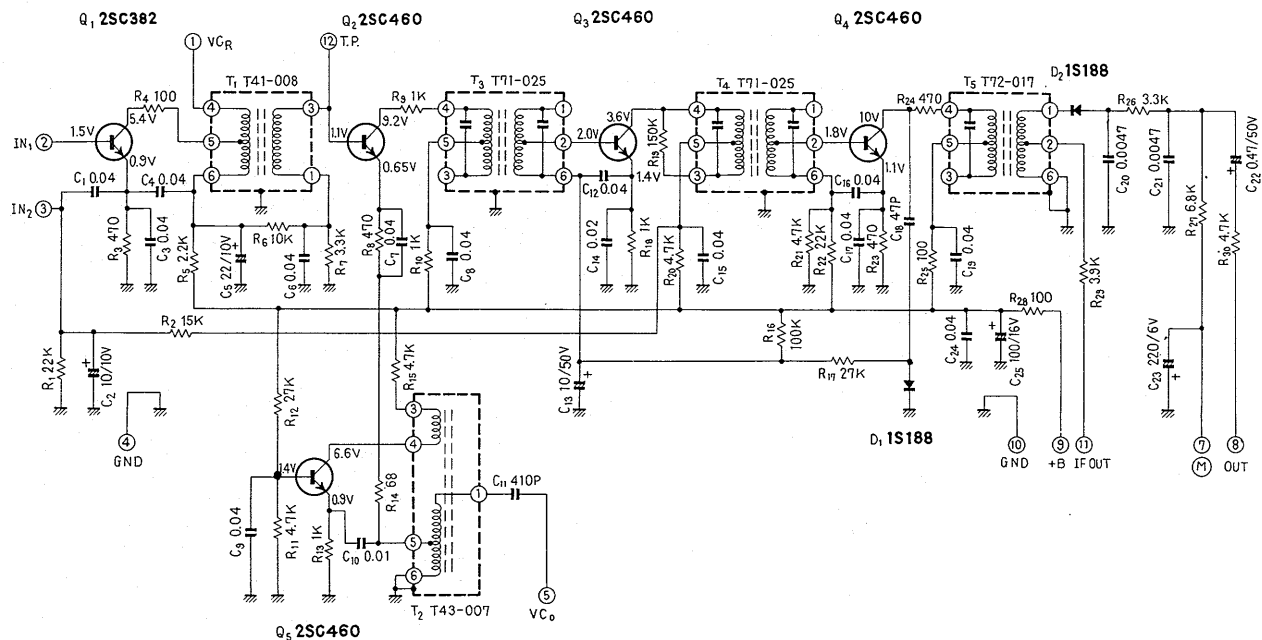

W18 - 026

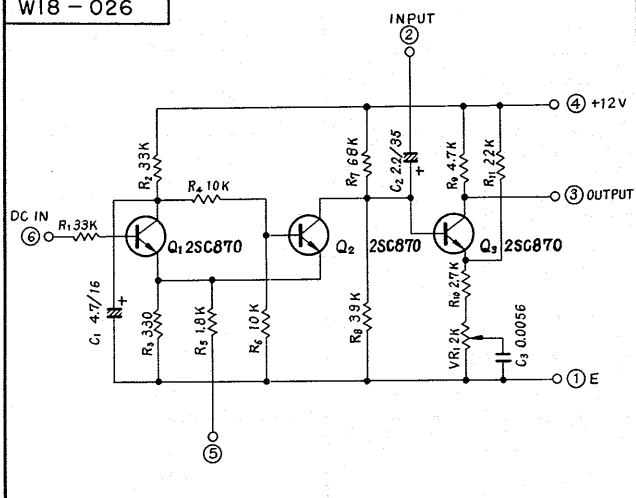


W 21 - 004

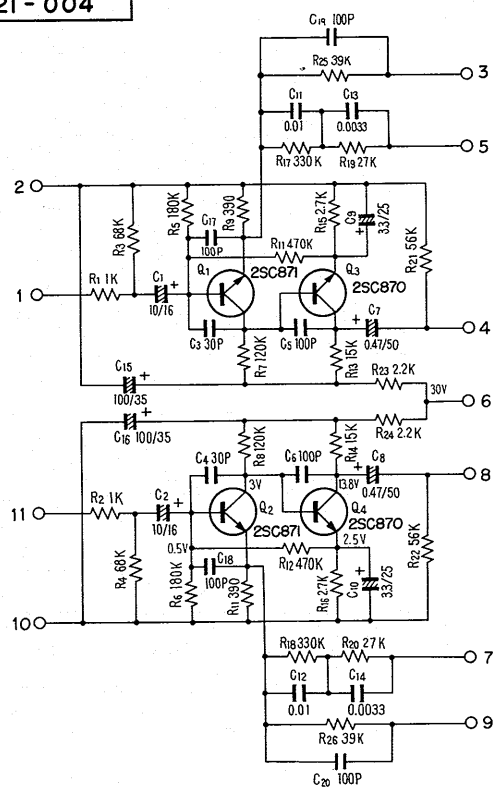


CONTROL AMP UNIT

W 15 - 079

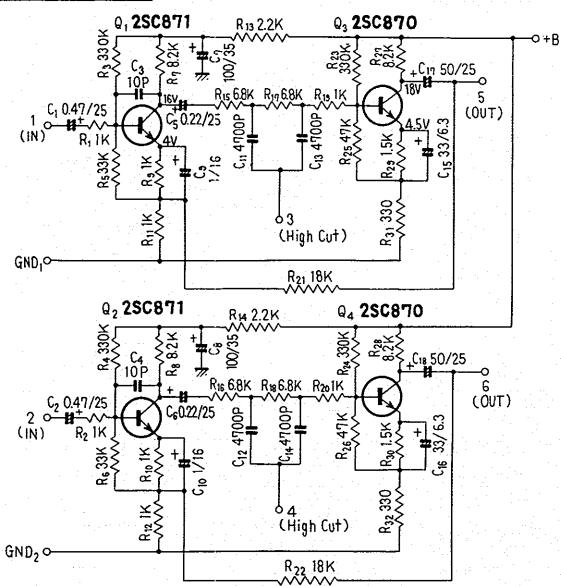


CONTROL UNIT


AWG-006

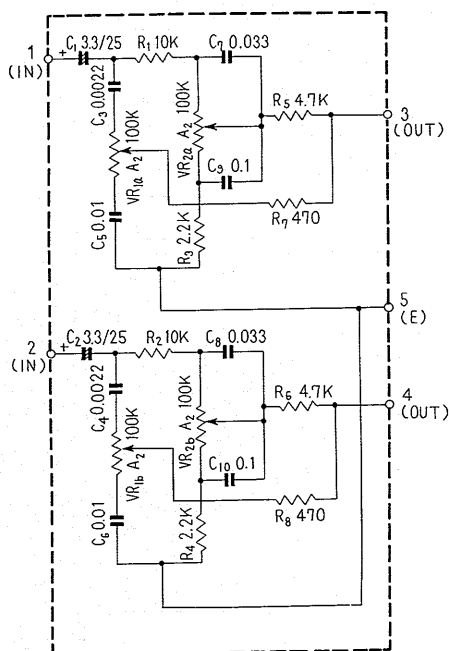

MAIN AMP UNIT

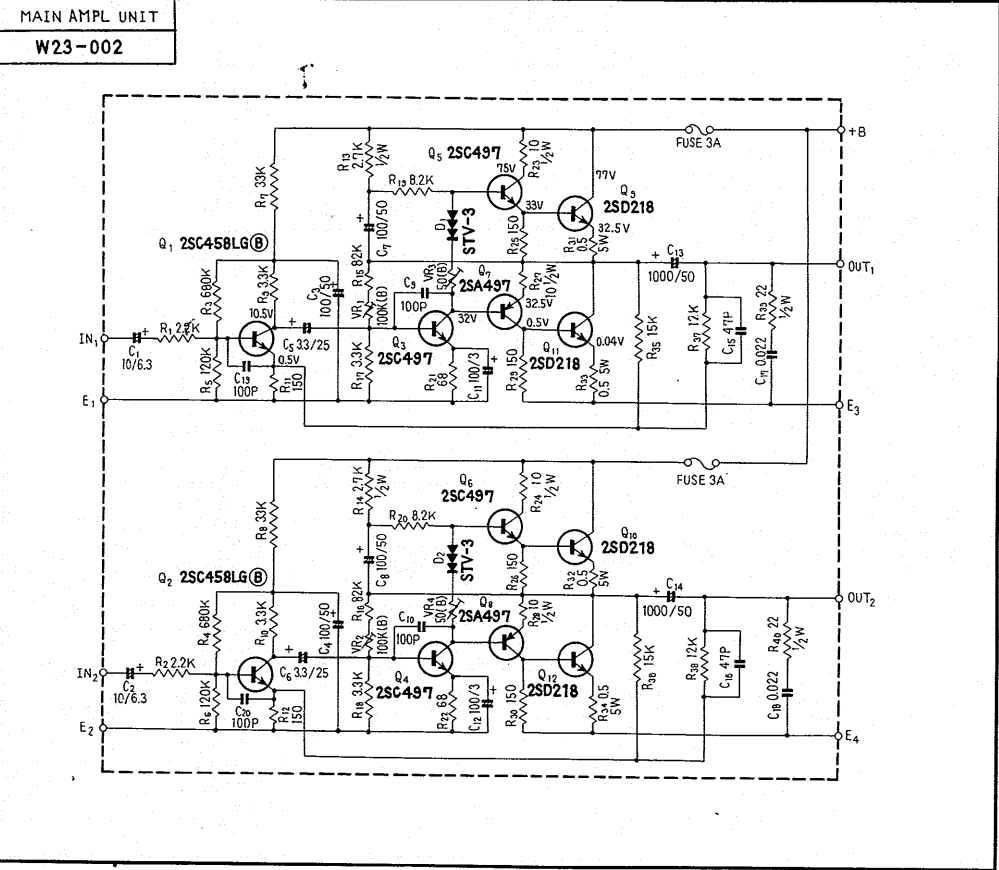

SWITCH UNIT

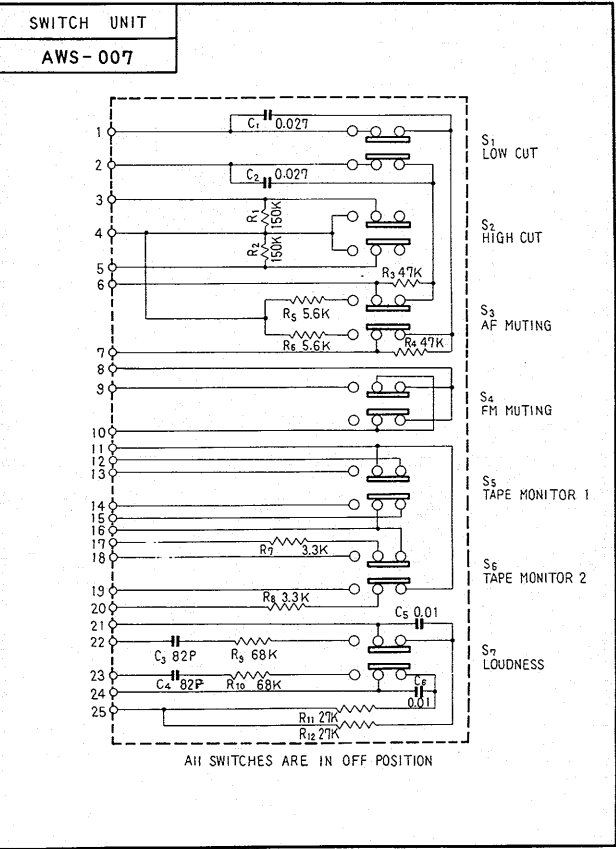

POWER SUPPLY UNIT

