



Model SX-700T, SX-700®

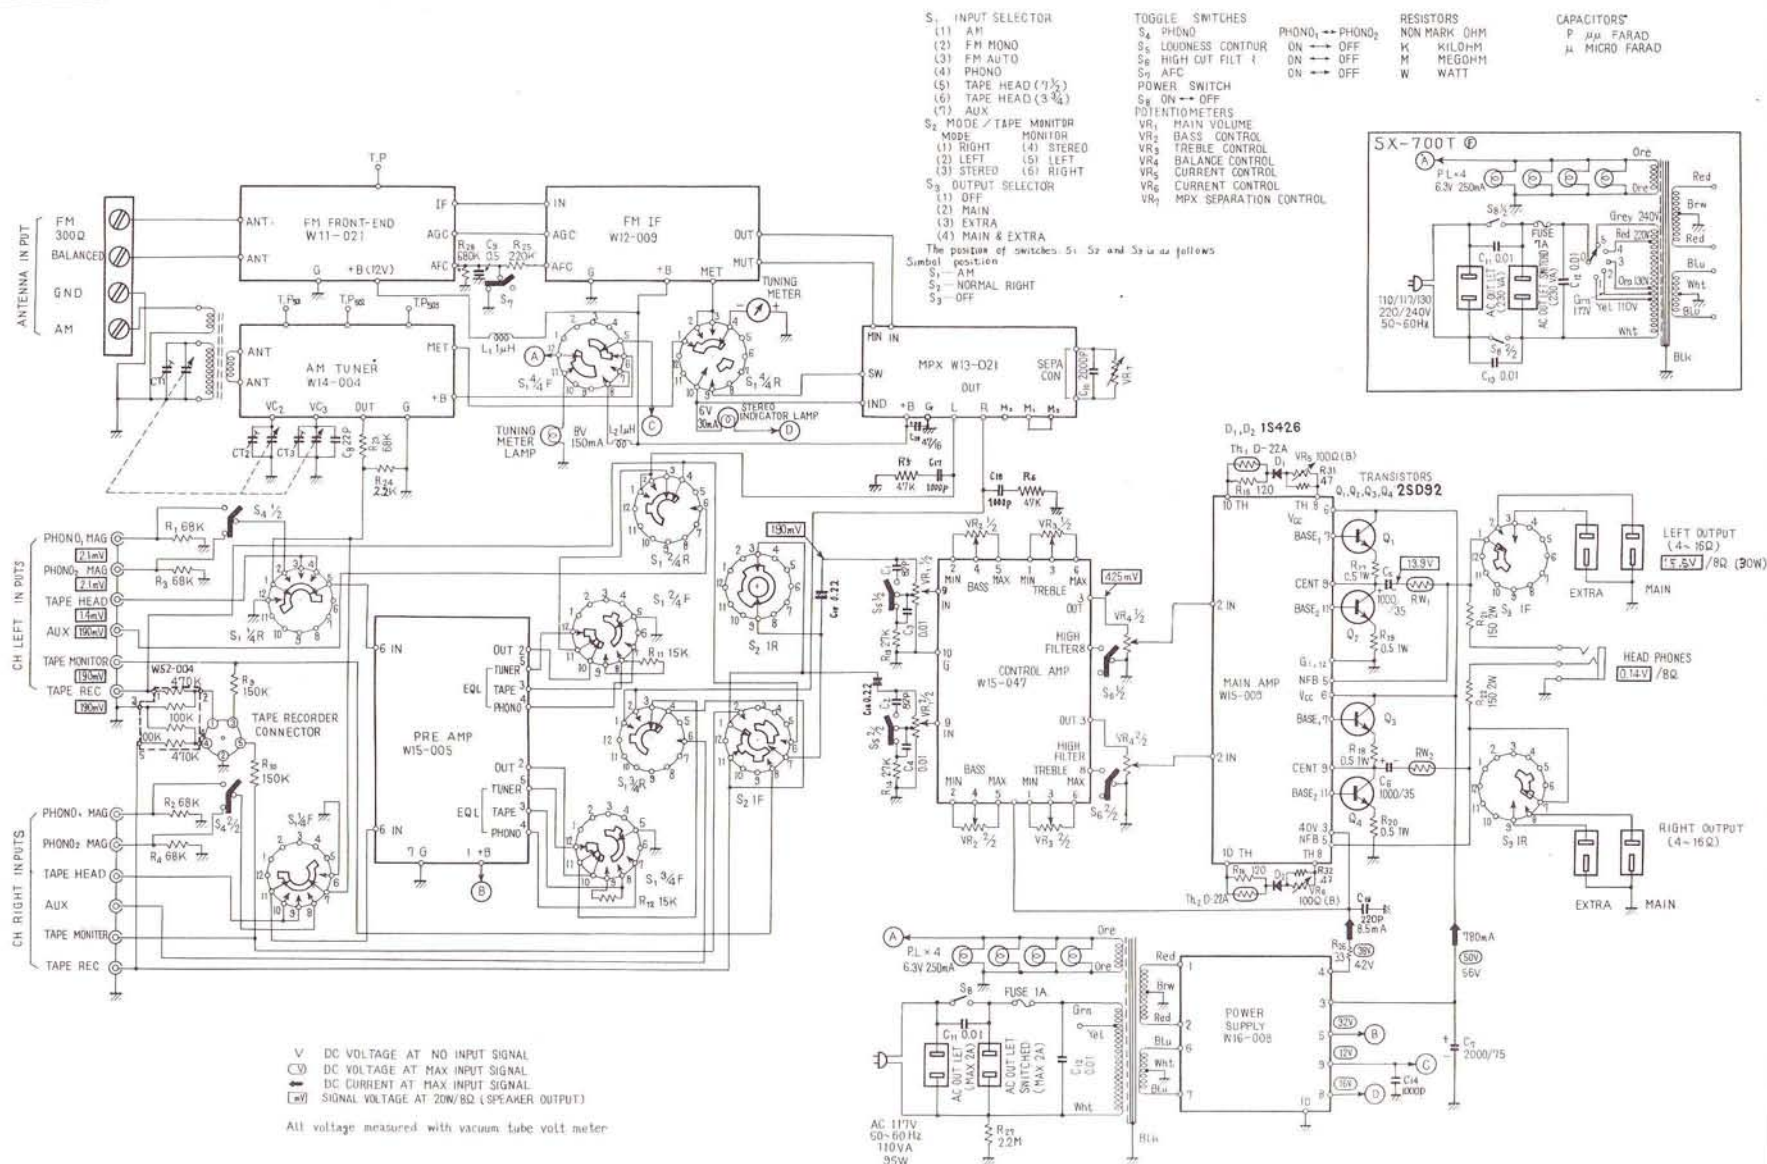

AM TUNER UNIT W14-004

AM TUNER UNIT


W14-004

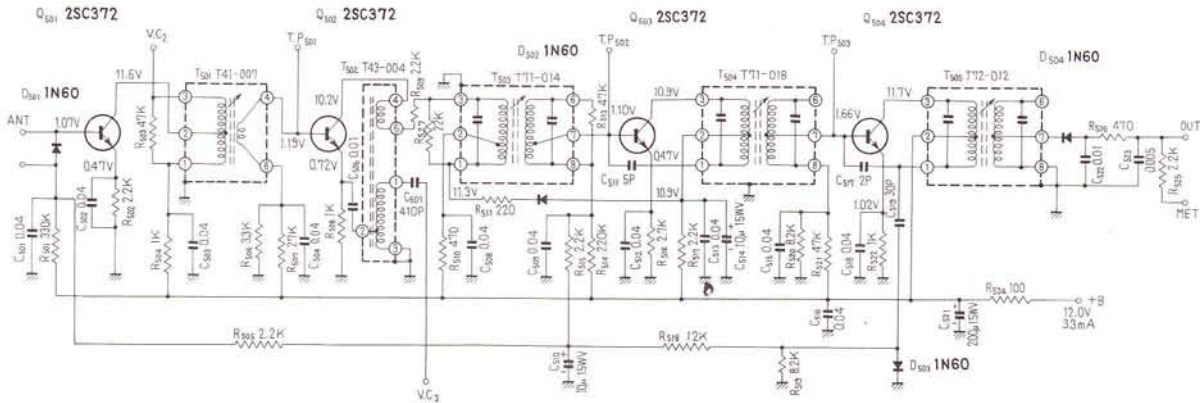

FM FRONTEND W11-021

FM FRONT-END


W11-021

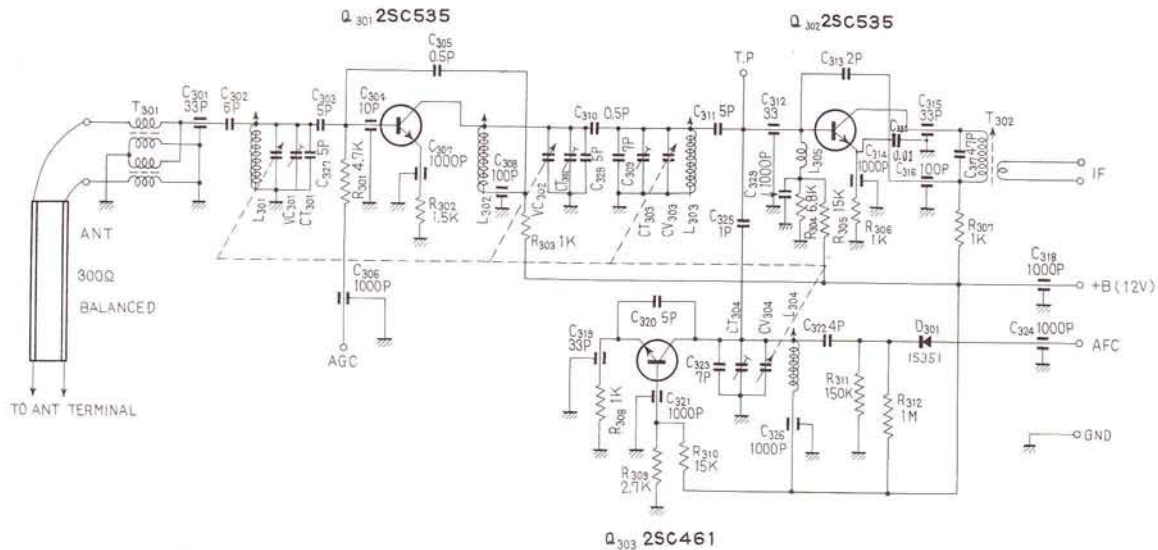


FM IF UNIT W I 2-009

FM IF UNIT

W12-009

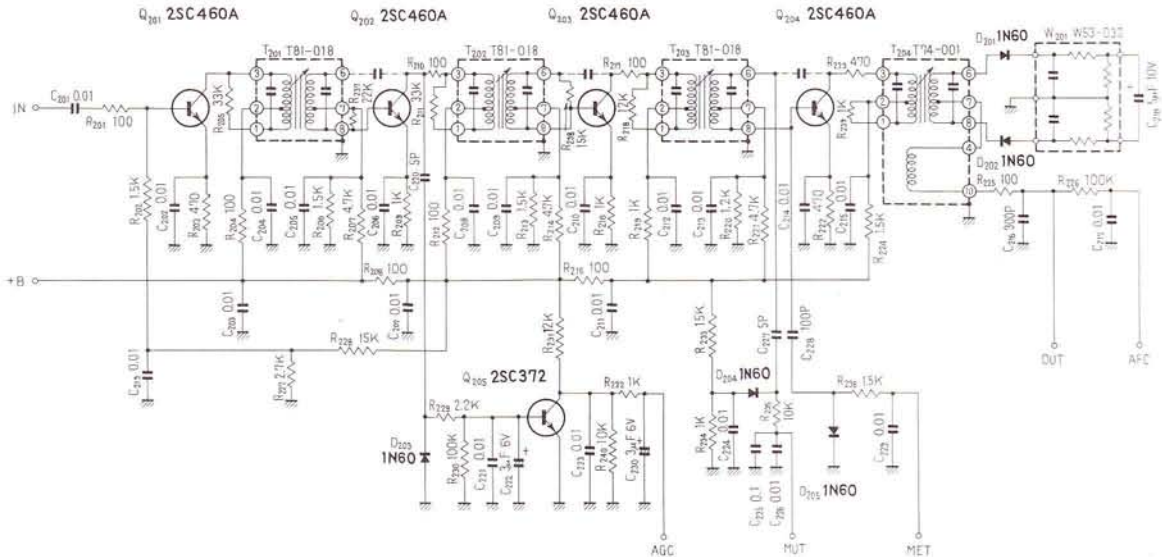


MPX UNIT
W13-021

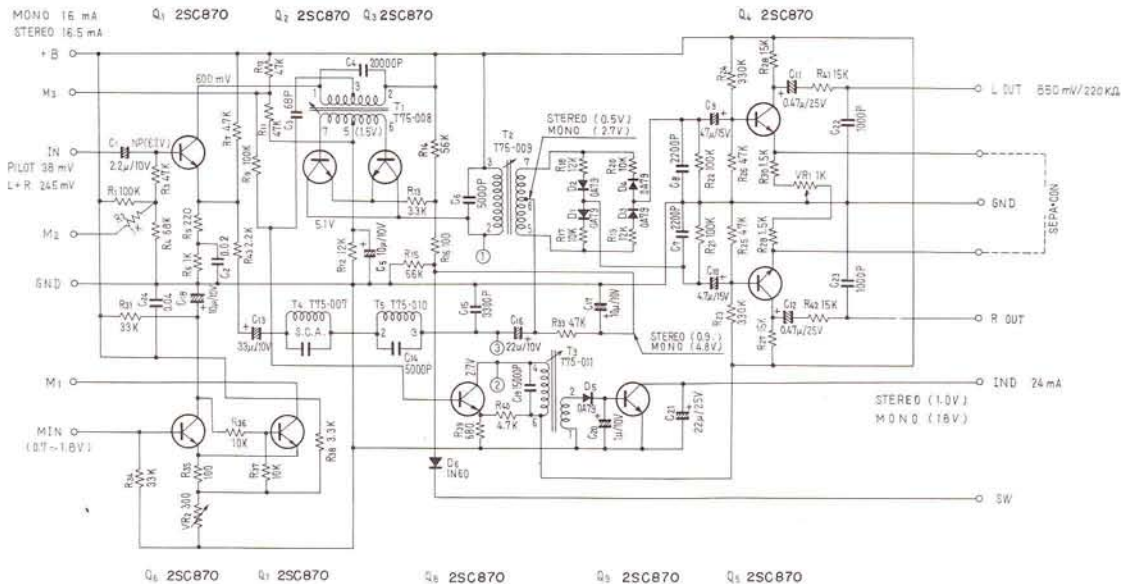

PRE AMP UNIT W15-005

PRE AMP UNIT


W15-005

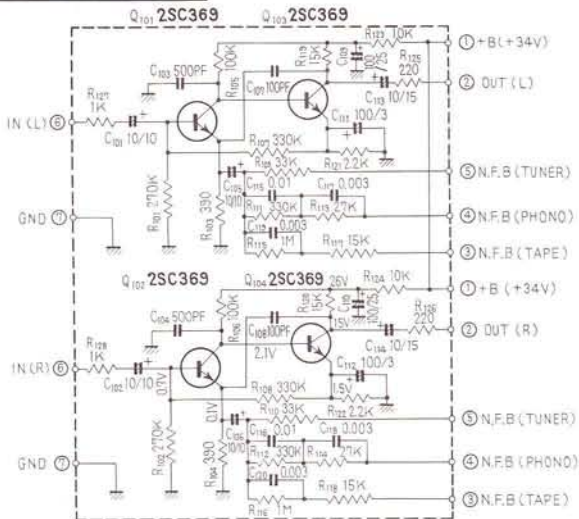

CONTROL AMP UNIT W15-047

CONTROL AMP UNIT

W 15 - 047

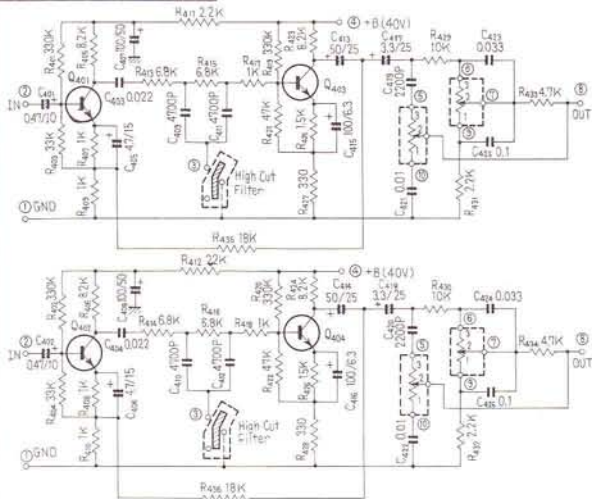


Q401, Q402 2SC071

Q_{am}, Q_{acc}—2SC870

MAIN AMP UNIT W15-009

MAIN AMP UNIT

W15-009

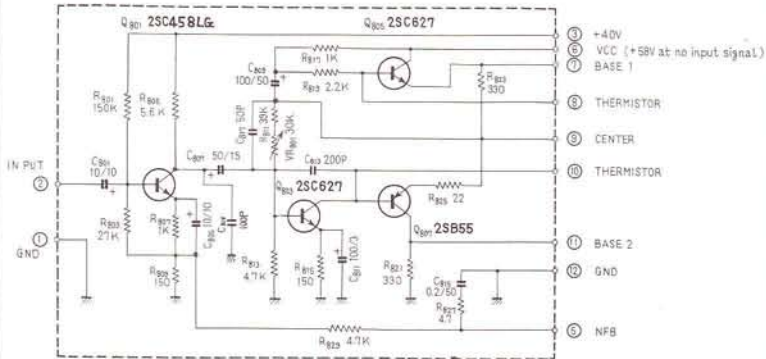


註) 部品番号はL-CH 奇数のみ示してある。

NOTE The schematic diagram of Right channel is not shown.

POWER SUPPLY UNIT


W16-008

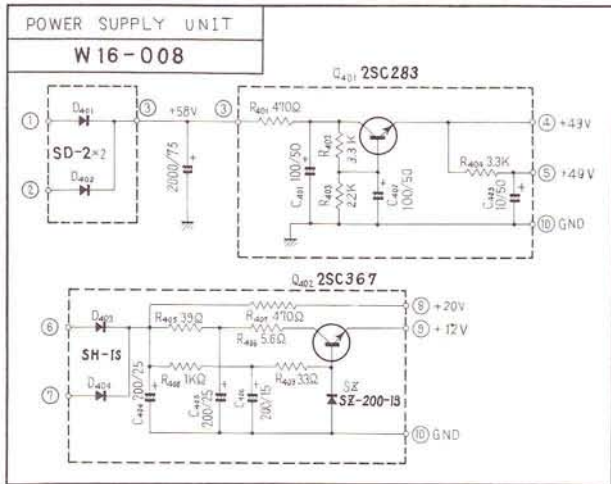

If your set is provided with the CONTROL AMP UNIT and the FILTER UNIT separately, refer to the following circuit diagrams.

CONTROL AMP UNIT

W15-006

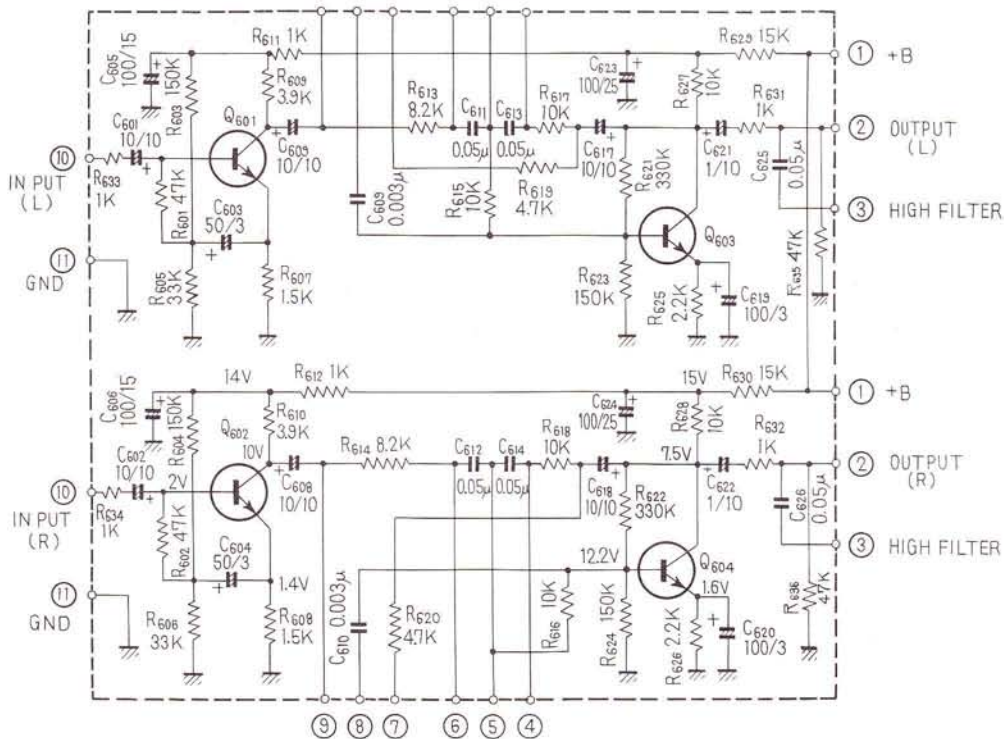

P.T.F UNIT

W 15-010

