


AM/FM STEREO RECEIVER

SX-9000

UNIT	ROUND LABEL	FW					
FM FRONT END	W11-028						
FM IF UNIT	AWC-005						
MPX UNIT	W13-026						
AM TUNER UNIT	W14-015						
MUTING UNIT	W18-028						
HEAD AMP UNIT	W21-002						
CONTROL AMP UNIT	AWG-012						
MAIN AMP UNIT	W23-010						
POWER SUPPLY UNIT	W16-028						
SWITCH UNIT	W26-001						
SWITCH UNIT	W26-002						
SWITCH UNIT	W26-003						
CR UNIT	AWX-011						
CONTROL UNIT							
MIC AMP UNIT	W21-003						
REVERBE AMP UNIT	W28-002						
REVERBE UNIT	W38-001						
POWER SUPPLY UNIT	W16-029						

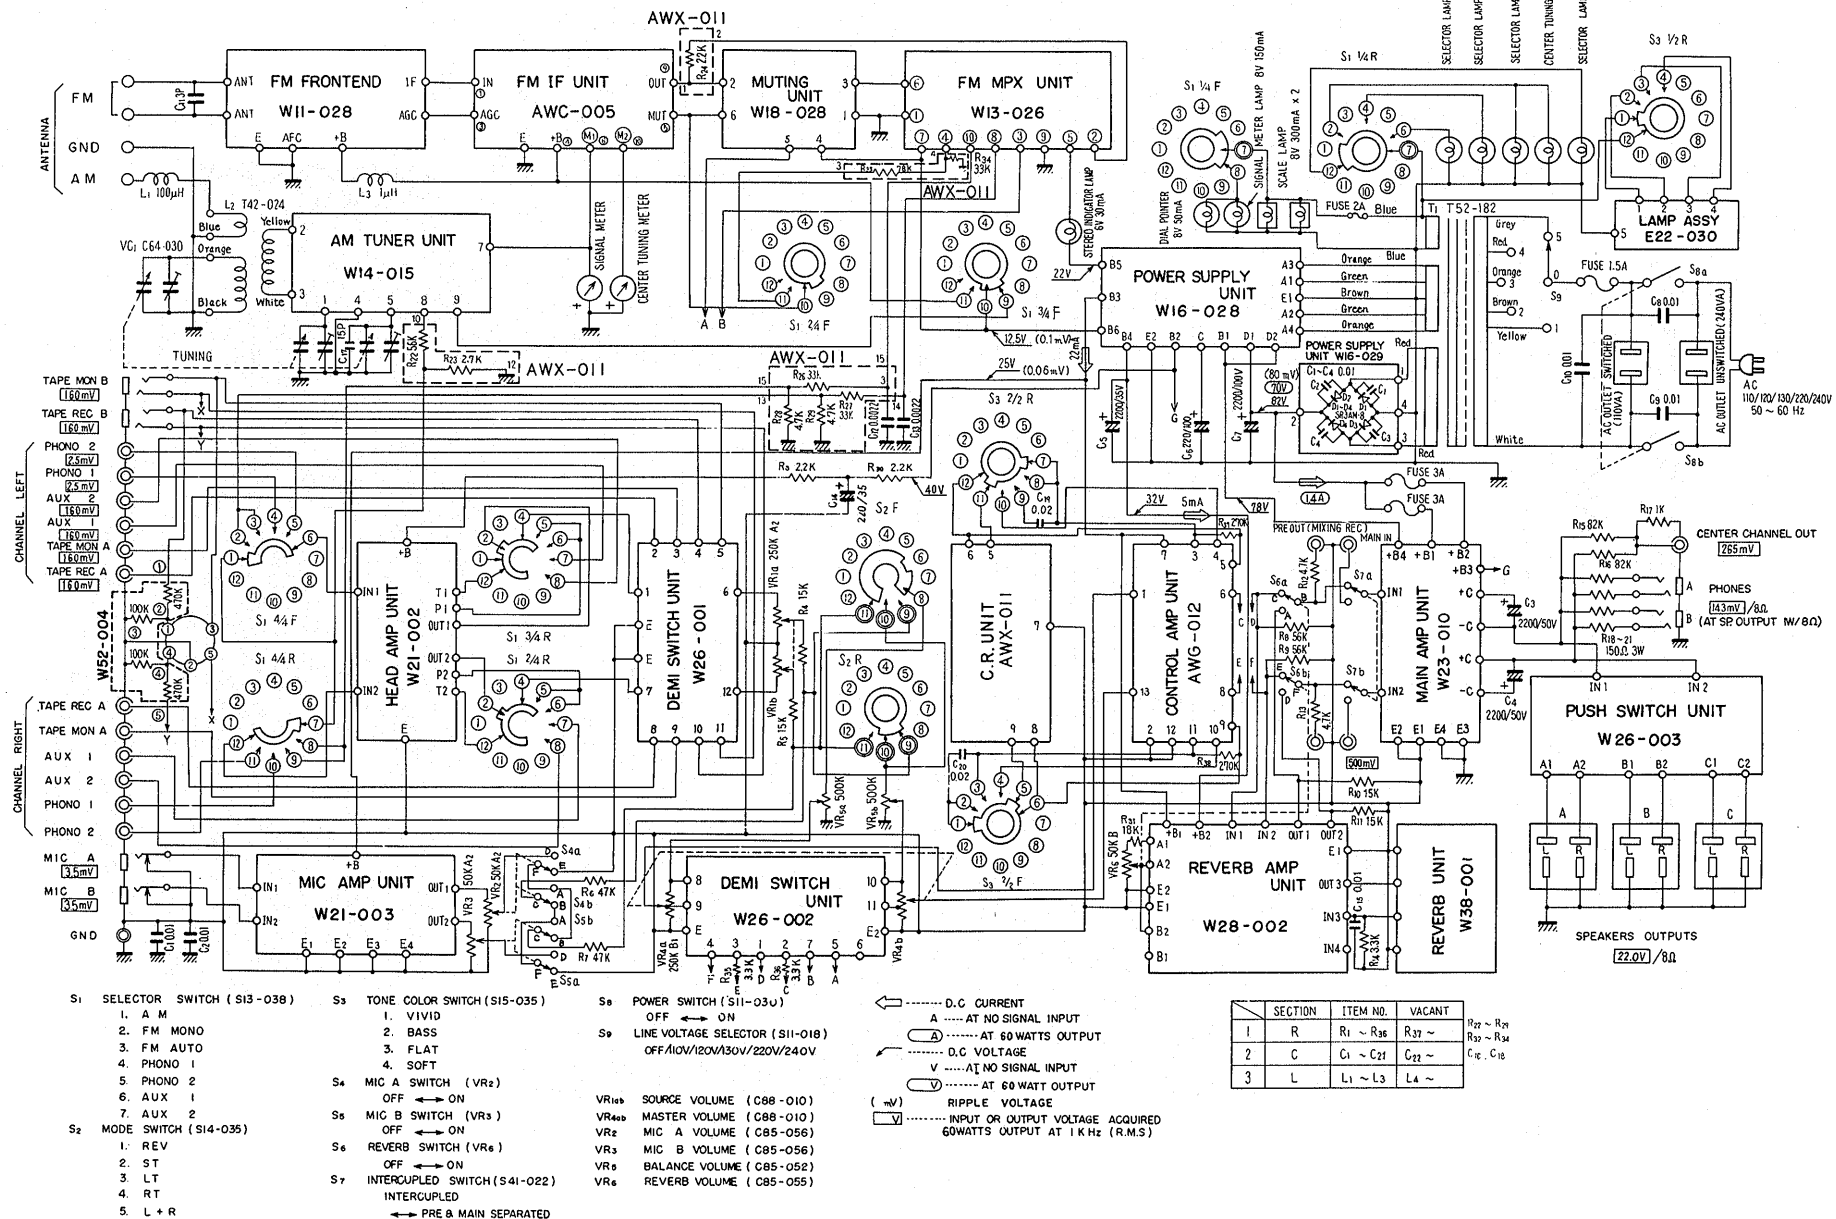




FM FRONT END

FM FRONT END


W11-028

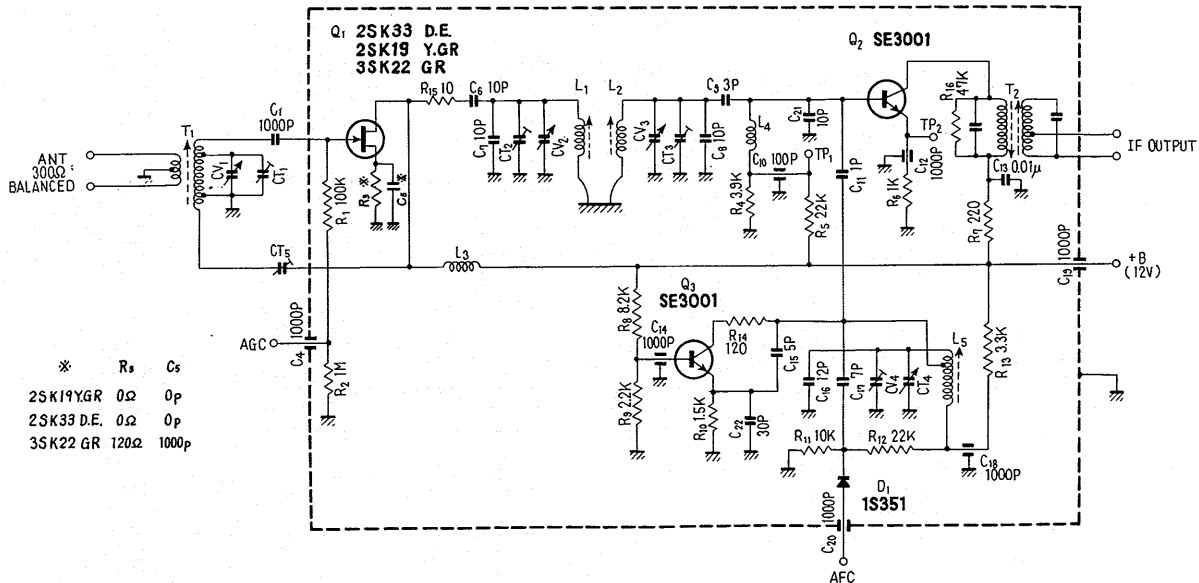


FM IF UNIT

FM IF UNIT


AWC-005

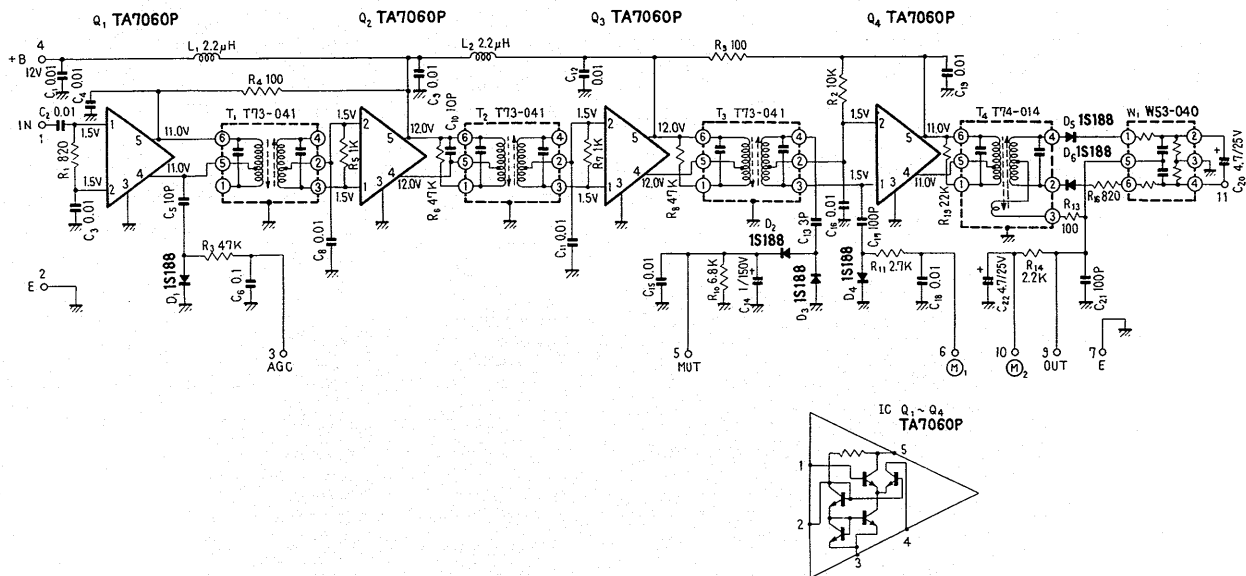

W 13-026

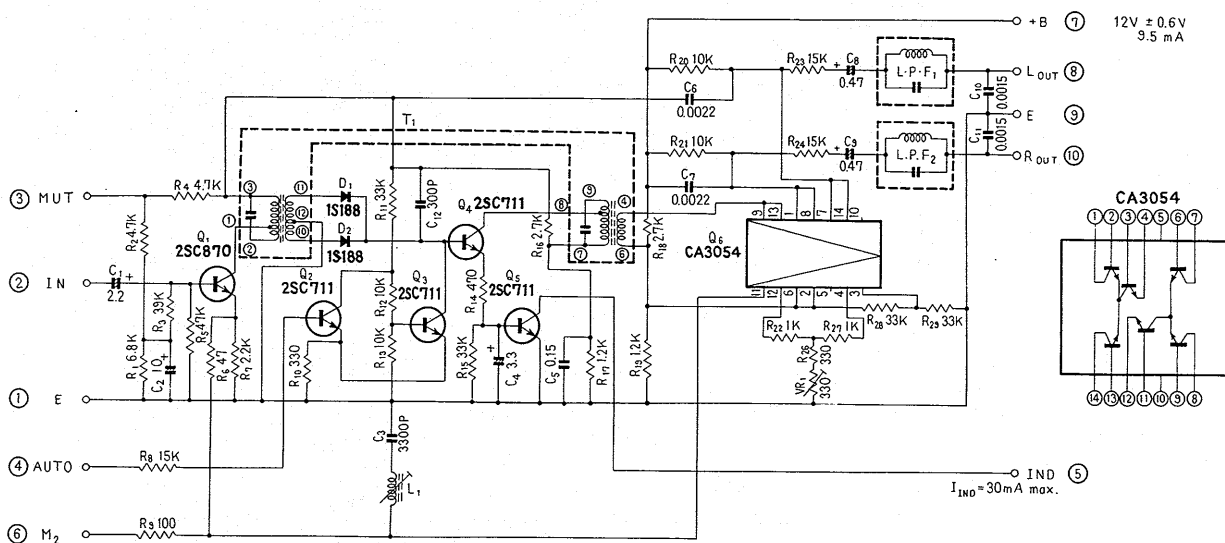


W 14 - 0 1 5

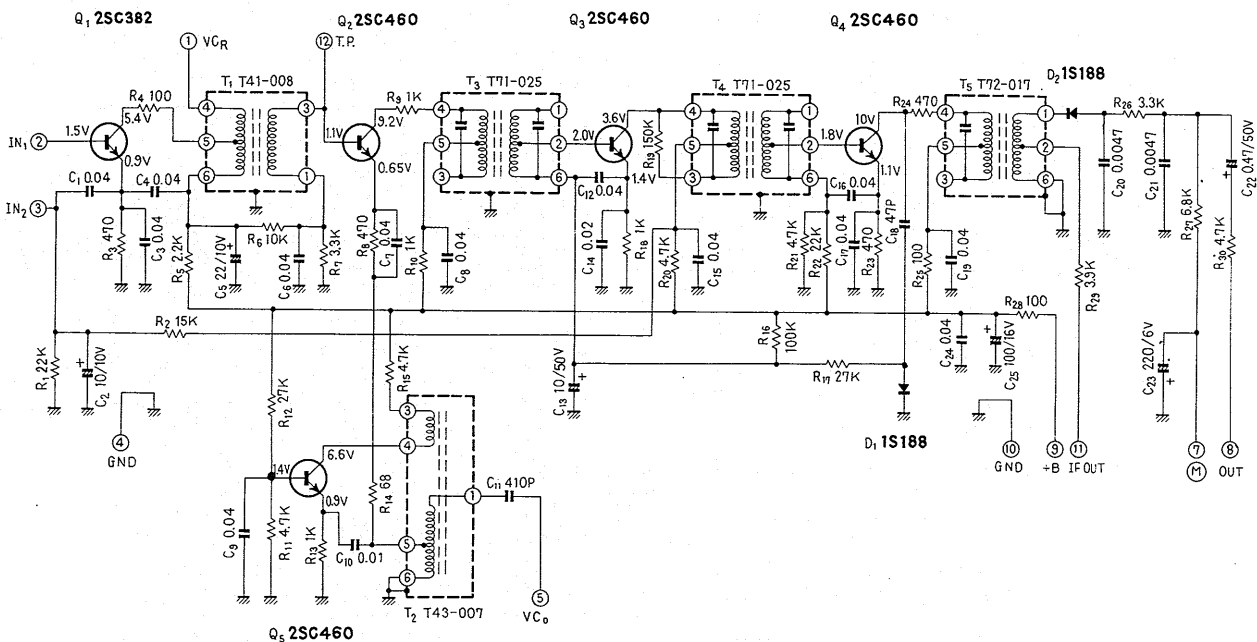


MUTING UNIT

MUTING UNIT
W18-028

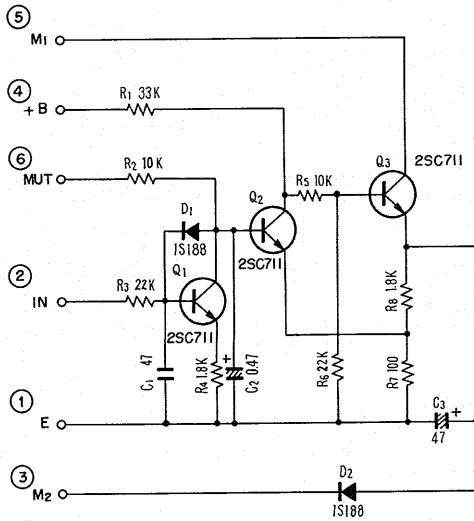


HEAD AMP UNIT

HEAD AMP UNIT
W21-002

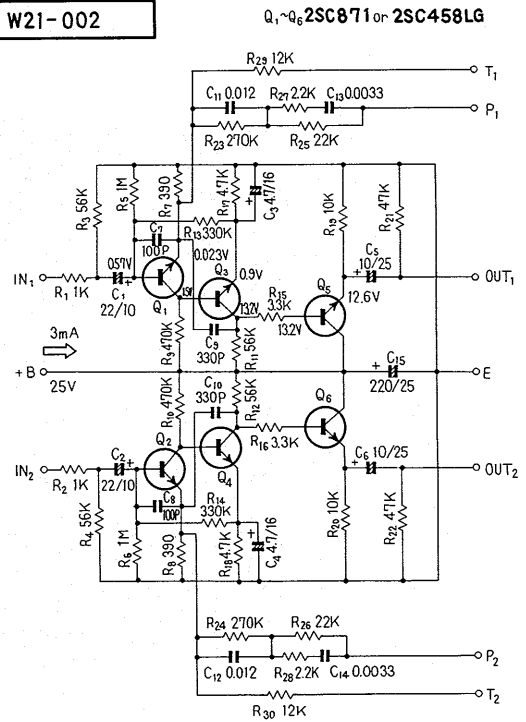


CONTROL AMP UNIT


CONTROL AMP UNIT
AWG-012

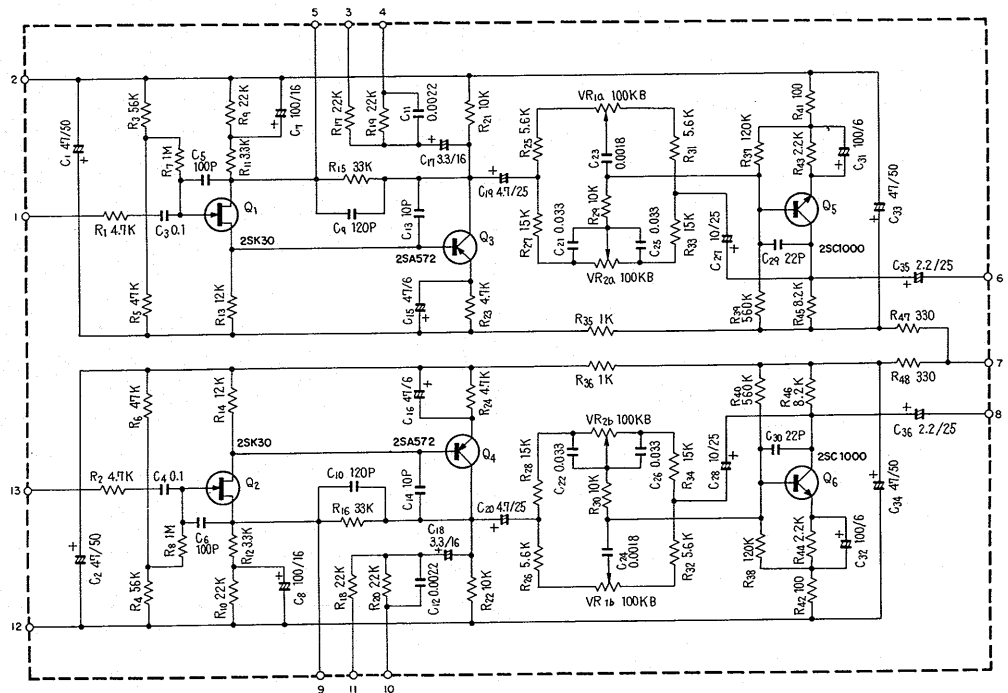


MAIN AMP UNIT

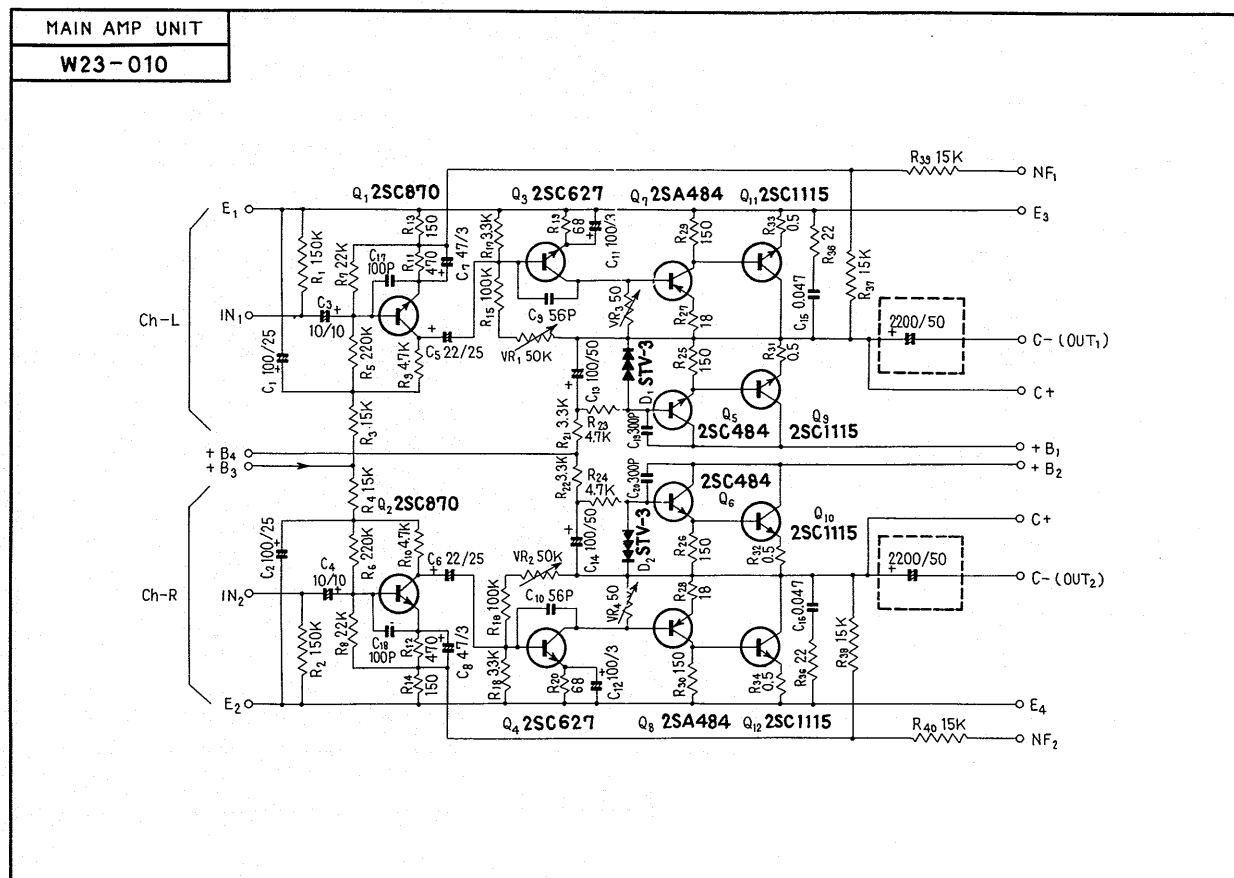


POWER SUPPLY UNIT

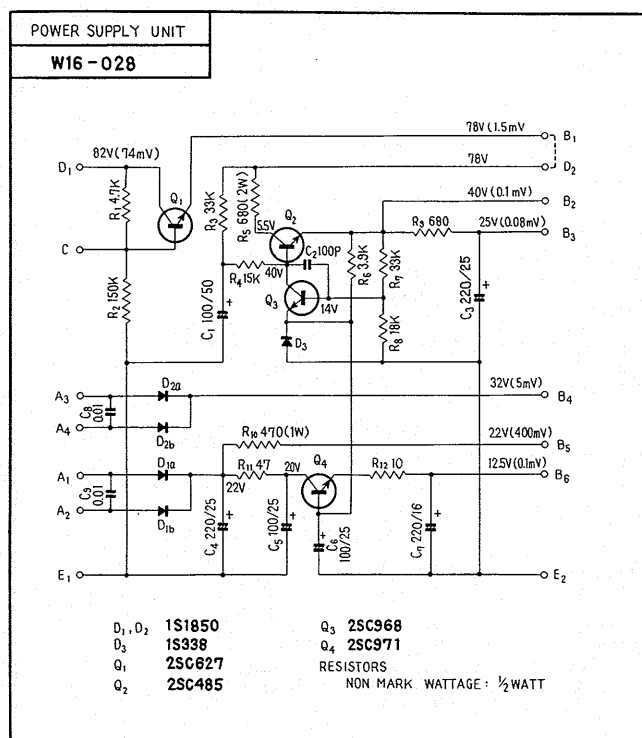


POWER SUPPLY UNIT

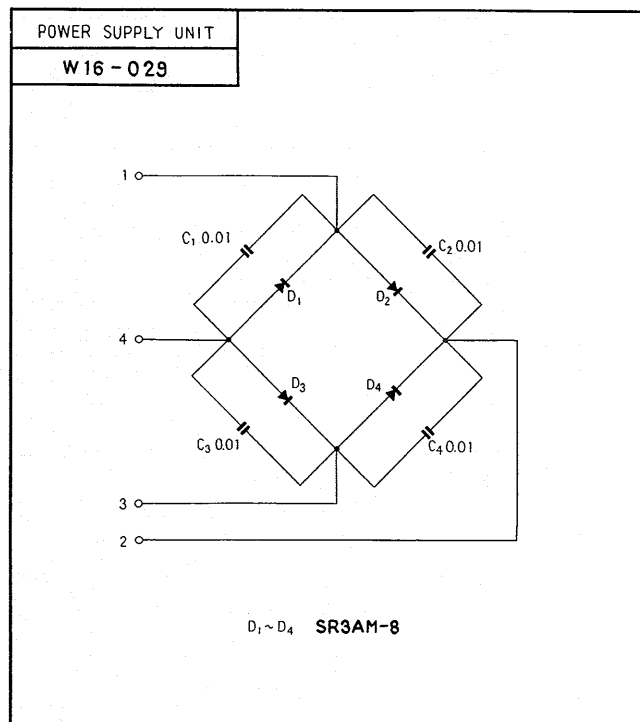


SWITCH UNIT

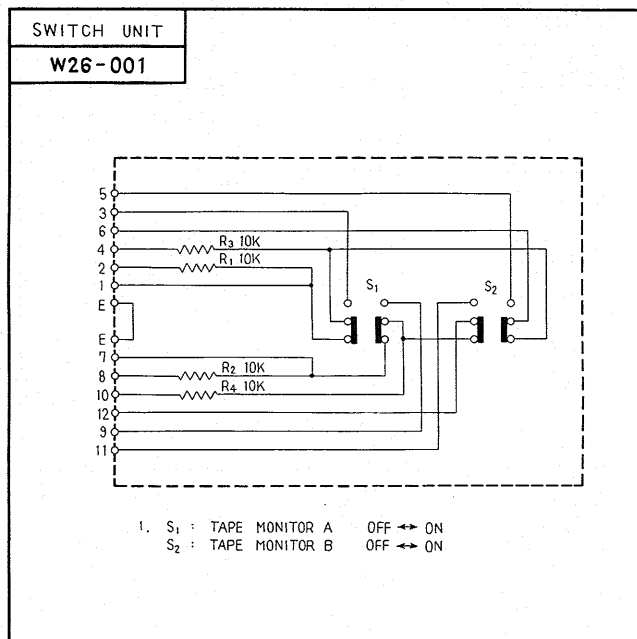


DEMI SWITCH UNIT

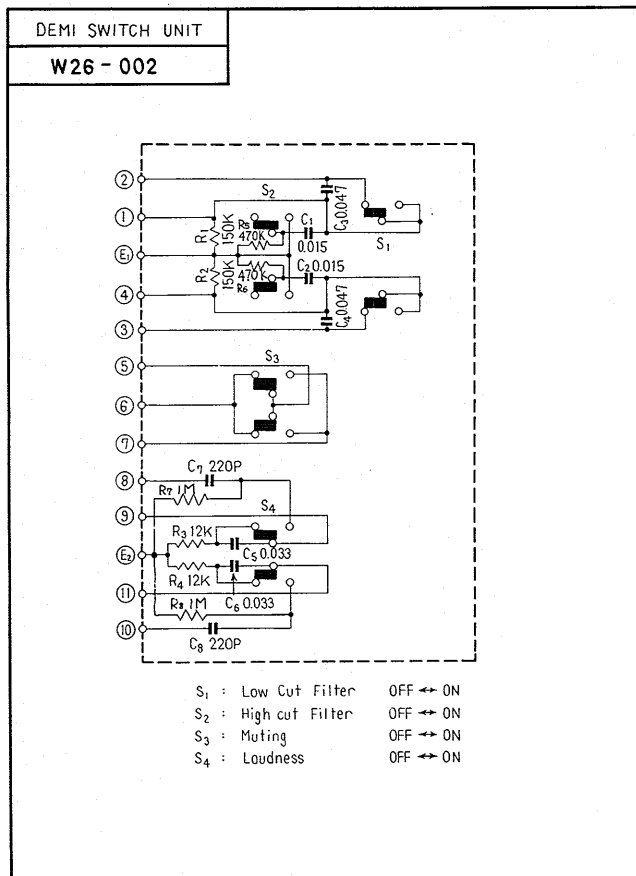

PUSH SWITCH UNIT

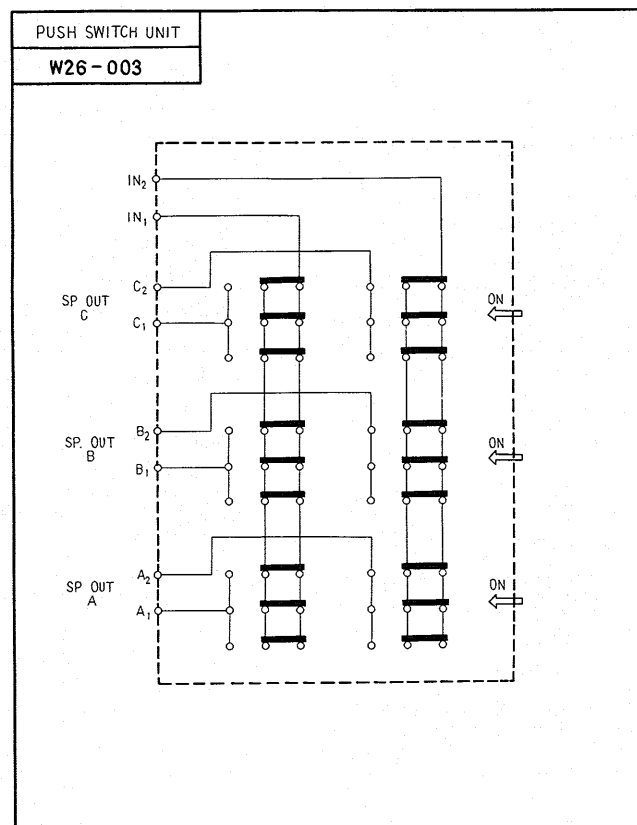

CR UNIT

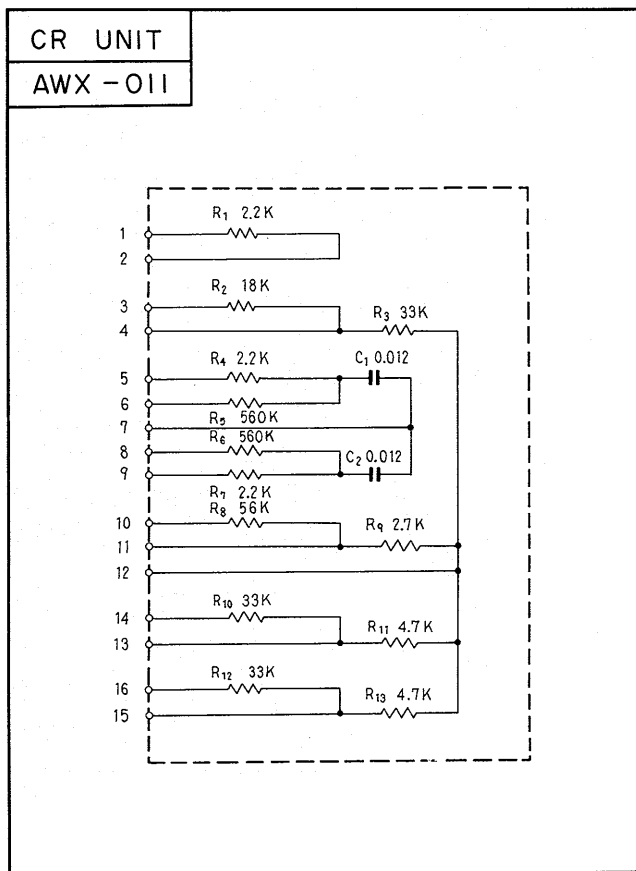


MIC AMP UNIT

REVERBE UNIT


MIC AMP UNIT

W21-003

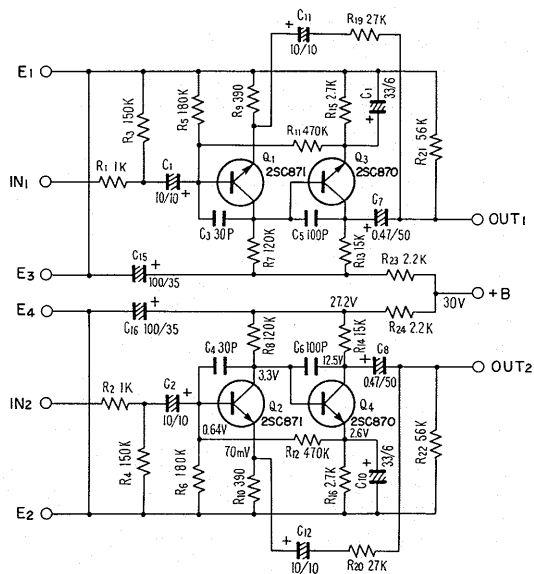

REVERB UNIT


W 38 - 001

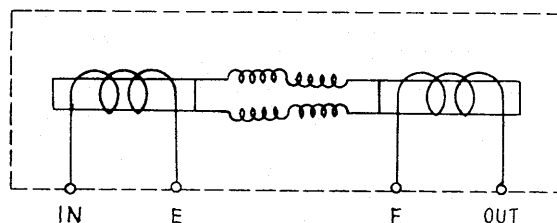

REVERBE AMP UNIT

REVERB AMP UNIT

W28 - 002

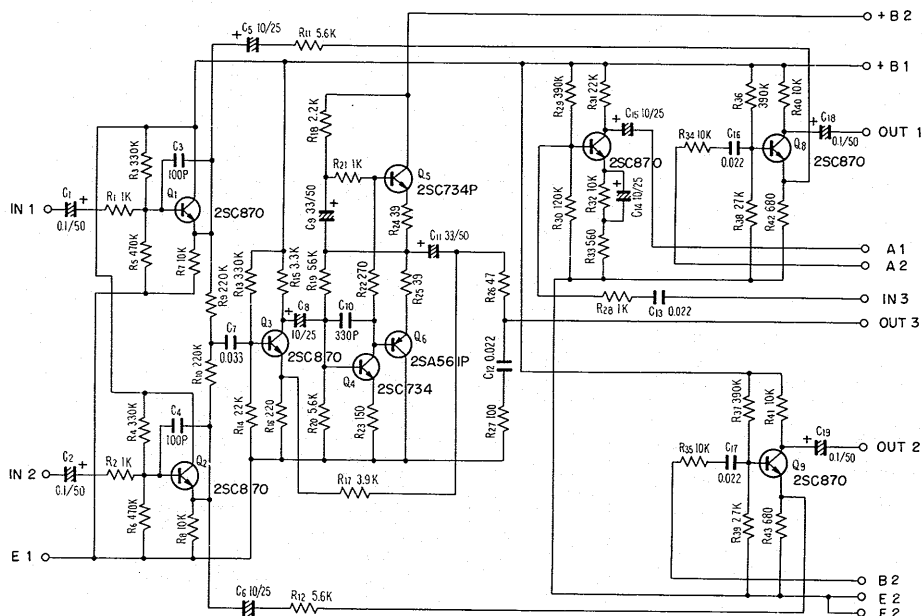

- | | |
|----|-------------------|
| Q1 | 2SC870 or 2SC458L |
| Q2 | 2SC870 or 2SC458L |
| Q3 | 2SC870 or 2SC458L |
| Q4 | 2SC734 |
| Q5 | 2SC734P or 2SC904 |
| Q6 | 2SA561P or 2SA569 |
| Q7 | 2SC870 or 2SC458L |
| Q8 | 2SC870 or 2SC458L |
| Q9 | 2SC870 or 2SC458L |