


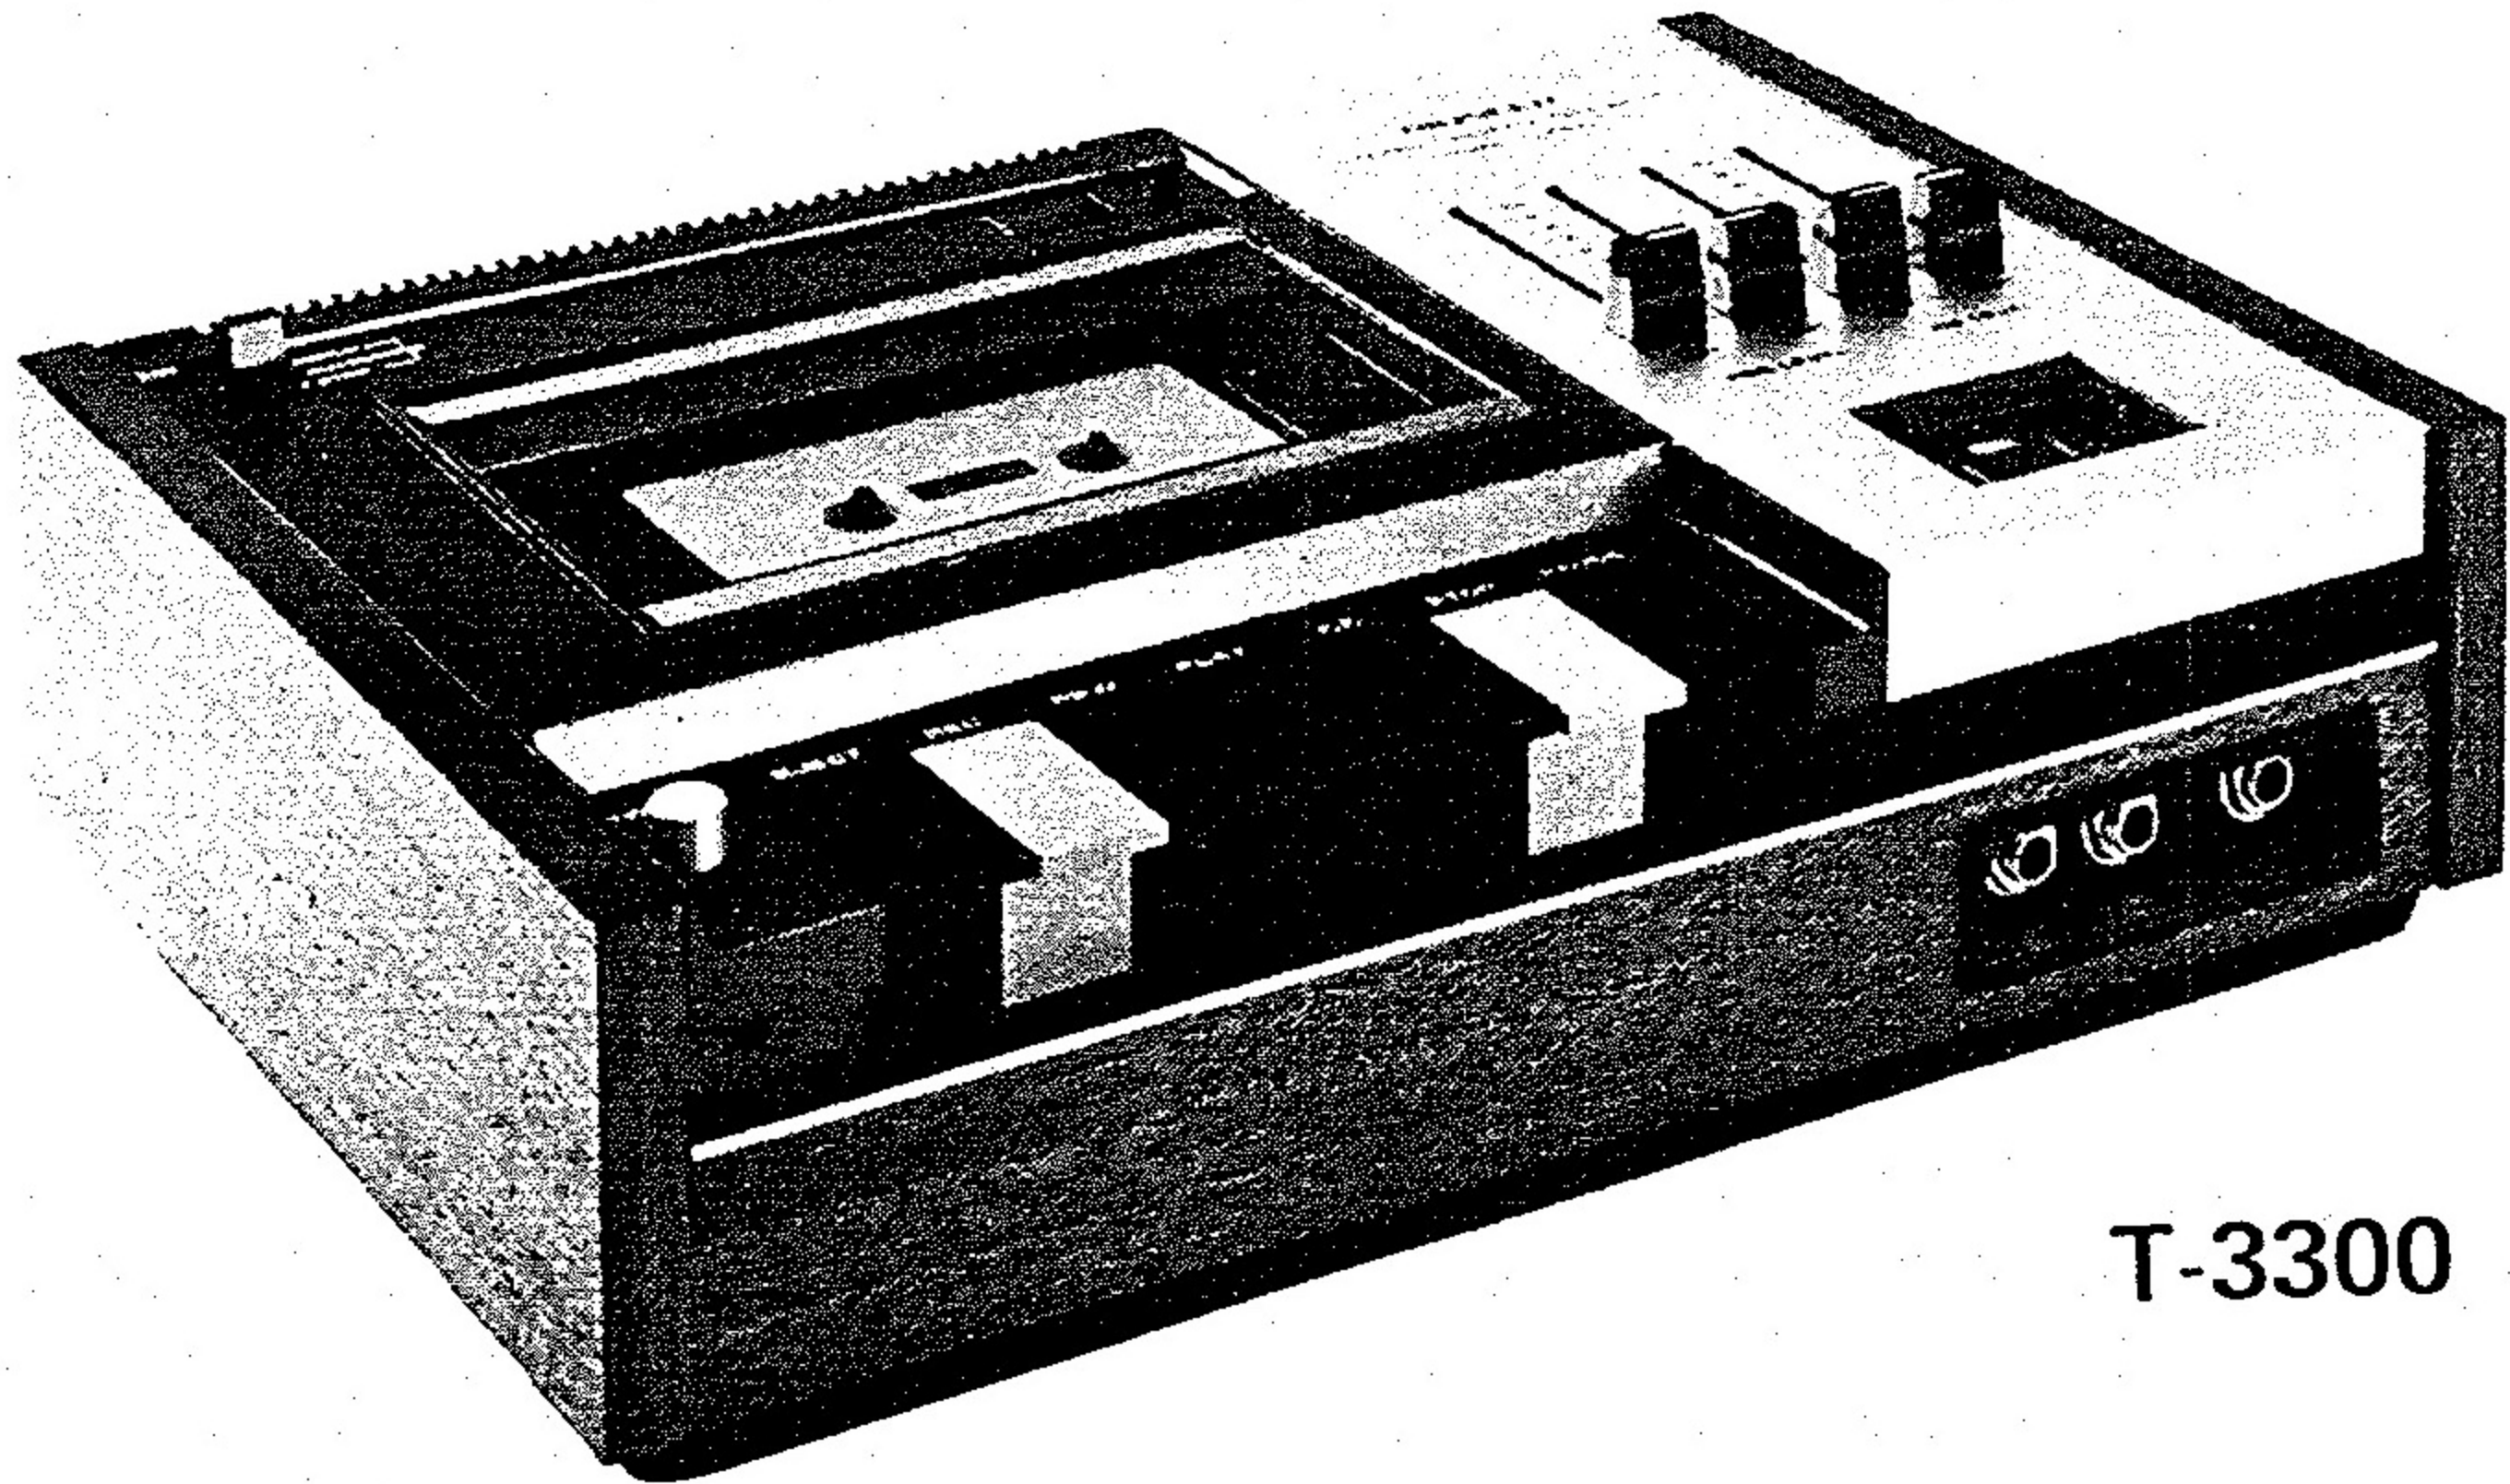

T-3300

FUSE	
240V	0.5A
220V	
130V	1 A
117V	
110V	

NOTES

* 1	S ₁ , S ₂	-----	REC - PB_SELECTOR SW (PB.POSITION)	
* 2	S ₃	-----	POWER SW	
* 3	S ₄	-----	SENSING MICRO SW	
* 4	S ₅	-----	PAUSE MICRO SW	
* 5	VR ₁ , VR ₆	-----	P.B.=EQUALIZER	ADJ
	VR ₂ , VR ₈	-----	P.B.=LEVEL	
	VR ₃ , VR ₉	-----	REC=LEVEL	
	VR ₄ , VR ₉	-----	VU=LEVEL	ADJ
	VR ₅ , VR ₁₀	-----	REC=LEVEL	ADJ
	VR ₁₁	-----	L(ch) BIAS	ADJ
	VR ₁₂	-----	R(ch) BIAS	ADJ