
RCAVICTOR

65U, 65AU

Chassis No. RC1017A

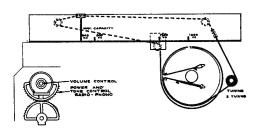

Dial Pointer Adjustment.—Rotate tuning condenser fully counter-clock-wise(plates fully meshed). Adjust indicator pointer to left (max. cap.) mark on dial back plate.

Test Oscillator.—Connect high side of test oscillator as shown in chart Connect low side through a .01 mf capacitor to common "—B". Keep the output signal as low as possible to avoid a-v-c action.

Output Meter.-Connect meter across speaker voice coil. Turn volume control clockwise to radio maximum high position (3) for alignment.

Steps	Connect the high side of test- oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the follow- ing for max. peak output
1	I.F. grid, in series with .01 mfd.	455 kc	Quiet point 1,630 kc end of dial	L8 and L9 2nd I.F. transformer
2	1st Dst. grid in series with .01 mfd.			L6 and L7 1st I.F. * transformer
			OP AND RE	
3	Antenna terminal in series with 220 mmfd.	1600 kc	Gang at minimum	C19 (osc.)
4	Radiated signal 1300 kc		Signal Frequency	C17 (ant.)
5	Repeat steps 3 and 4.			

*Do not readjust L8 or L9 when test oscillator is connected to 1st Det.

12517

12547

