

# RCA VICTOR

Automatic Record Player


## MODEL 8-EY-31

Chassis No. RS-153A

Record Changer No. RP-190D-1

### Stylus Replacement—Pickup #103238

The stylus assembly is held in position by a pressure fit only. To remove stylus assembly, pull straight outward away from pickup.

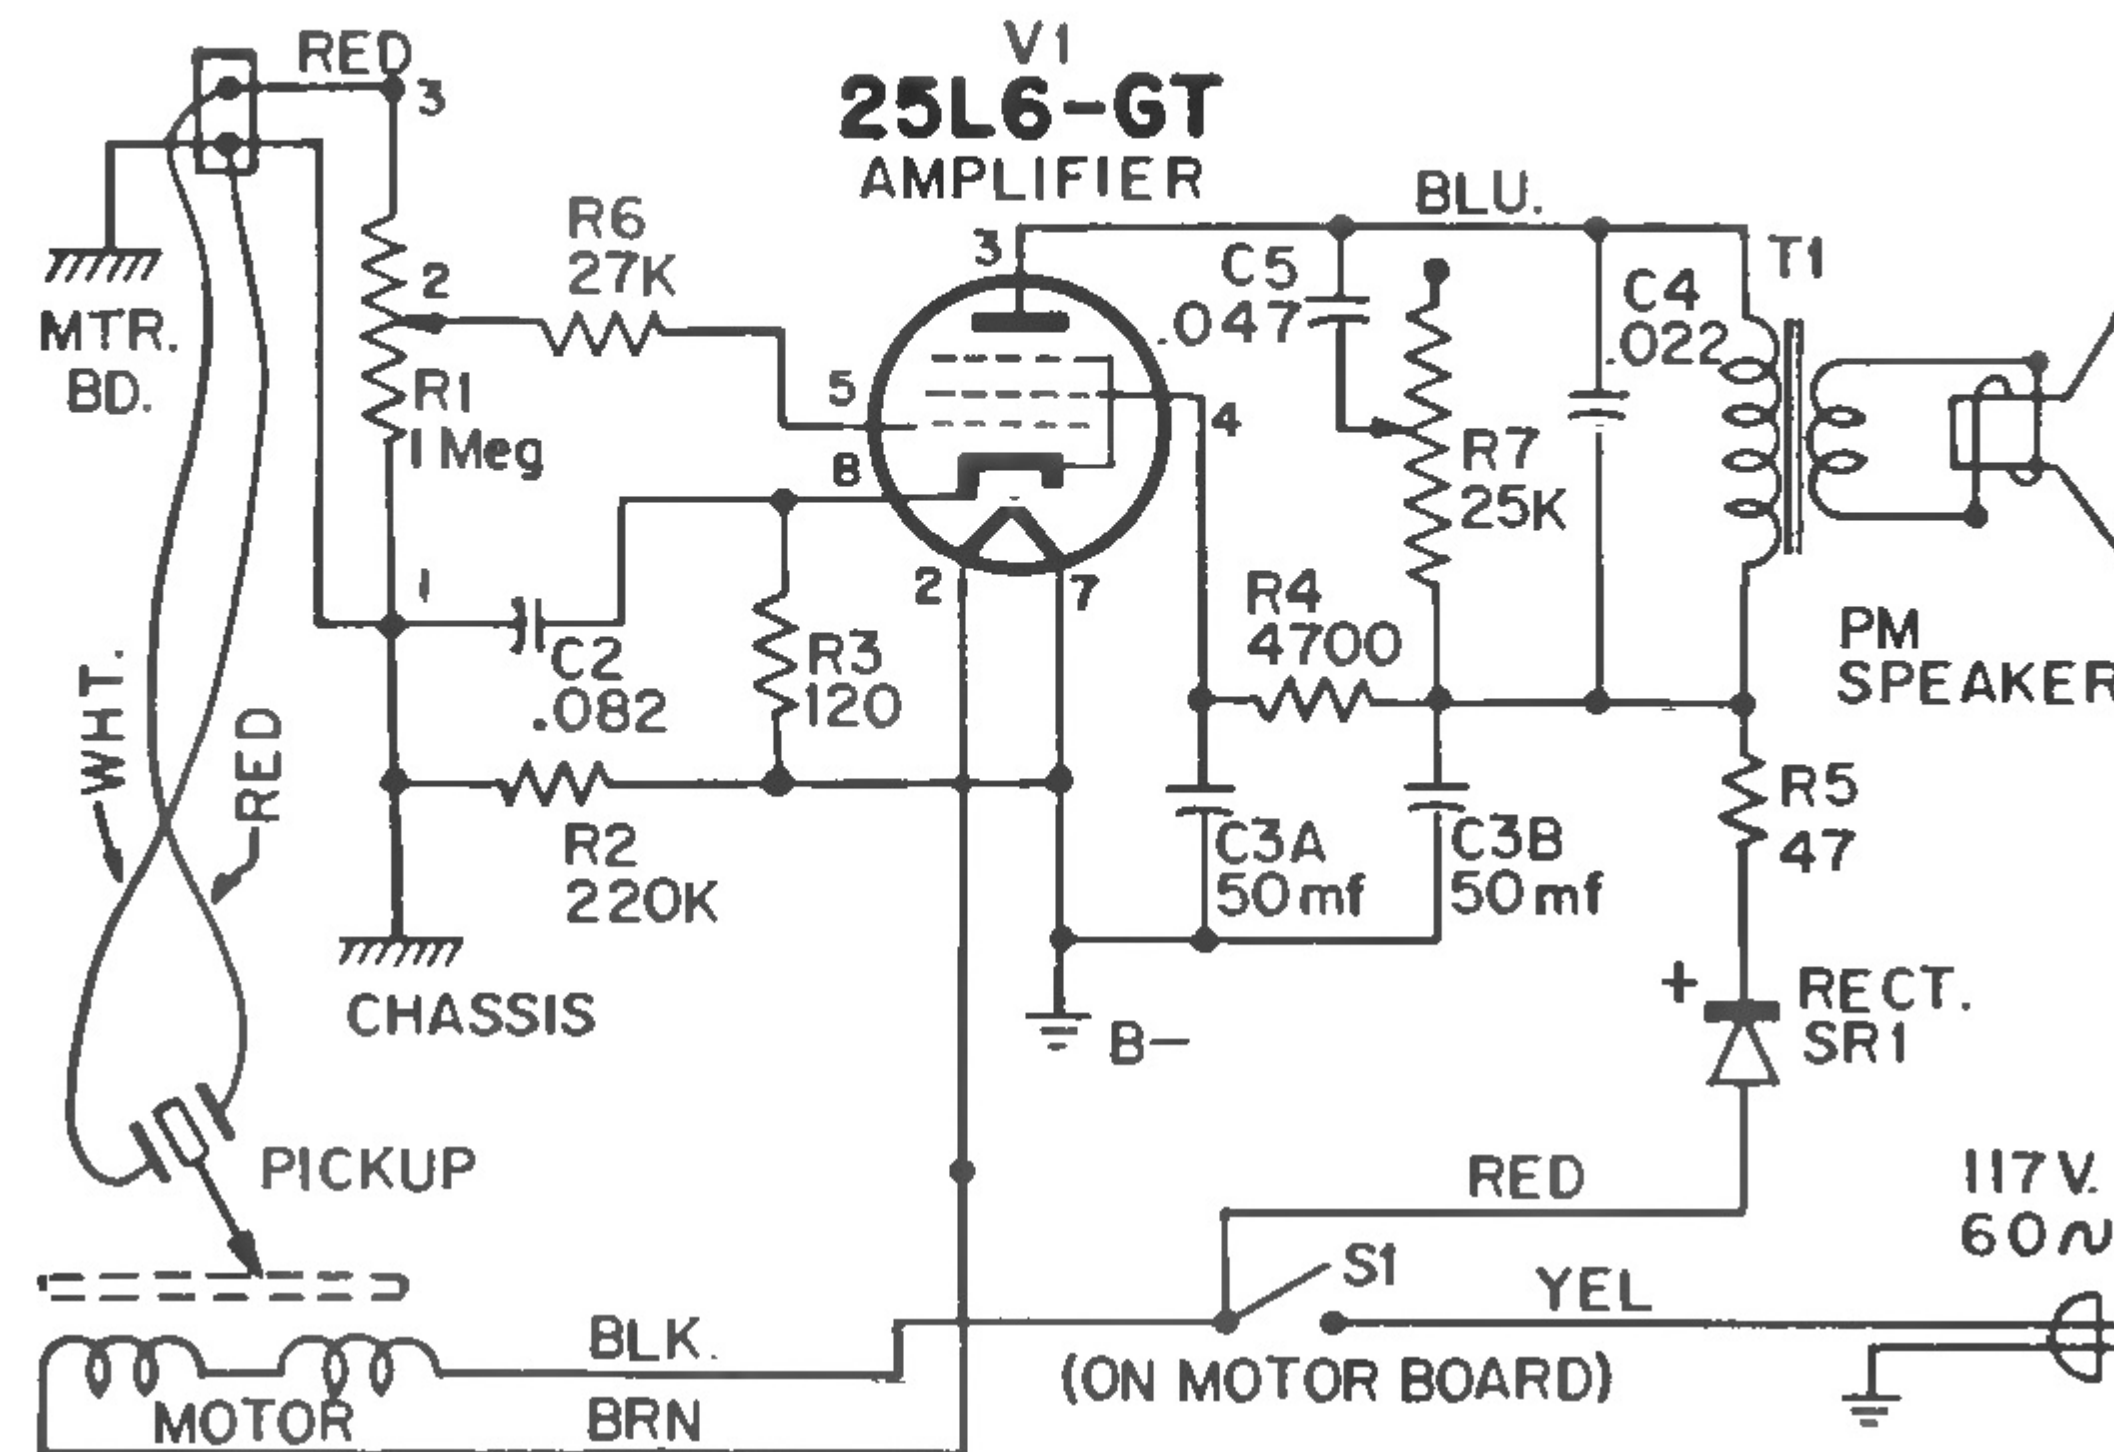

### Pickup Height Adjustment

Adjust knurled nut "A" until the distance (during change cycle) between the top of the turntable and the stylus point is approximately  $1\frac{1}{8}$ ".

### Pickup Landing Adjustment

Adjust the screw driver landing adjustment stud "B" so the stylus lands  $2\frac{5}{8}$ "  $\pm 1/64$ " from the side of the center post.

### Tripping Adjustment

Adjust the eccentric tripping stud "C" until the mechanism trips when the stylus is  $1\frac{9}{32}$ " from the side of the center post.

### Record Dropping Adjustment

Turn the eccentric screw "E" until the record drops to the turntable without striking the pickup arm.

