


## ACCESS TO TUBES


Remove two knobs and rest instrument grille side downward. Detach pickup and motor cable plugs from chassis. Remove four slotted-head screws from bottom plate to re-

## **Automatic Record Player**

## MODELS 8-EY-4DJ, 8-EY-4FK

35C5 Chassis No. RS-160

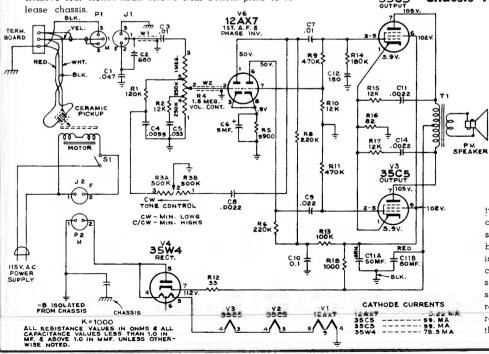

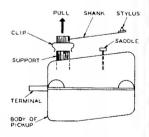

## STYLUS REPLACEMENT

To remove stylus, grip with tweezers at back end and pull away from the pickup. The shank of the stylus holder is imbedded in a rubber block which is set in a "U" shaped spring clip. This spring clip holds the stylus assembly to a plastic support. The shank of the stylus rests in a metal saddle. When replacing stylus, make certain that shank rests firmly in saddle.