
## RCA VICTOR

## 9-ED-32 Series

Chassis No. RS-170

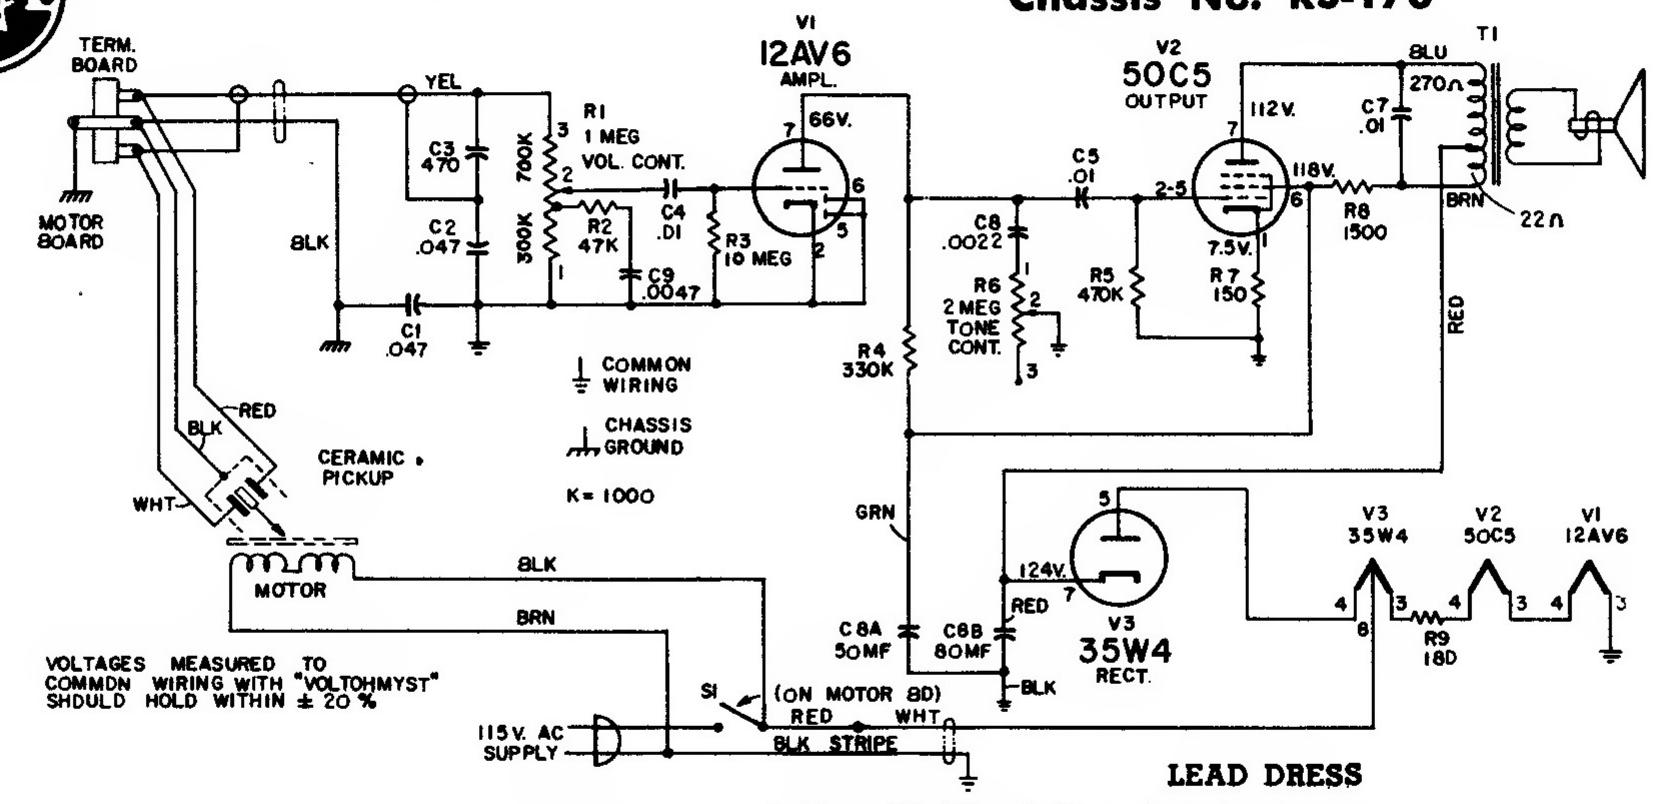

- NOTE—Power to the amplifier chassis is controlled by the power switch on the record changer.
- 1. Dress R2, R3 and C6 against chassis.
- 2. Dress all heater and a.c. power leads close to chassis.
- 3. B- power lead (white with black stripe) should be dressed from knot at entrance to chassis under the lead dress terminal, and then under the electrolytic capacitor and over to its tie point on terminal board.
- 4. The green electrolytic capacitor lead and the blue output transformer lead should be dressed well into corner of chassis at the V3 tube socket.
- 5. Dress all components away from R9.