Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oacillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mid. capacitor, and keep the output as low as possible.

Steps	Connect the high aide of test- oscillator to-	Tune test-osc. to	Turn radio dial to	Adjust the follow- ing for max. peak output
1	I-F grid, in aeries with .01 mfd.	455 kc	Quiet point 1,600 kc end of dial	L8 and L9 2nd I-F transformer
2	1at Det. grid in acries with .01 mfd.			L6 and L7 1at I-F transformer
3	Ant. terminal in acries with 200 mmfd.	1,650 kc	Gang at minimum	C25 (osc.) C31 (osc.)
4	Radiated signal 1300 kc		Signal Frequency	C23 (ant.)
5	Repeat ateps 3 and 4.			

NEEDLE PACHAGE

TURNTABLE

ORIVE

MOTOR

RCA Model V-105

Phonograph Motor Service Data:-

The phonograph motor is of the self starting synchronous type and operates the turntable through friction drive between the motor drive spindle and the rubber tired idler on the rim of the turntable.

The motor should be lubricated once or twice a year by placing a few drops of S. A. E. 20 (or equivalent) on the turntable spindle and saturating the oil retaining felt pads on the motor shaft with S. A. E. 10 oil. Caution—The motor drive spindle and the rubber tire on the idler must be kept clean and entirely free from bil and greaze at all times.





