

2N411

2N409


2N409

R67

2N405

2N306

SEC. 1.6 OHMS

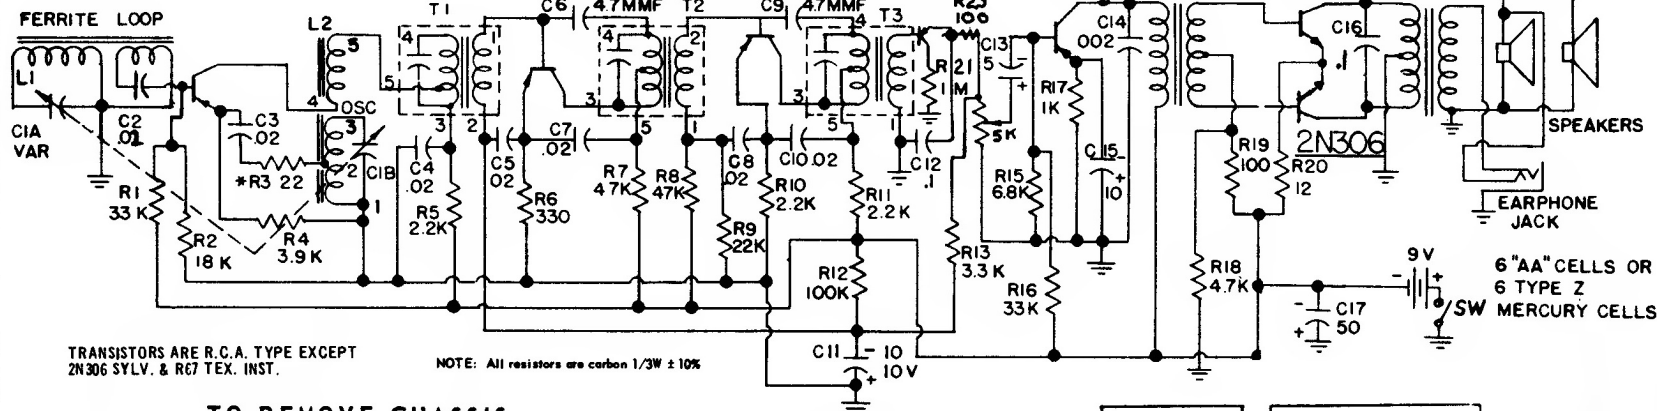

TO REMOVE CHASSIS

1. Remove volume control knob by pulling away from case.
2. Move handle to rear.
3. Release spring clips on each side of cabinet and remove back.
4. Remove battery holder.
5. Unscrew the four chassis corner mounting screws
6. Remove one screw holding volume control bracket.
7. Slide down to bottom of case and out to clear tuning knob from case.


* INSTALLED IN SOME SETS
AT FACTORY



ALIGNMENT

Function	Generator Frequency	Dummy Antenna	Generator Conn.	Adjust for Max. Output	Remarks
1. I.F.	455KC	.1 Mfd Condenser in series with Gen. Lead	On Converter Base	T1, T2, T3	
2. Osc. Trimmer	1620KC		*Test Loop	C1-B	Variable Condenser Set for Minimum capacity
3. Osc. Slug	540KC		*Test Loop	L-2 Slug	Variable Condenser Set For Maximum Capacity
4. Ant. Trimmer	1400KC		*Test Loop	C1-A	Tune 1400 Kc on Variable Condenser

* Standard Hozeitline Loop Model 1150 or 3 turns of wire about 6" diameter placed one foot from set.

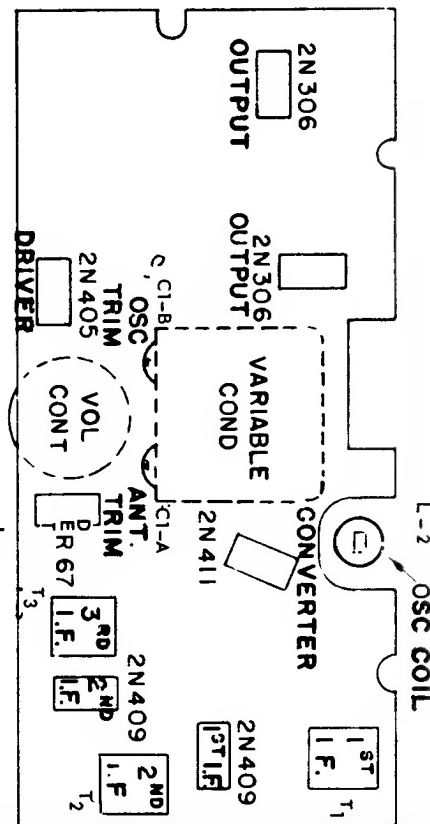

MODEL 71-483

Radio