

Sears, Roebuck & Co. Catalog Models 7086 & 7103 Chassis 110.466, 110.466-1

POBITION OF	Generator	Dunchy	GENERATOR	ADJUSTMENTS	<b>PUNCTION</b>
VARIABLE	Prequency	Antenna	CONNECTION	(In order shown)	
Any 1500 Ke 600 Ke	1500 Ke 600 Ke	.2 mfd.	Grid. 128A7GT *** See Below *** See Note Belo	L3, L4 030, 029 w (Check-Point)	I.F. Osc. R. F. (Check Point)

\*\*\*Run a wire from the output terminal of generator near the receiver. No connection is made between the signal generator and the receiver.