



TRAV-LER Models 60C300, 60C301, 60C302, 60C303, 60C320, 60C321, 60C322, 60C323

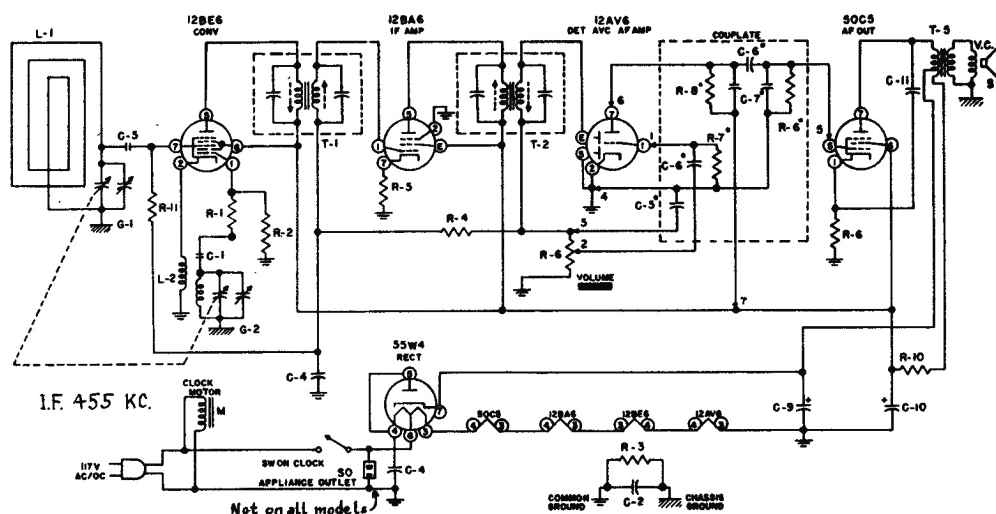

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IR-4	R-1 47 Ω RESISTOR 1/2W. 20%	CC-12	C-1 47 MMF. CERAMIC CONDENSER	SPK-55X	S 4" P.M. SPEAKER
IR-45	R-2 22M Ω RESISTOR 1/2W. 10%	PG-8	C-2 .1 MFD. CONDENSER 400 V.	V.C.	T-5 VOICE COIL
IR-20	R-3 220M Ω RESISTOR 1/2W. 20%	CC-33	C-3 220 MMF. 500V. 20% CER. COND.	L-46	L-1 LOOP ANTENNA
IR-25	R-4 3.3MEG. RESISTOR 1/2W. 20%	CC-4	C-4 .05 MFD. CONDENSER 400 V.	LO-27	L-2 OSC. COIL
IR-195	R-5 20 Ω RESISTOR 1/2W. 10%	C-5	C-5 220 MMF. .002 MFD.	SO-54	S-1 APPLIANCE OUTLET SOCKET
VC-101	R-6 1 MEG. VOLUME CONTROL	C-6	C-6 250 MMF. .005 MFD.	CK-7	M 5W ELECTRIC CLOCK
MC-19	R-7 6.6MEG. 470M Ω	EC-68	C-6 70 MFD. 150 W.V.C. ELECTROLYTIC		
IR-98	R-8 150 Ω RESISTOR 1/2W. 10%	PG-47	C-10 40 MFD. .02 MFD. CONDENSER 400V.		
IR-42	R-9 1000 Ω RESISTOR 1W. 10%	GC-24	G-1 TUNING CONDENSER		
IR-12	R-11 1 MEG. RESISTOR 1/2W. 20%		G-2		
T-1	INPUT I.F. TRANSFORMER				
LI-19	OUTPUT I.F. TRANSFORMER				

TRAV-LER RADIO

MODEL-1130

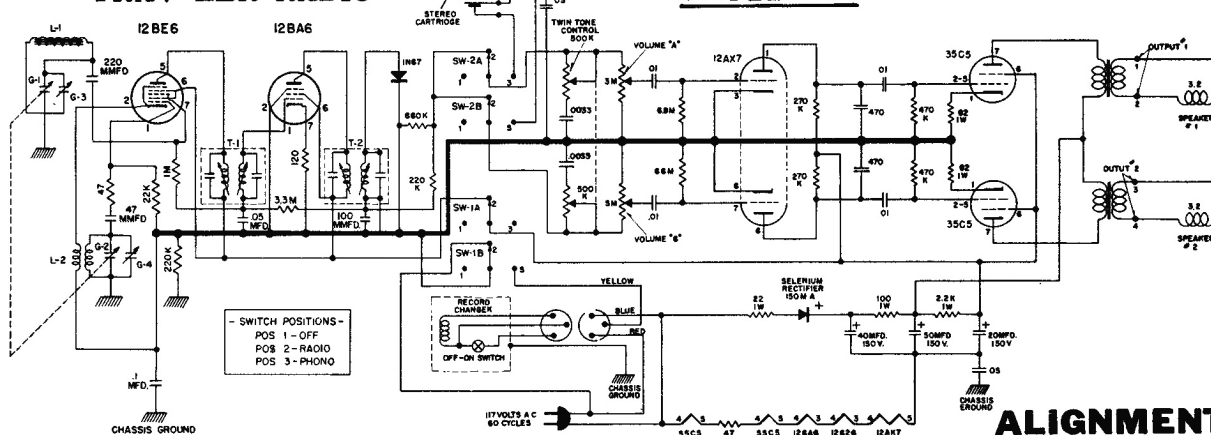

ALIGNMENT

FIRST STEP: Connect the hot lead from the generator to the ANT. section of the gang condenser through a .1 MFD. condenser. The ground lead from the generator must be connected to "B" minus under the chassis. Turn the gang condenser to complete minimum capacity. Set the generator to 455 KC. Adjust the movable iron cores in the IF cans.

SECOND STEP: With the leads from the generator still connected as in IF alignment, adjust the generator to 1610 KC. Make sure that the gang condenser is turned to complete minimum capacity. Adjust the generator to 1610 KC. and adjust the oscillator trimmer of the receiver until the signal is tuned in. Next, turn the gang condenser to complete maximum capacity. Adjust the generator to 540 KC., then adjust the iron core in the end of the oscillator coil until the signal is tuned in.

THIRD STEP: Remove the generator leads from the gang condenser and the chassis. Loosely couple the generator to the antenna by laying the hot generator lead near the antenna rod. Set the generator at 1400 KC. and tune in the 1400 KC. signal on the receiver. Adjust the ANT. trimmer until a maximum signal is noted on the output meter.

