
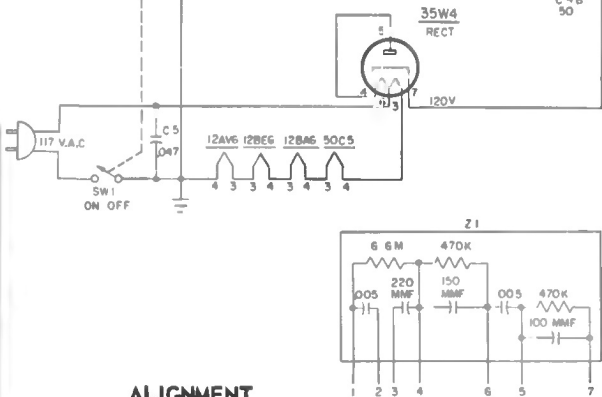


# Westinghouse

## CHASSIS ASSEMBLY V-22238-1

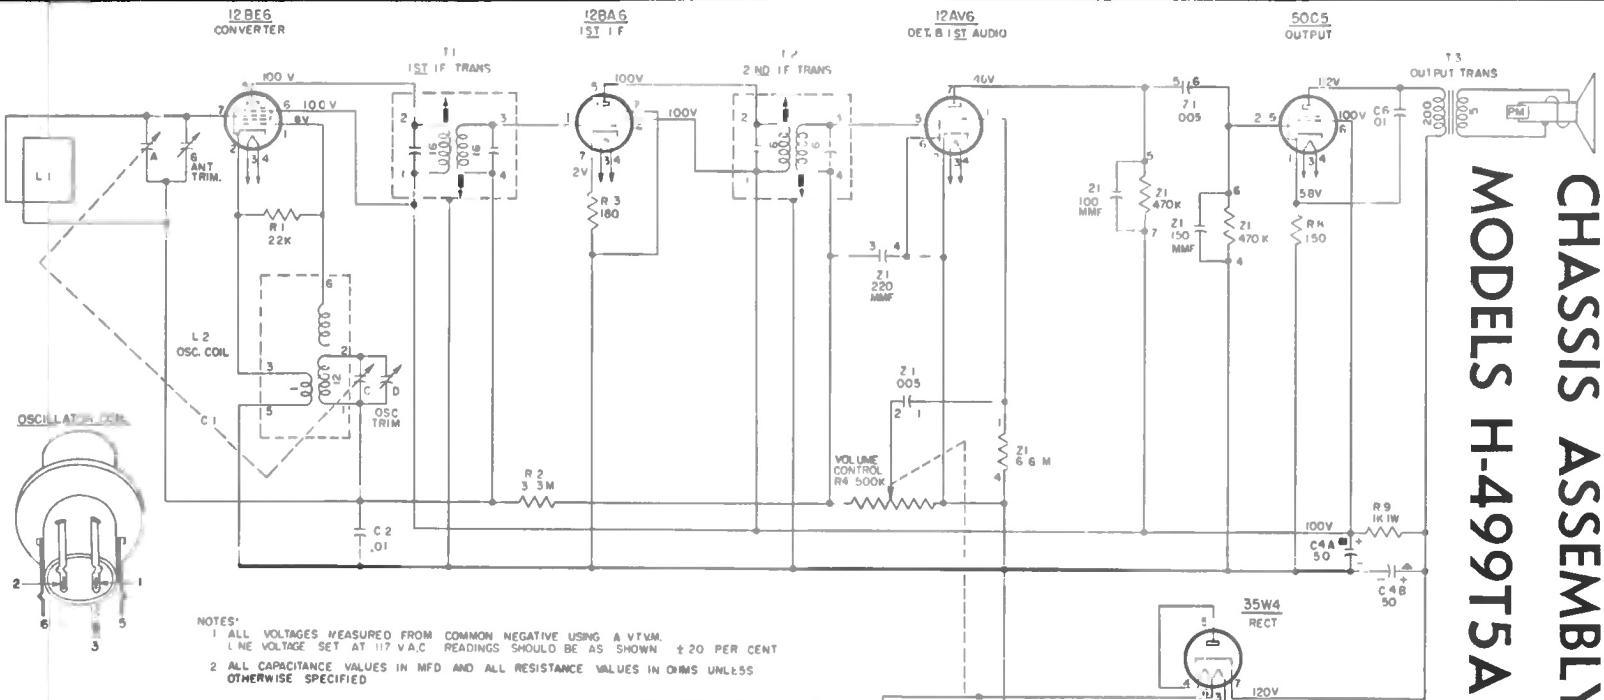

## ALIGNMENT

| Step | Connect Signal Generator to –                                   | Signal Generator Frequency | Radio Dial       | Adjust for Maximum Output                        |
|------|-----------------------------------------------------------------|----------------------------|------------------|--------------------------------------------------|
| 1.   | Stator of ant. tuning capacitor (A) through a 200 mmf capacitor | 455 kc.                    | Minimum capacity | Top and bottom slugs of T2 and T1 in order given |
| 2.   | Same as step 1                                                  | 1625 kc.                   | Minimum capacity | Oscillator trimmer (D)                           |
| 3.   | Radiated signal                                                 | 1400 kc.                   | 1400 kc.         | Antenna trimmer (B)                              |

