
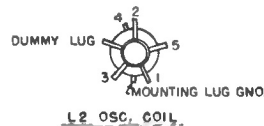
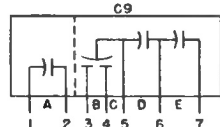


Westinghouse CHASSIS ASSEMBLY V-2237-2

MODELS H-511P4 H-512P4 (Coral)
(Gray)

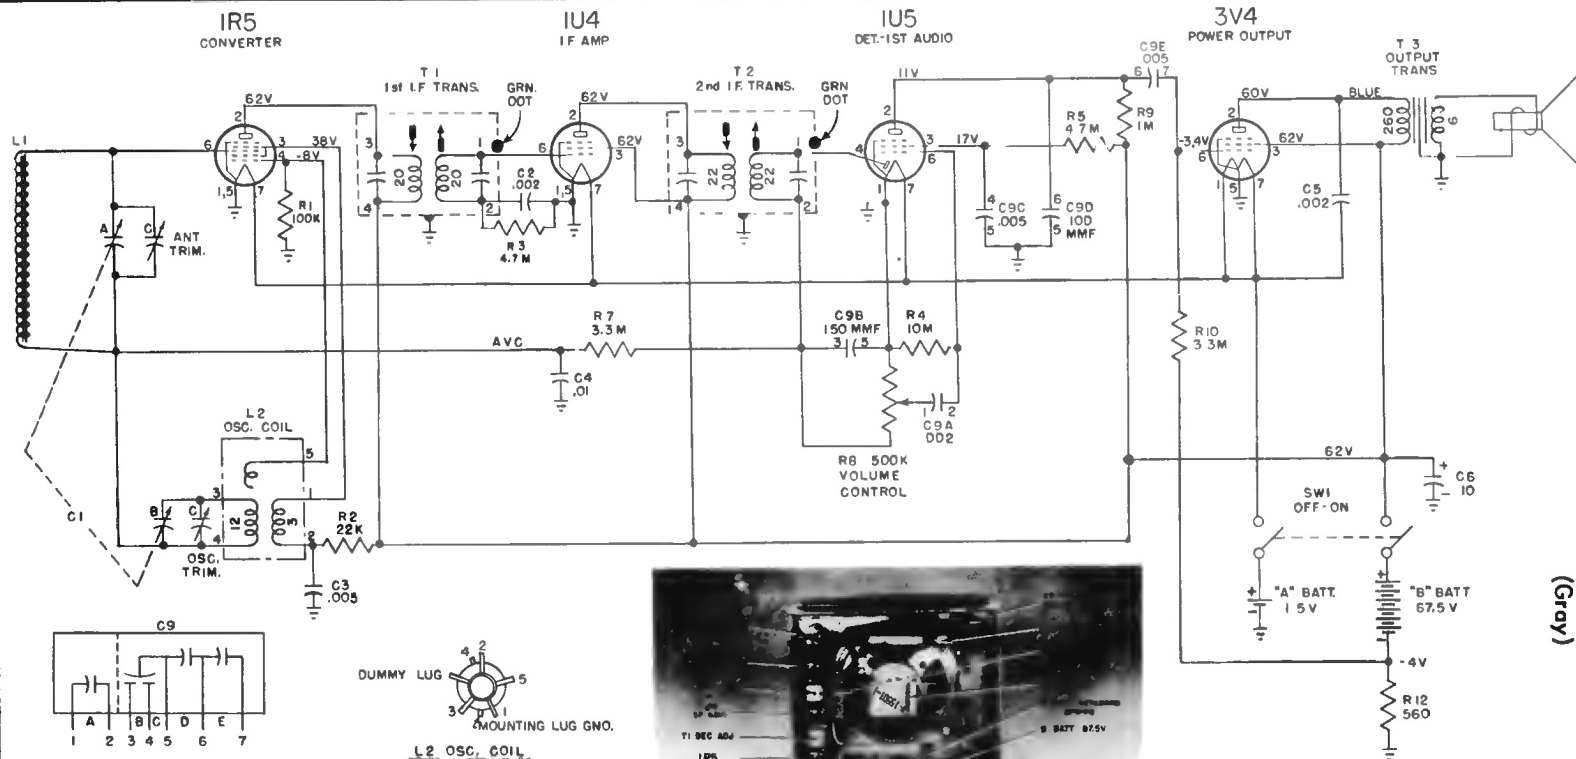

- NOTES: 1 ALL VOLTAGES MEASURED FROM CHASSIS GROUND USING A VTVM. READINGS SHOULD BE AS SHOWN $\pm$ 20 PER CENT.
2 ALL CAPACITANCE VALUES IN MFD AND ALL RESISTANCE VALUES IN OHMS UNLESS OTHERWISE STATED.

ALIGNMENT

While making the following adjustments, keep the volume control set for maximum output and the signal generator output attenuated to avoid AVC action.

Step	Connect Signal Generator	Signal Generator Frequency	Radio Dial	Adjust for Maximum Output
1	Stator of R-F tuning capacitor (A), through a .01 mfd. capacitor	455 kc.	Minimum capacity	Top and bottom slugs in 2nd and 1st I-F trans. in order given
2	Radiated Signal	1600 kc.	Minimum capacity	Osc. trimmer (D)
3	Radiated Signal	1400 kc.	1400 kc.	Ant. trimmer (C)

