WESTINGHOUSE

Models <u>H-51MP1</u>, <u>H-51MP2</u>, H-51MP3, Chassis V-2508-1

- CHASSIS REMOVAL
- Remove 4 phillips screws holding the motorboard. Lift the motorboard.
- 2. Disconnect the speaker leads.
- Remove the chassis cover (2 screws) and unsolder the 2 leads from the pickup cartridge and 2 leads from the phono motor.
- Remove the 2 speed nuts holding the chassis to the motorboard.

