

It is recommended that the chassis be isolated from the power line by means of an isolation transformer. While making the following adjustments, keep the volume control set for maximum output and the signal generator output attenuated to avoid AVC action.

STEP	CONNECT SIGNAL GENERATOR TO	SIG. GEN FREQ. MOD. 400 CYCLES	RADIO DIAL SETTING	YTYM ACROSS VOICE COIL ADJUST FOR MAX. OUTPUT
1	Pin No. 7 of the 12BE6 through a 200 mmf. cap.	455kc	minimum cap.	Top & bottom slugs of T2 and T1 in order given.*
2	Stator of antenna tuning capacitor (A) through a 200 mmf. capacitor	1625kc	minimum capacity	Oscillator Trimmer (F)
3	Same as Step 2	1400kc	1400kc	RF Trimmer (D)
4	Radiated signal	1400kc	1400kc	Antenna Trimmer (B)

* It is recommended that a fiber aligning tool that snugly fits the slot in the powdered iron core be used to prevent chipping of the slot.

