

Westinghouse

MODELS
H-570T4

(Mocha)


H-571T4

(Ivory)

H-572T4


(Pink)

Chassis V-2239-4

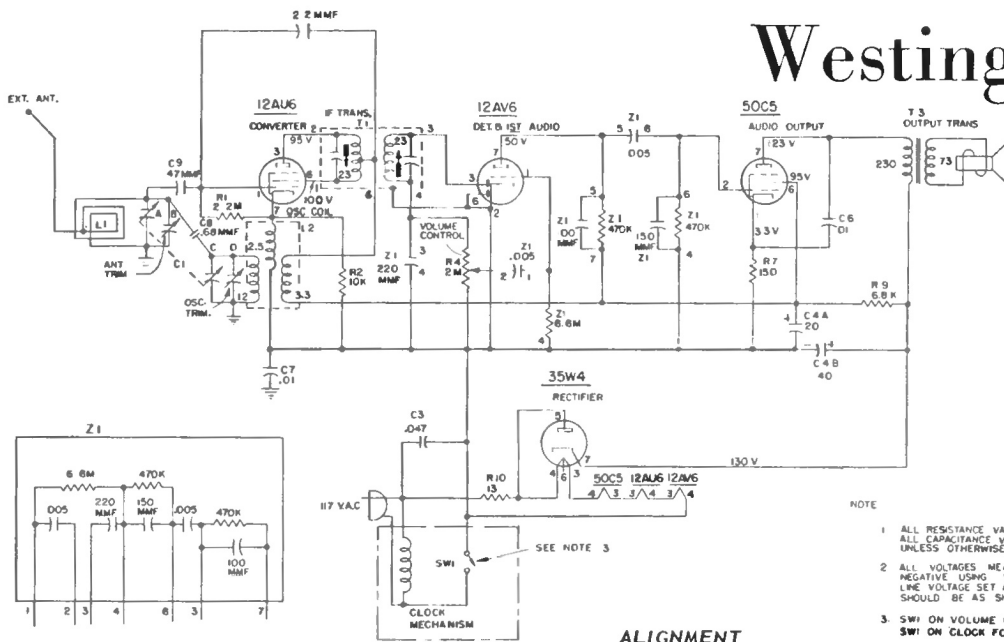


ALIGNMENT

Step	Connect Signal Generator to -	Signal Generator Frequency	Radio Dial	Connect V.T.V.M. Across Voice Coil and Adjust for Maximum Output -
1	Stator of ant. tuning capacitor (A) through a 200 mmf capacitor	455 kc.	minimum capacity	Top and bottom slugs of T1
2	Radiated signal	1625 kc.	minimum capacity	Oscillator trimmer (D)
3	Radiated signal	1400 kc.	1400 kc.	Antenna trimmer (B)

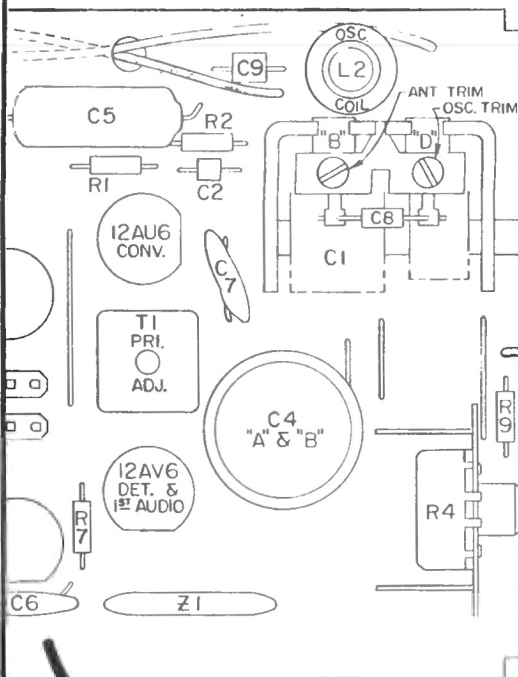

BLACK TO
CLOCK TOP VIEW OF CHASSIS

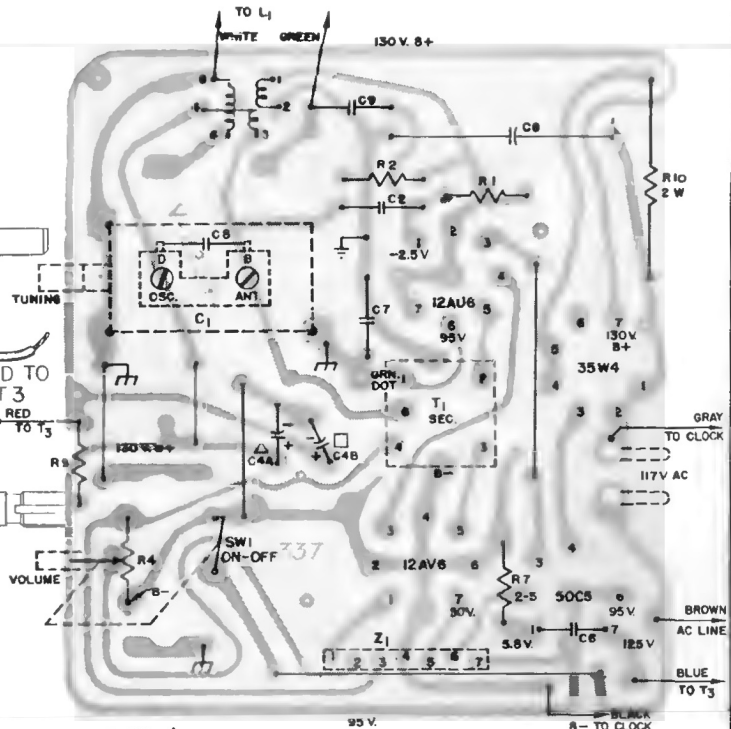

CHASSIS GND
COMMON 8 -

BOTTOM VIEW OF CHASSIS