


WESTINGHOUSE Chassis V-2507-8, Models H-70ACS1, H-70ACS3, H-70ACS4

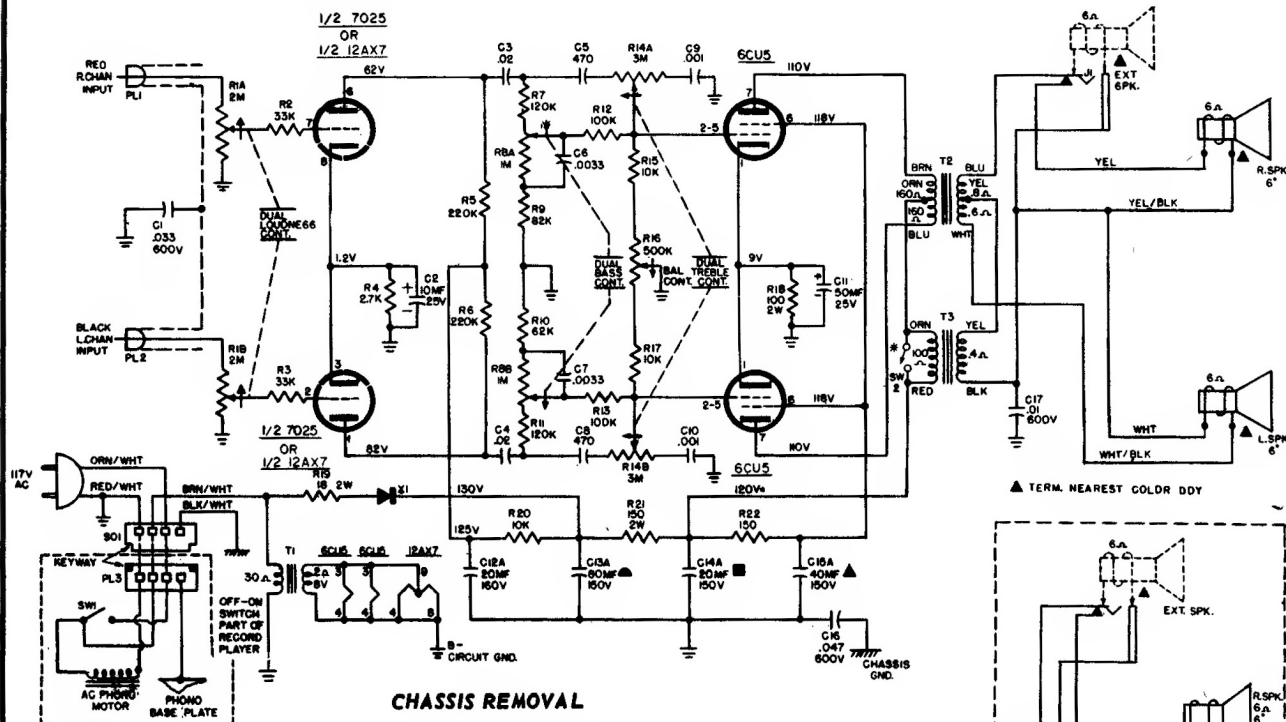

CHASSIS REMOVAL

1. Remove control knobs.
 2. Disconnect Amp-Lok type plug from record changer.
 3. Remove phono plugs from record changer noting color of cables and their respective jacks.
 4. Disconnect speaker leads noting connections with regard to lead color and speaker phasing dots.
 5. Remove two nuts securing left speaker baffle and remove baffle.
 6. Remove four nuts securing chassis and remove chassis.
- NOTE: Be sure during chassis installation that phono cables to changer and leads to speakers are properly phased (refer to schematic diagram for speaker lead color coding).

NOTES:

1. ALL CAPACITANCE VALUES LESS THAN 1 ARE IN MPD, AND VALUES GREATER THAN 1 ARE IN MMFD, WHILE ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
2. D.C. VOLTAGES MEASURED FROM B-USING VTVM, LINE VOLT. SET AT 117 V. AC. READINGS SHOULD BE WITHIN $\pm 20\%$.
3. AMPLOK CONNECTORS VIEWED FROM CONTACT END.
4. REAR SECTIONS OF ALL CONTROLS ARE RIGHT CHANNEL.
5. ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END).
- * SW2 USED IN EARLY PRODUCTION ONLY, THIS SWITCH IS OPEN IN STEREO POSITION.

