 


Models H-790P6, -GP, H-791P6, H-791P6GP, Chassis V-2393-4.



Frequency Range 540 to 1600 KC
Intermediate Frequency 455 KC

1. Remove the tuning knob as follows. Insert a loop of string (see figure 1) under the tuning knob and pull the knob up and out of the cabinet front. Remove the hex head screw.
2. Remove the back of the cabinet by loosening the two coin-slot screws on the back.
3. Remove the two 1" long hex head screws securing the chassis to the cabinet front.
4. Remove the printed circuit chassis, battery case, speaker spacers, rubber grommet and speaker.
5. To insert the printed circuit chassis back into the cabinet use the reverse procedure.

