


Symbol	Description	Symbol	Description	Symbol	Description
C-1 C-2 C-3 C-4, -5 C-6, -7 C-8a C-8b	Tuning Condenser .05 mfd., Paper Capacitor .001 mfd., Paper Capacitor .005 mfd., Paper Capacitor .01 mfd., Paper Capacitor 15 mfd., Dry Electrolytic 30 mfd., Dry Electrolytic	R-2	.02 mfd., Paper Capacitor .002 mfd., Paper Capacitor 30,000 ohm, Volume Control 15 megohm, Carbon Resistor 470,000 ohm, Carbon Resistor 3,300 ohm, Carbon Resistor 100,000 ohm, Carbon Resistor	R-8 R-9 R-10 L-1 L-2	470,000 ohm, Carbon Resistor 150 ohm, Carbon Resistor 4,700 ohm, Carbon Resistor 162 ohm, Power Cord Resistor Antenna Coil RF Coil Output Transformer

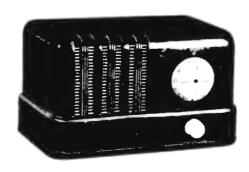

## VOLTAGE CHART

Tube No.	6K7GT	6J5GT	6F5GT	25L6GT	25 <b>Z</b> 6GT
Plate to -B Volts	88	30 *	35 *	132	120. AC
Screen to -B Volts	88			88	
Cathode to -B Volts	0	1.3	0	5.5	140
Filament Volts	6.4	6.3	6.2	25.0	25.0

Voltage measured when volume control is set to maximum. Line Voltage—120 AC. No signal input. Measured on 500-volt scale.

On DC, voltages should read approximately 10% lower.

## Electrical Power Output

Undistorted.	 		-		-				v	w			. 1	1.4	W	atts	
Maximum.	 												. 4	2.0	W	atts	

## Loudspeaker-Permanent Magnet

Outside Cone Diameter	$4\frac{1}{2}$ inches
Voice Coil Impedance (400 cycles)	3.5 ohms

## ALIGNMENT

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna lead. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:

With gang condenser plates completely closed, the tun-

ing mark should be over the last mark on the dial.

2. Tune receiver to the 1500 KC point or the Tune receiver to the 1500 KC point on the dial; then align trimmers on the gang condenser at 1500 KC for a maxi-

mum output meter reading.

Precaution—One side of the power supply is connected to the chassis. Do not connect chassis to any external ground.