



TRAV-LER Models 60C300, 60C301, 60C302, 60C303, 60C320, 60C321, 60C322, 60C323

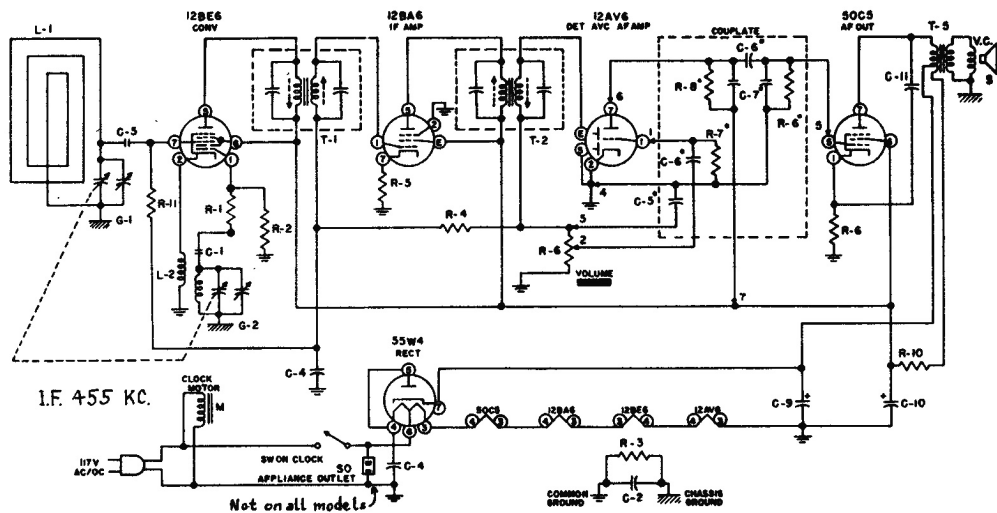

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IR-4	R-1 47 Ω RESISTOR 1/2W. 20%	CC-12	C-1 47 MMFD. CERAMIC CONDENSER	SPK-55X	4' P.M. SPEAKER
IR-45	R-2 22M Ω RESISTOR 1/2W. 10%	PG-8	C-2 .1 MFD. CONDENSER 400 V.	S	V.C.
IR-20	R-3 22M Ω RESISTOR 1/2W. 20%	CC-33	C-3 220 MMFD. 500V. 20% CER. COND.	T-5	OUTPUT TRANSFORMER
IR-25	R-4 3.3MEG. RESISTOR 1/2W. 20%	PG-3	C-4 .05 MFD. CONDENSER 400 V.	LL-46	LOOP ANTENNA
IR-55	R-5 20 Ω RESISTOR 1/2W. 10%		C-5 220 MMFD.	LO-27	L-1
VC-101	R-6 5.0MEG. VOLUME CONTROL		C-6 .002 MFD.	SO-54	OSC. COIL
MC-19	R-7 6.6MEG.	MG-16	C-7 250 MMFD.		APPLIANCE OUTLET SOCKET
	R-8 470M Ω		C-8 .005 MFD.	CK-7	ELECTRIC CLOCK
IR-98	R-9 150 Ω RESISTOR 1/2W. 10%	EC-68	C-9 70 MFD. 150 W.V.O. ELECTROLYTIC		
IR-42	R-10 1000 Ω RESISTOR 1W. 10%	PG-47	C-10 40 MFD.		
IR-12	R-11 1MEG. RESISTOR 1/2W. 20%		C-11 .02 MFD. CONDENSER 400V.		
LI-19	T-1 INPUT I.F. TRANSFORMER	GC-24	G-1 TUNING CONDENSER		
	T-2 OUTPUT I.F. TRANSFORMER		G-2		

TRAV-LER RADIO

MODEL-1130

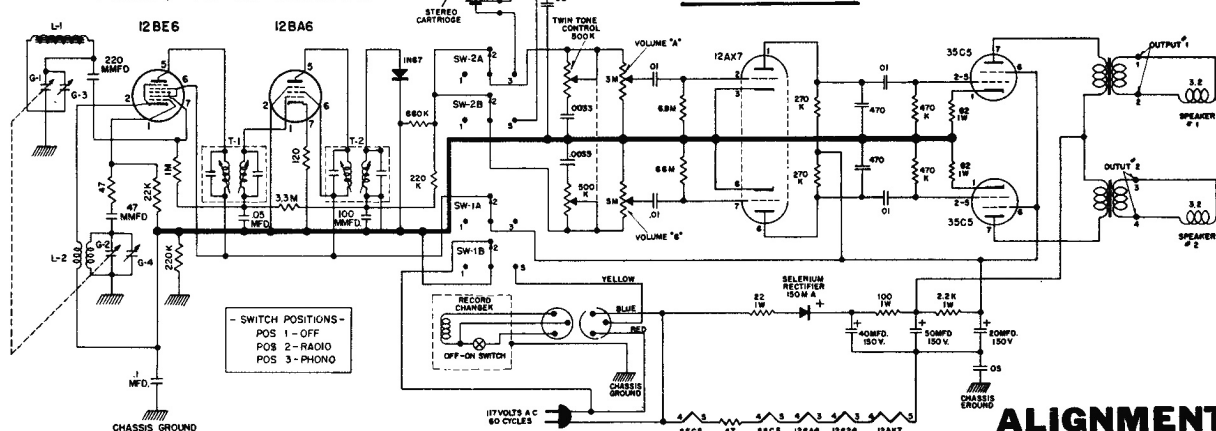

ALIGNMENT

FIRST STEP: Connect the hot lead from the generator to the ANT. section of the gang condenser through a .1 MFD. condenser. The ground lead from the generator must be connected to "B" minus under the chassis. Turn the gang condenser to complete minimum capacity. Set the generator to 455 KC. Adjust the movable iron cores in the IF cans.

SECOND STEP: With the leads from the generator still connected as in IF alignment, adjust the generator to 1610 KC. Make sure that the gang condenser is turned to complete minimum capacity. Adjust the generator to 1610 KC. and adjust the oscillator trimmer of the receiver until the signal is tuned in. Next, turn the gang condenser to complete maximum capacity. Adjust the generator to 540 KC., then adjust the iron core in the end of the oscillator coil until the signal is tuned in.

THIRD STEP: Remove the generator leads from the gang condenser and the chassis. Loosely couple the generator to the antenna by laying the hot generator lead near the antenna rod. Set the generator at 1400 KC. and tune in the 1400 KC. signal on the receiver. Adjust the ANT. trimmer until a maximum signal is noted on the output meter.

