



- \* - INDICATES LEADS FROM TUNER COIL ASS'Y.
- \*\* - SEE SERVICE PARTS LIST FOR REPLACEMENT.
- - COLORS OF TERMINALS ON SERVICE. PART.
- Δ - OSCILLATOR GRID VOLTAGE AT 1000 KC.
- \*\*\* - DOTTED LINE SHOWS WIRING OF EARLY PRODUCTION SETS. LATE PRODUCTION SETS AND SERVICE TRANSFORMER (6066) ARE WIRED INTERNALLY.

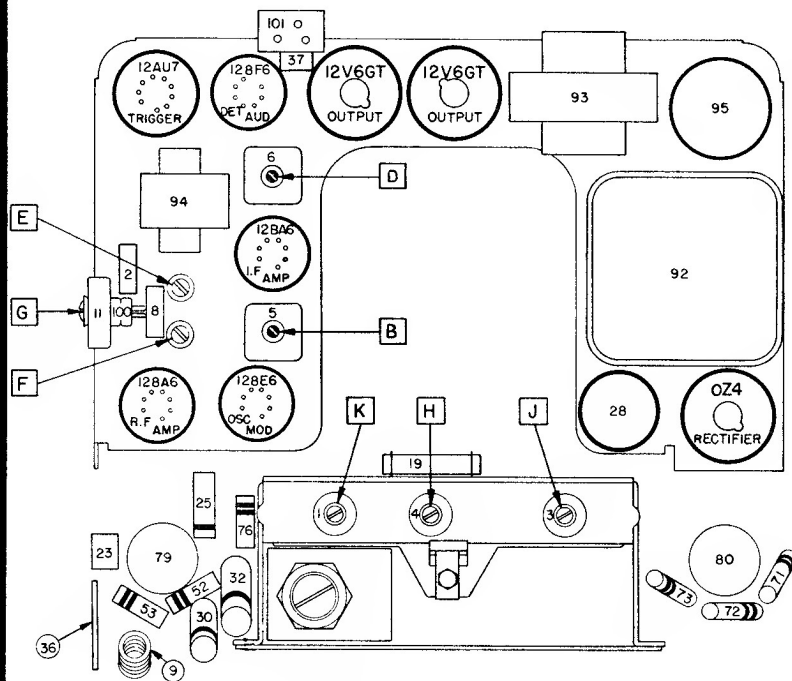

PARTS LAYOUT — TUBE VIEW

### PUSH BUTTON SET-UP PROCEDURE

No push button set-up is necessary. However, the number of stations on which the tuner will stop can be controlled through use of the Sensitivity Control.

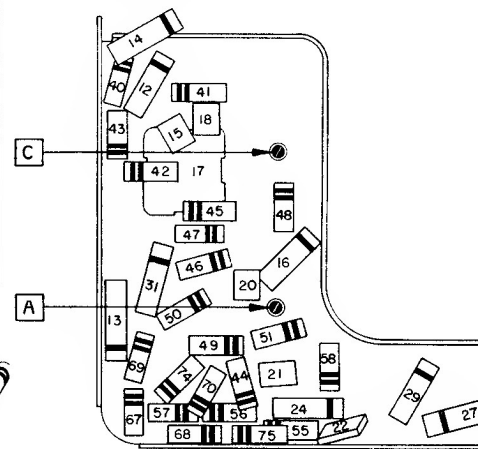

PARTS LAYOUT —  
CHASSIS VIEW

### SIGNAL SEEKING TUNER ALIGNMENT PROCEDURE

**NOTE:** When aligning the signal seeker tuner type radio, be sure to use a vacuum tube voltmeter as indicated and be sure to follow the alignment sequence given—(Notice that the primary of the 2nd I.F. is aligned first.)

Output Meter Connection ..... VTVM from AVC Line to chassis (see parts layout.)  
 Generator Return ..... Receiver Chassis  
 Dummy Antenna ..... In Series With Generator  
 Volume Control ..... Maximum Volume  
 Tone Control ..... Treble  
 Generator Output ..... Not to exceed 2 volts at VTVM

Step	Dummy Antenna	Connect Signal Generator To	Signal Generator Frequency	Tune Receiver To	Adjust in Sequence For Output Indicated
1	0.1 Mfd.	12BE6 Grid (Pin 8)	262 KC	*High Frequency Stop	A, B, C (Max.)
2	0.1 Mfd.	12BE6 Grid (Pin 7)	262 KC	High Frequency Stop	D (Min.)
3	.000082 Mfd.	Antenna Connector	1615 KC	High Frequency Stop	**E, F, G (Max.)
4	.000082 Mfd.	Antenna Connector	600 KC	Signal Generator Signal	J, K (Max.)
5	.000082 Mfd.	Antenna Connector	1615 KC	Signal Generator Signal	F, G (Max.)
6	.000082 Mfd.	Antenna Connector	1000 KC	Signal Generator Signal	***L

\*To tune to high frequency, put a 0.070" feeler gauge (or bare #13 wire) in slot against the high frequency stop. Depress station selector bar and allow the planetary arm to run against the feeler gauge. Turn the radio off and then back on.

\*\*Before making this adjustment, check the setting of oscillator core "H." The rear of the core should be  $1\frac{3}{8}$ " from the mounting end of the coil form. This measurement is readily made by inserting a suitable plug in the mounting end of the coil form. The core adjustment is made from the mounting end of the coil form with an insulated screwdriver. (It will be necessary to steady the core guide bar while making these adjustments. This can be done by applying a downward pressure on the guide bar at the antenna coil end.) If this adjustment is necessary, first dissolve the glyptal seal on the core stud and be sure to re-seal after making the adjustment.

\*\*\*"L" is the pointer adjustment screw on the end of the core guide bar—adjust so pointer reads 1000 KC.

With the radio installed and the antenna plugged in, adjust the antenna trimmer "G" for maximum volume with the radio tuned to a weak station between 600 and 1000 KC (see sticker on case.)