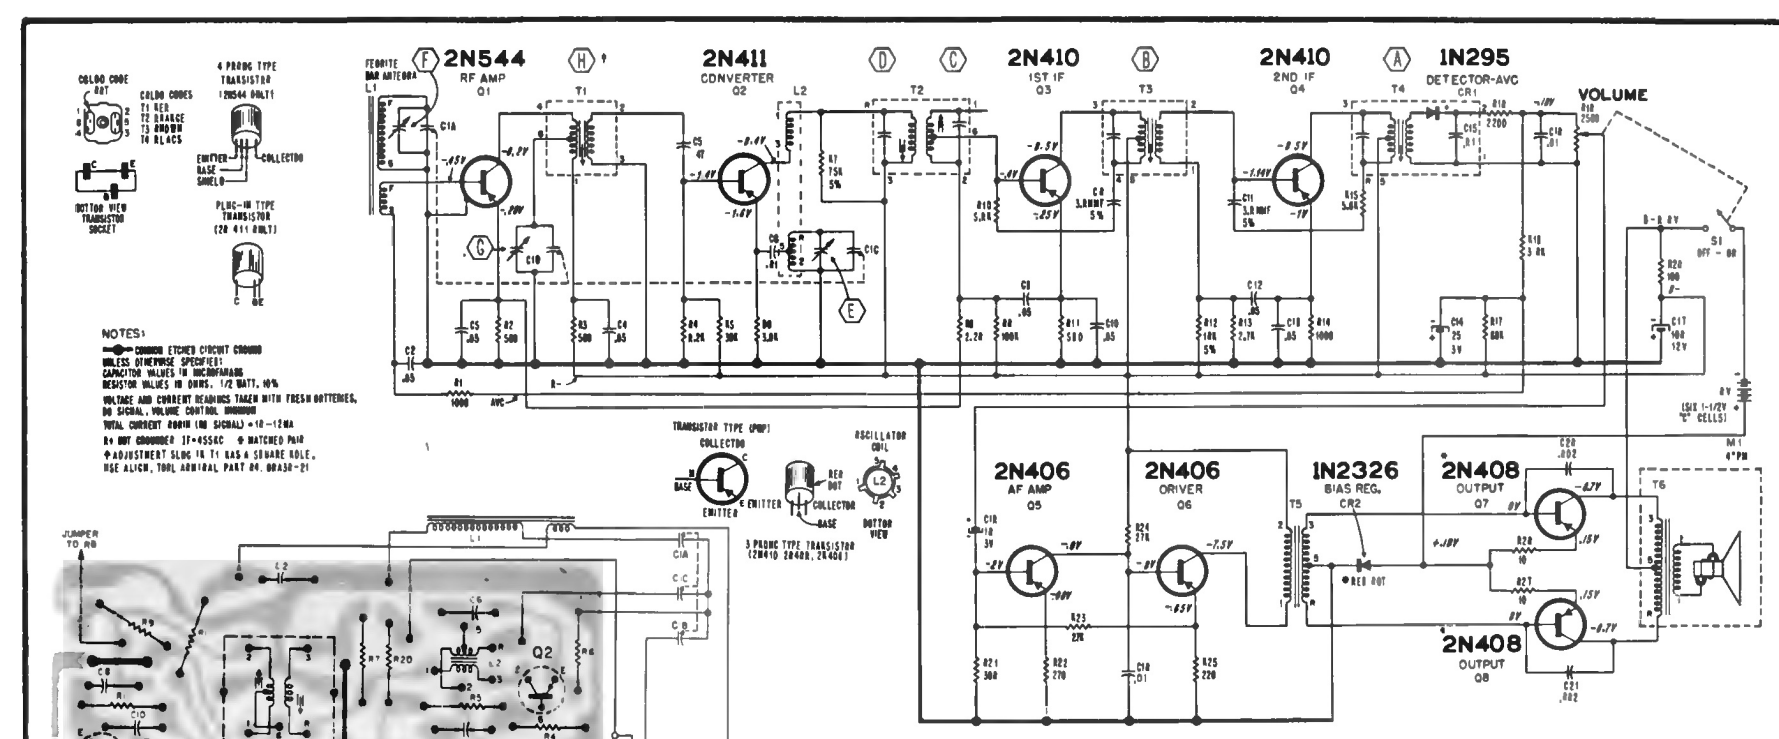

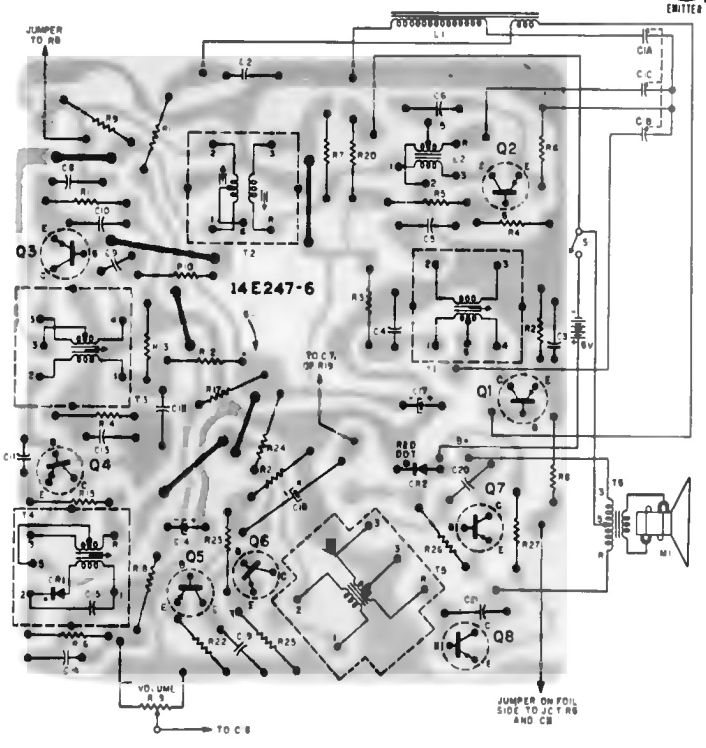

Rear View of Etched Wiring Board. Gray area represents etched wiring, black symbols and lines represent components on opposite side.

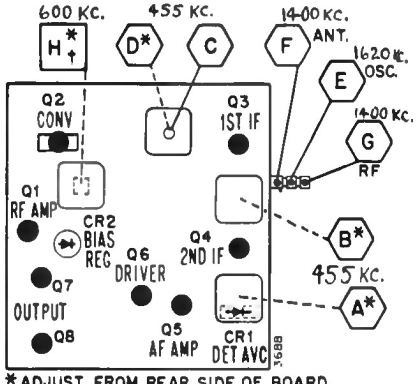

Top View of Chassis Showing Transistor and Alignment Point Locations.

REMOVING CHASSIS FROM CABINET

1. Remove the two knobs plus the two chassis mounting screws at the bottom of the cabinet, if used.
2. Unsnap back cover and remove battery case.
3. Remove the two nuts at the right corners of the chassis.
4. Keeping one hand on front escutcheon, slide chassis to right to remove from cabinet.

NOTE: The left side of the chassis (from rear) is held only by two flanges on the escutcheon.

WARNING: NEVER ALLOW THE BATTERY CONNECTORS ON BATTERY HOLDER TO COME IN CONTACT WITH THE METAL CHASSIS.

The contact of the negative clip to the metal chassis, even with the set turned off, can damage the "Battery Miser" diode.

Admiral

MODEL Y2127
CHASSIS 8D2