Admiral

Chassis 8S1, Models 561, 566, exact material.
Chassis 8S1A, Models 811, 816, include clock.

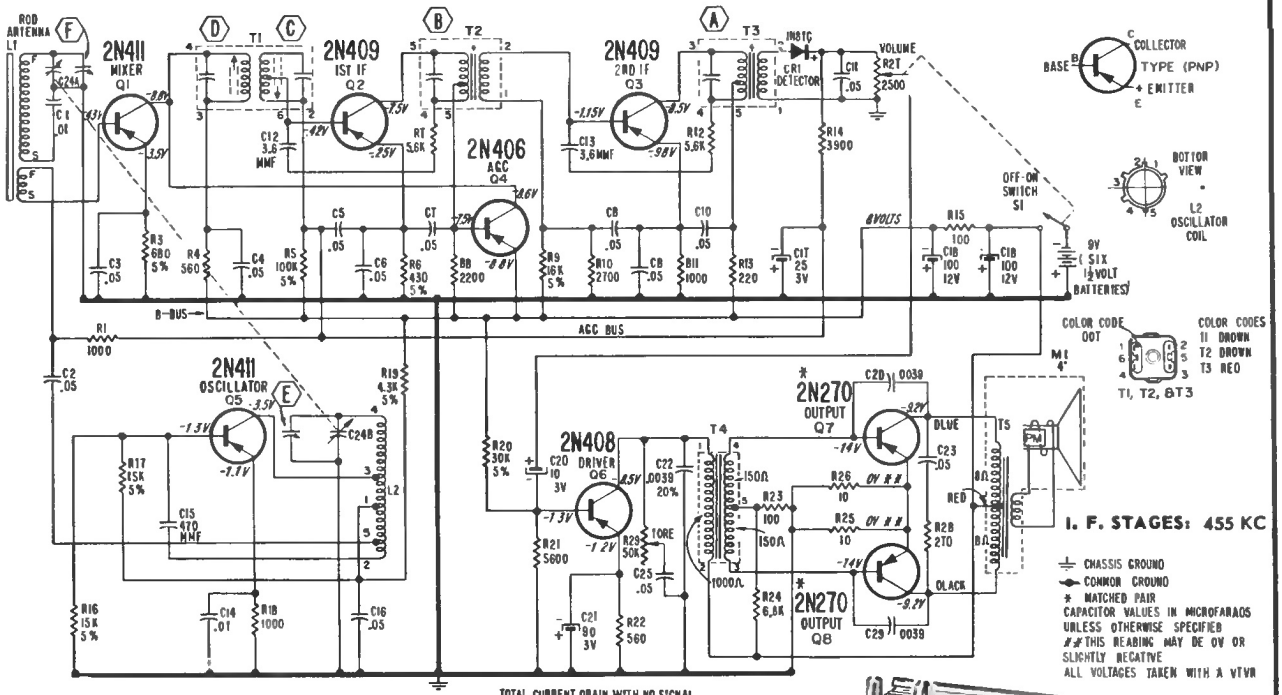

TOTAL CURRENT DRAIN WITH NO SIGNAL AND VOLUME CONTROL SET AT MINIMUM-8.5MA

REMOVING CHASSIS

1. Remove 2 screws near front edge of cabinet bottom.
2. Remove 2 screws from upper section of cabinet back.
3. Pull chassis and front panel free of cabinet.

The speaker, volume and tone control, and printed chassis board are all fastened separately with screws to the front panel. Remove them individually as required by removing their mounting screws.

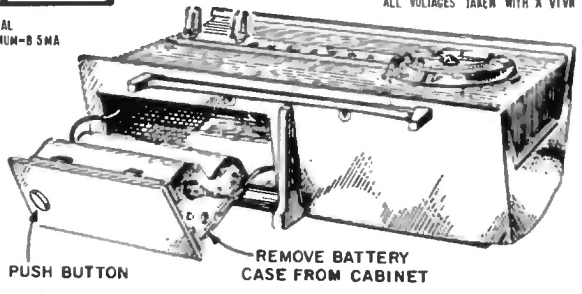

Removing Battery Case.

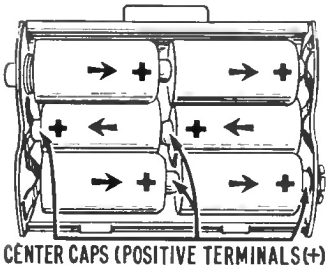

Battery Case Showing Batteries in Correct Position.

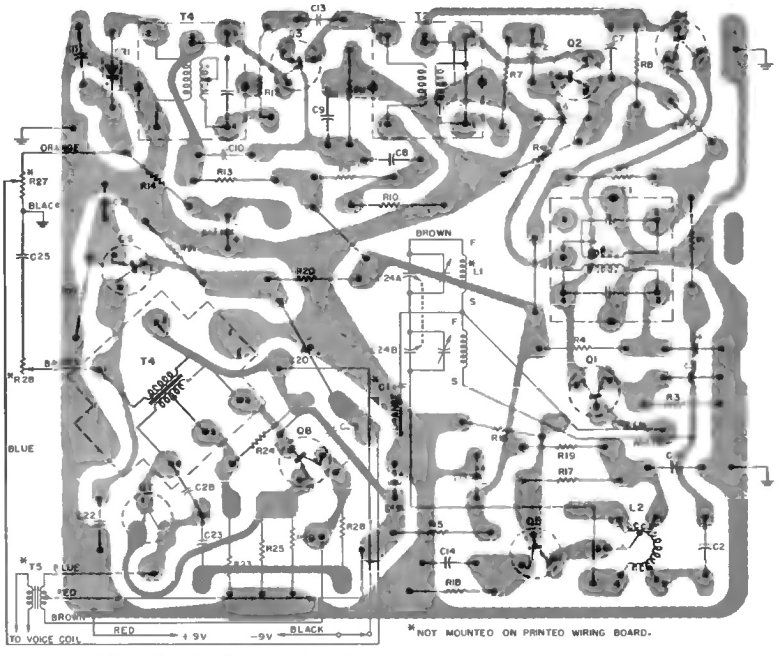

View of Printed Wiring Board. Gray area represents printed wiring, black symbols and lines represent components.

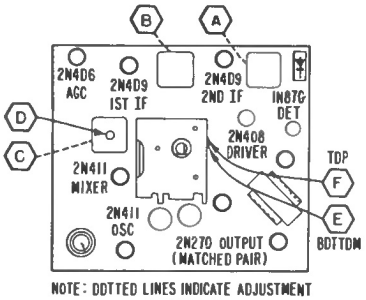

NOTE: DOTTED LINES INDICATE ADJUSTMENT UNDER BOARD

Transistor and Alignment Locations.