GENERAL ELECTRIC

Models P725 and P726

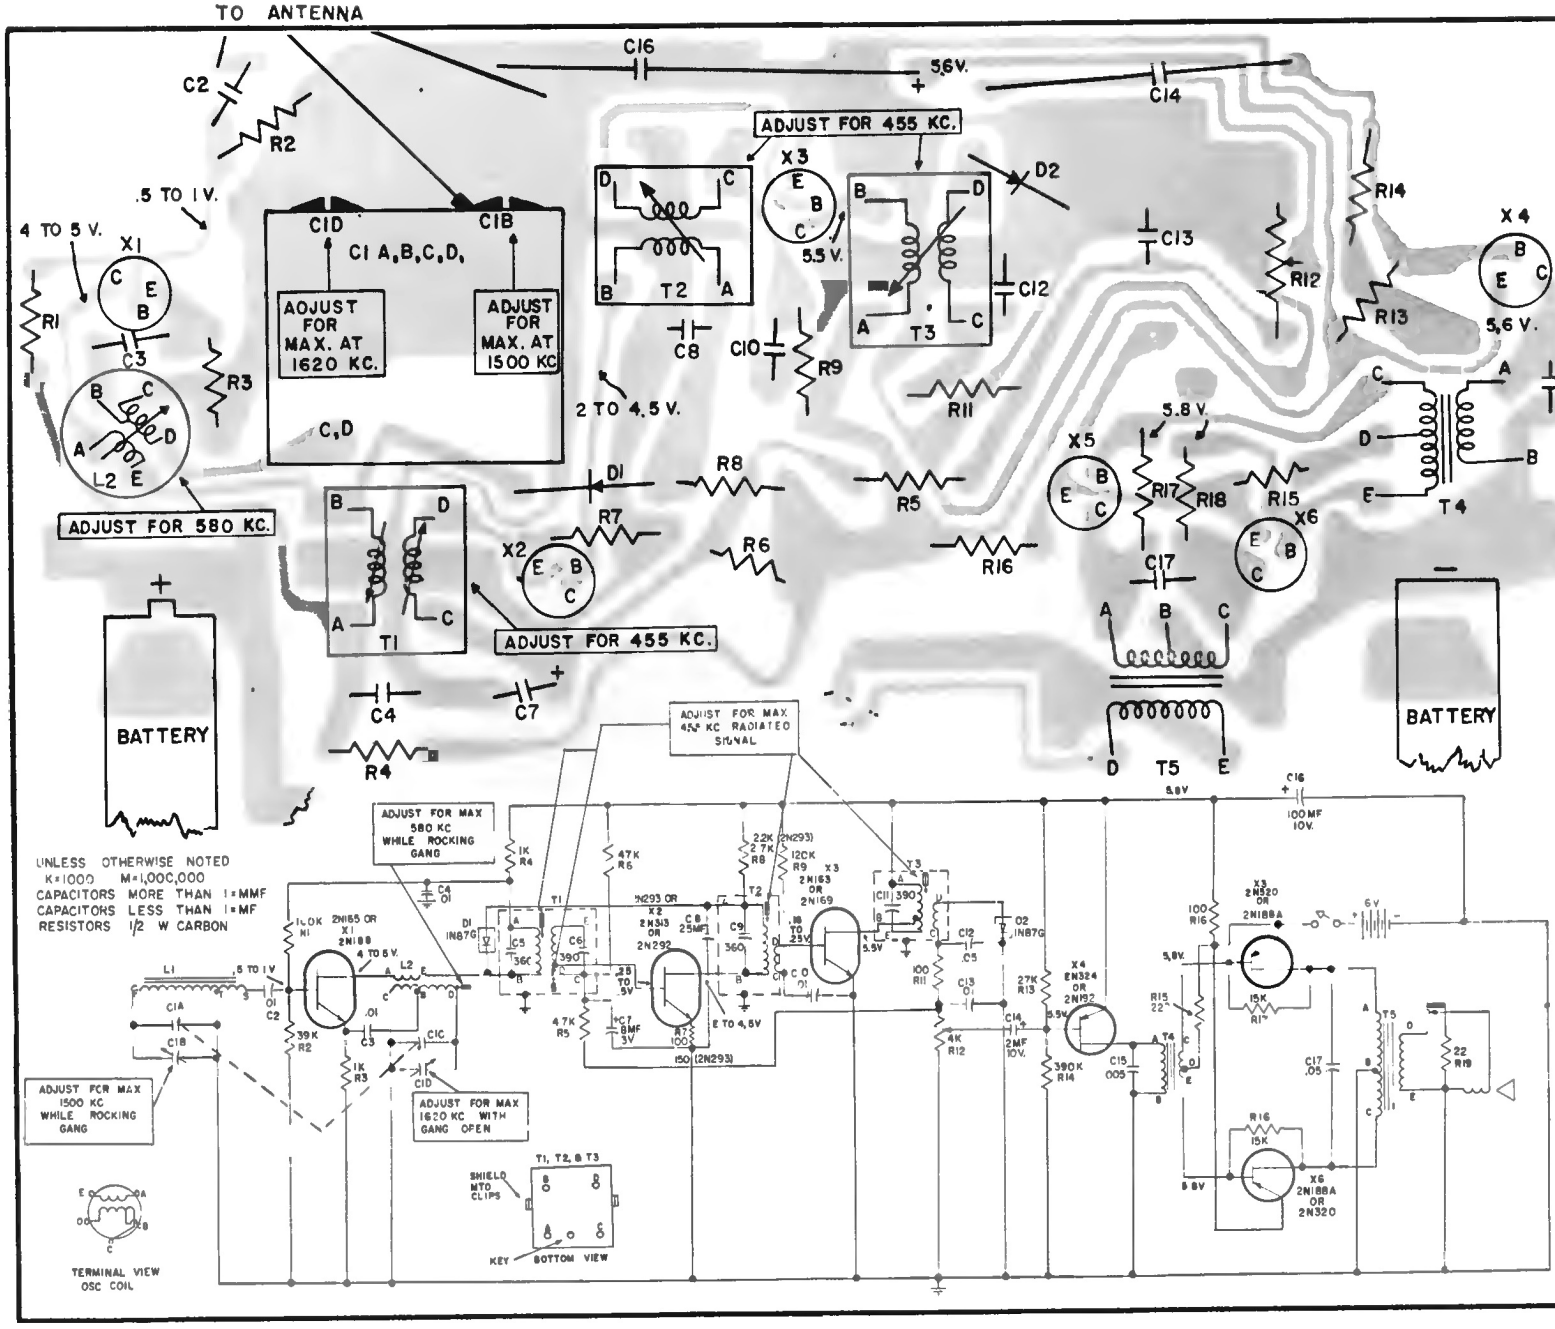

CHASSIS REMOVAL

Remove both knobs. Remove the 4 batteries. Unsolder the two leads on the speaker; unscrew the 5 screws holding chassis to cabinet.