GENERAL ELECTRIC

RADIO MODEL T-100A

Model T100A. (Model C403A is similar except for clock)

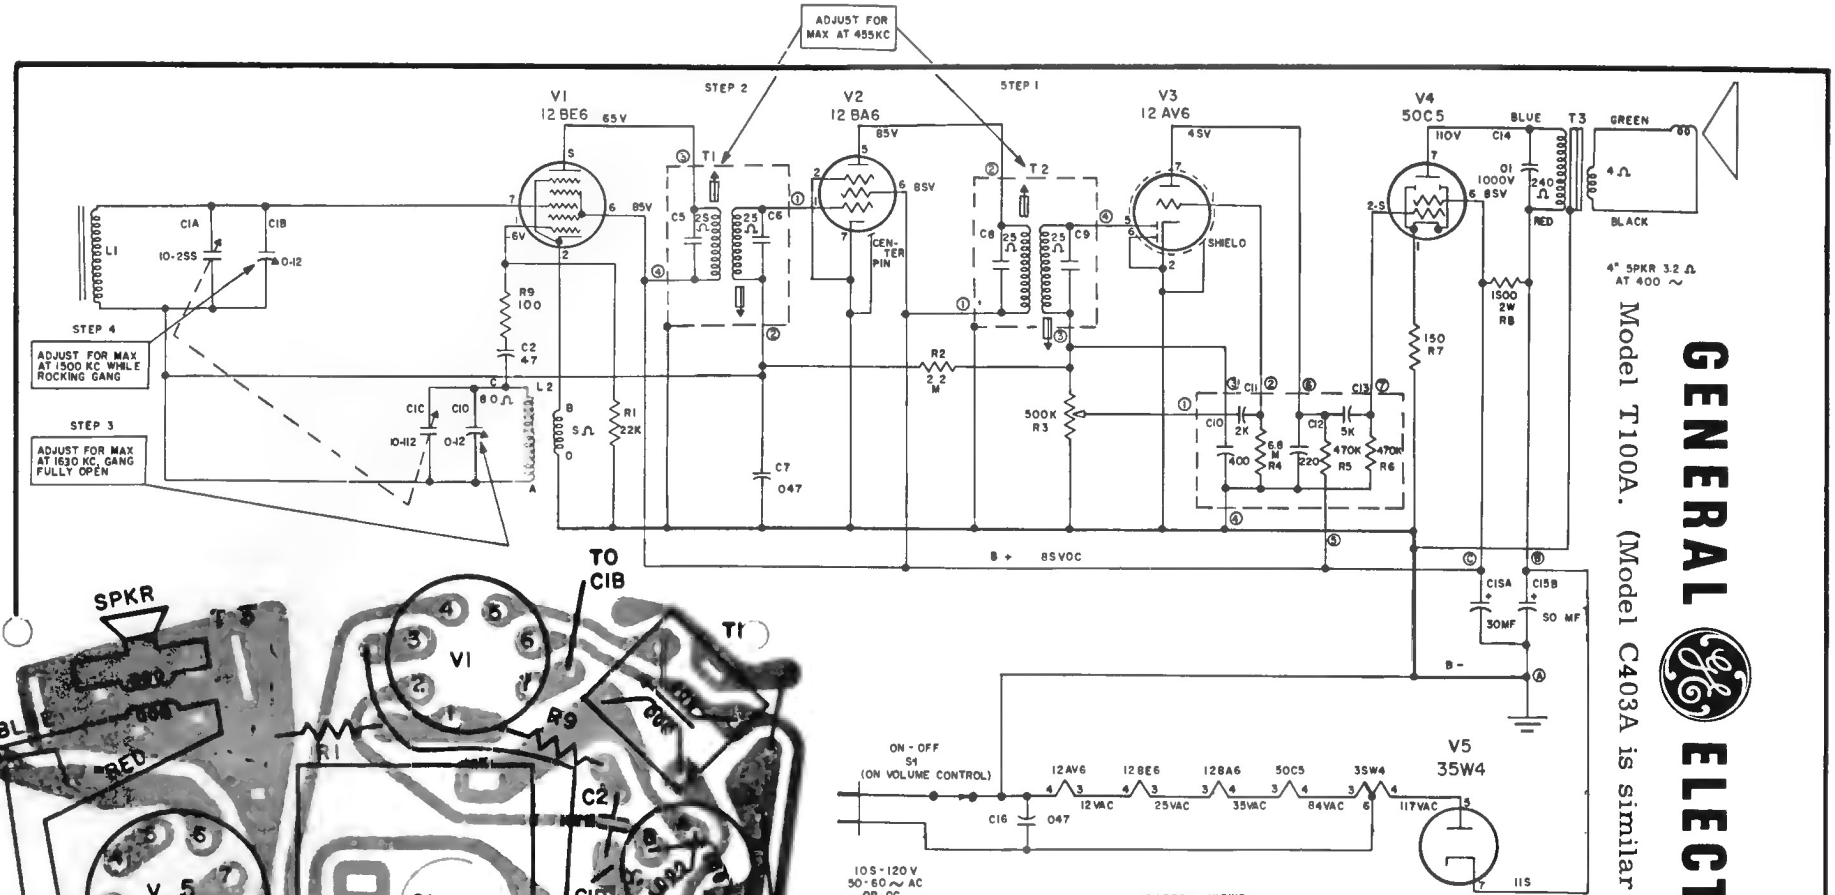

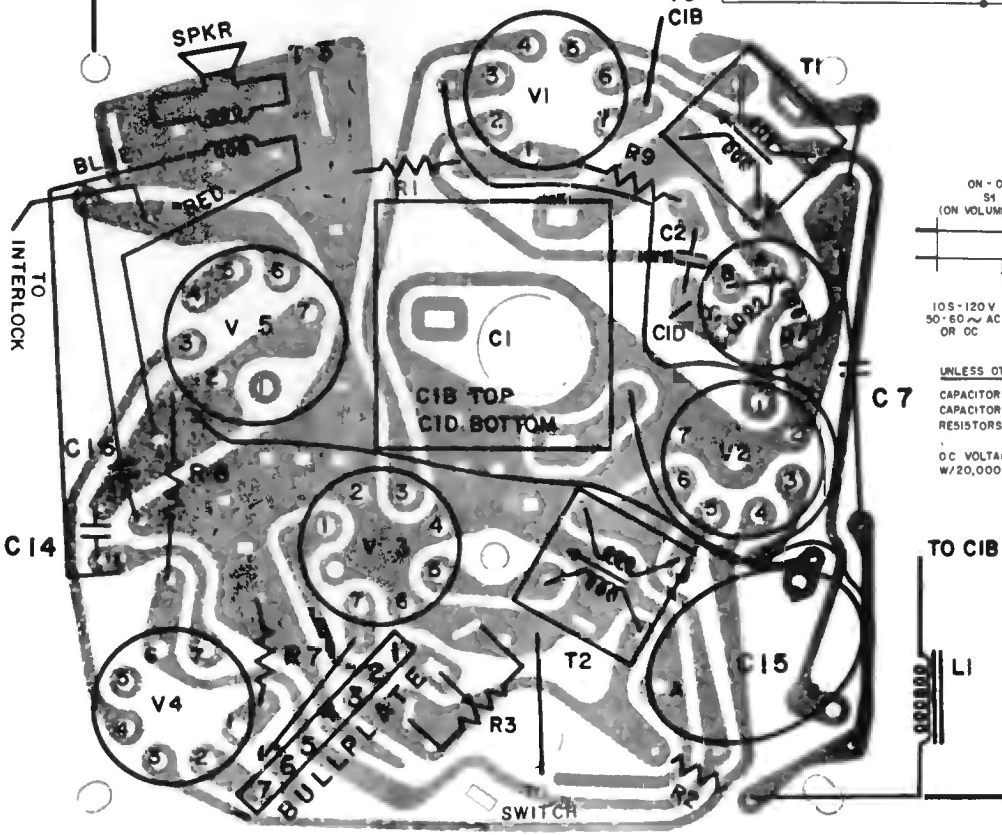

COMPONENT WIRING DIAGRAM

TO REMOVE CHASSIS

Remove cabinet back by removing two screws fastening back to cabinet, pulling interlock plug away from interlock, and then pulling back down and away from cabinet.

Then remove five hex-head screws fastening chassis to cabinet front. Now swing chassis back out of set to service.