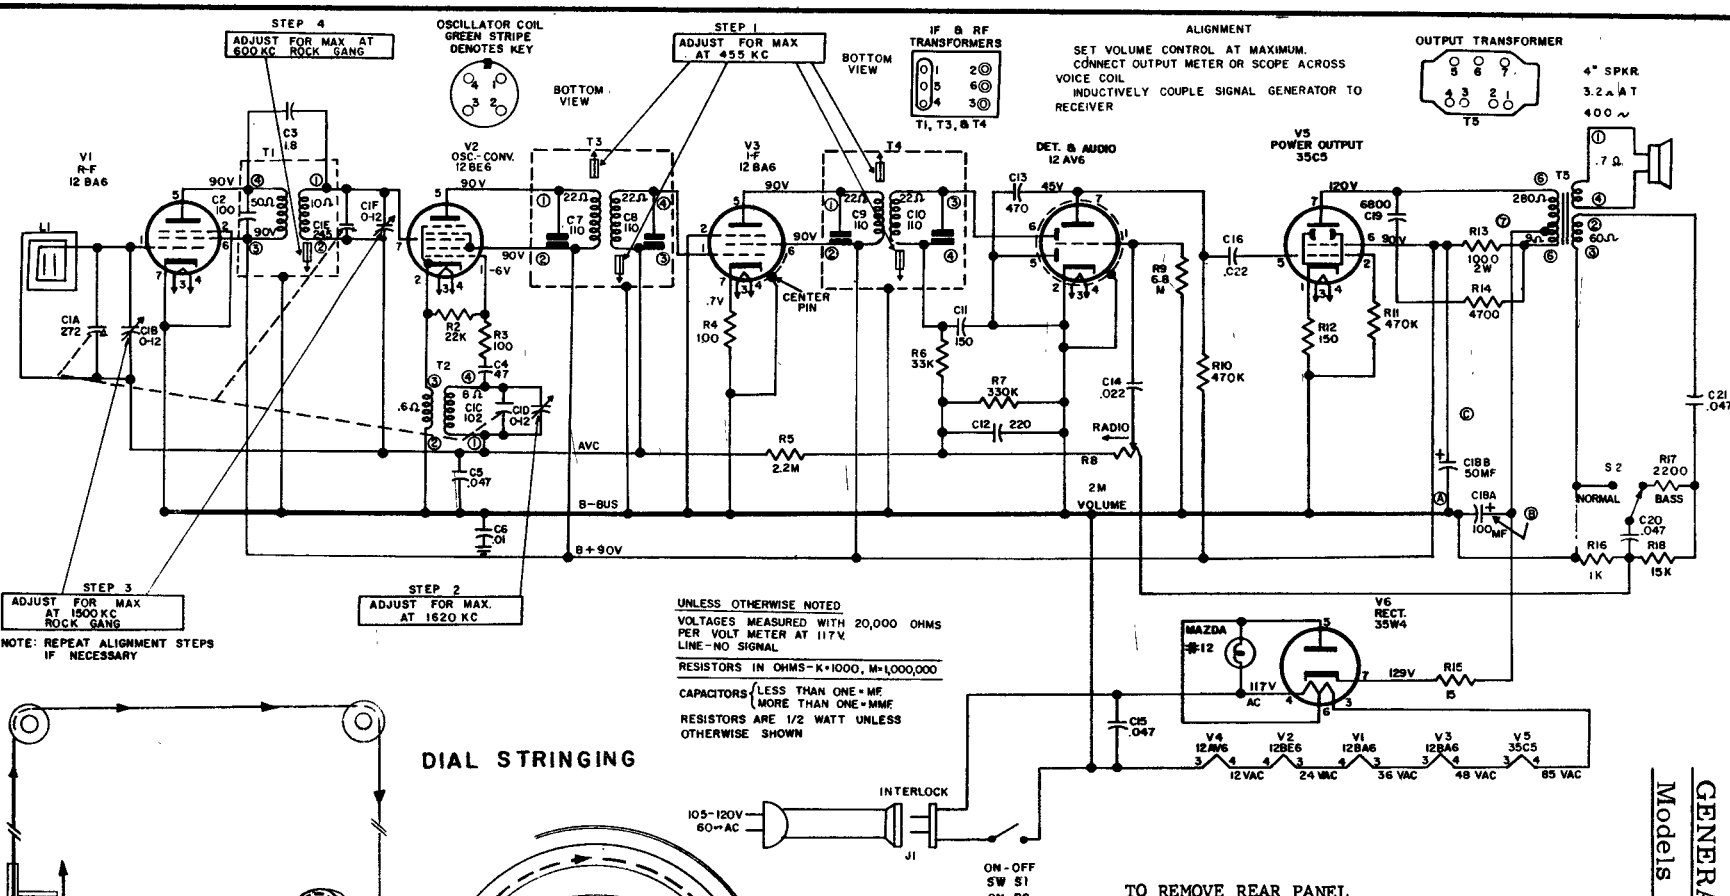


## DIAL STRINGING

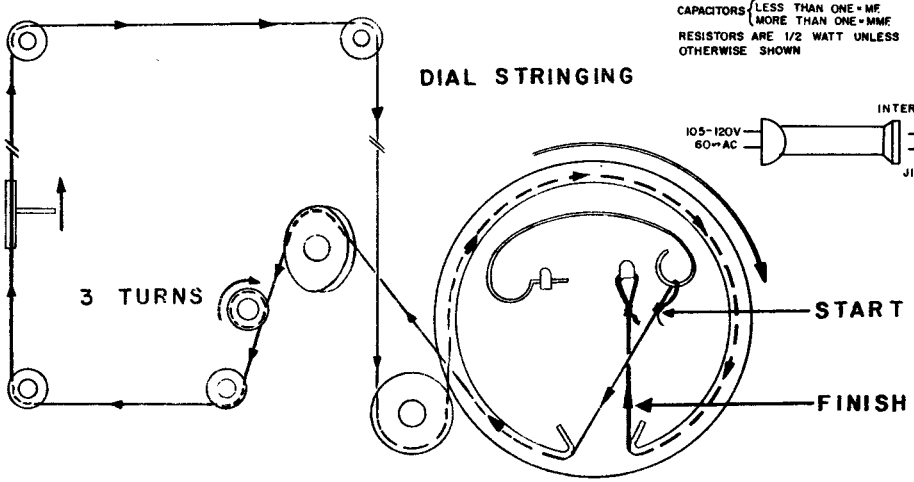


## TO REMOVE REAR PANEL

Pull down slightly on cabinet bottom with one hand, while lifting bottom of rear panel up and out with other hand. This will release the bottom locking tabs on the panel from the slots on the cabinet bottom. Then pull panel out and down, releasing top locking tabs from top slots.

## TO REMOVE CHASSIS FROM CABINET

1. Remove rear panel as detailed above.
2. Pull out volume and tuning control knobs.
3. Remove four screws on cabinet bottom which fasten the chassis down.
4. Remove two hex-head screws fastening control panel to front panel.
5. Unsolder speaker leads.
6. Slide chassis out to rear.