SX-110

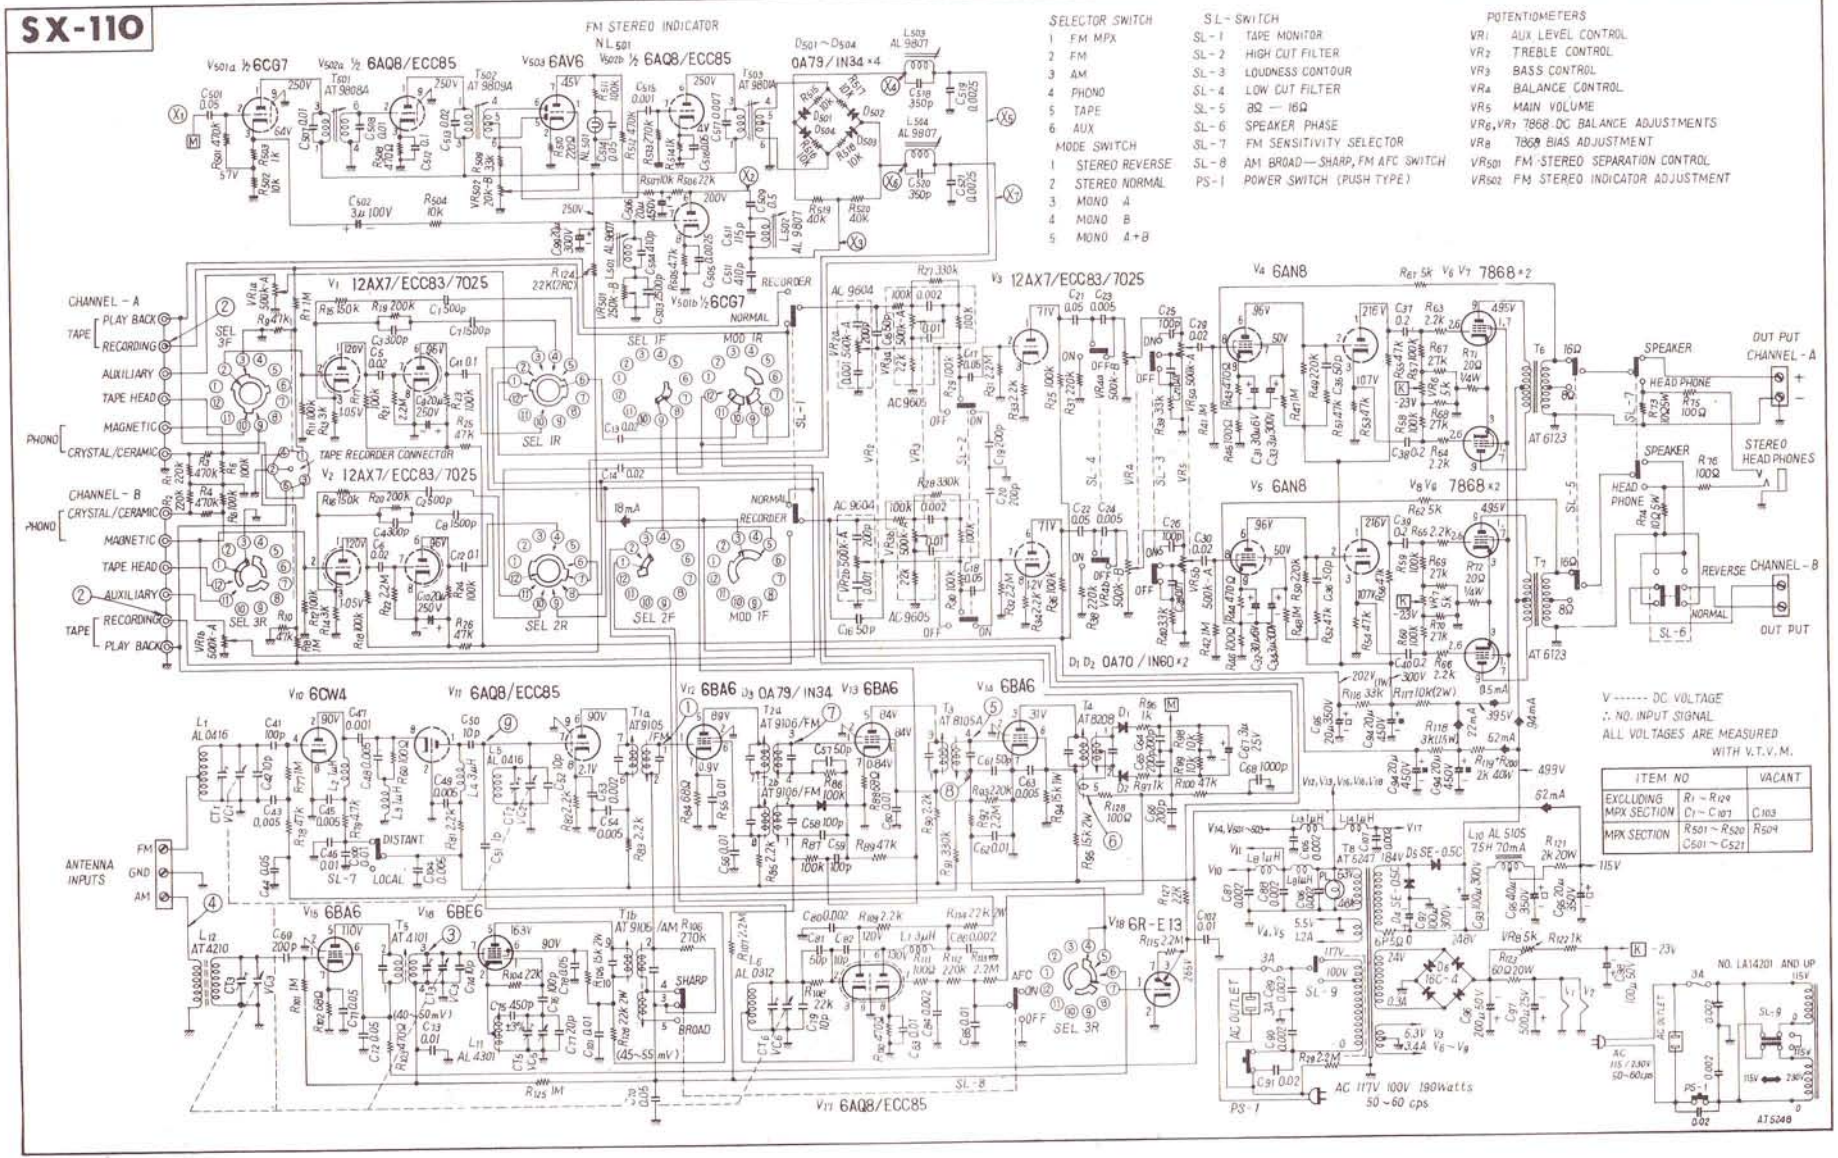
FM STEREO INDICATOR
SELECTOR SWITCH
1 FM MPX
2 FM
3 AM
4 PHONO
5 TAPE
6 AUX
MODE SWITCH
1 STEREO REVERSE
2 STEREO NORMAL
3 MONO A
4 MONO B
5 MONO A+B
SL-SWITCH
SL-1 TAPE MONITOR
SL-2 HIGH CUT FILTER
SL-3 LOUDNESS CONTOUR
SL-4 LOW CUT FILTER
SL-5 8Ω — 16Ω
SL-6 SPEAKER PHASE
SL-7 FM SENSITIVITY SELECTOR
SL-8 AM BROAD—SHARP, FM AFC SWITCH
PS-1 POWER SWITCH (PUSH TYPE)
POTENTIOMETERS
VR1 AUX LEVEL CONTROL
VR2 TREBLE CONTROL
VR3 BASS CONTROL
VR4 BALANCE CONTROL
VR5 MAIN VOLUME
VR6, VR7 7868 DC BALANCE ADJUSTMENTS
VR8 7868 BIAS ADJUSTMENT
VR501 FM STEREO SEPARATION CONTROL
VR502 FM STEREO INDICATOR ADJUSTMENT
CHANNEL - A
CHANNEL - B
TAPE
PHONO
PLAY BACK
RECORDING
AUXILIARY
TAPE HEAD
MAGNETIC
CRYSTAL/CERAMIC
TAPE RECORDER CONNECTOR
ANTENNA INPUTS
FM
GND
AM
DISTANT
LOCAL
SHARP
BROAD
SPEAKER
HEAD PHONE
STEREO HEADPHONES
OUT PUT CHANNEL - A
OUT PUT CHANNEL - B
REVERSE
NORMAL
RECORDER
AC 117V 100V 190Watts
50 ~ 60 cps
V ------ DC VOLTAGE
∴ NO INPUT SIGNAL
ALL VOLTAGES ARE MEASURED WITH V.T.V.M.
ITEM NO
VACANT
EXCLUDING MPX SECTION
MPX SECTION
NO. LA14201 AND UP
AT5048