# Admiral

## **CHASSIS 5X2** MODELS 5X21, 5X22, 5X23


#### ALIGNMENT **PROCEDURE**

- Turn receiver volume control full on (fully clockwise).
- Use an isolation transformer if available, otherwise connect a .1 mfd. condenser in series with low side of signal generator and connect to chassis.
- Caution: Do not connect a ground wire directly to chassis.
- Connect output meter across speaker voice coil.
- Use lowest output setting of signal generator capable of producing adequate output meter indication and proceed in the following sequence.
- Use a NON-METALLIC alignment tool for IF transformers. See asterisk \* note below.
- Repeat adjustments to insure good results.

Step	Dummy Antenna in Series with Signal Generator	Connection of Signal Generator (High Side)	Signal Generator Frequency	Receiver Gang Setting	Trimmer Description	Trimmer Designation	Type of Adjustment
1	250 mmfd. condenser	Antenna stator of tuning condenser	455 KC	Gang fully open	2nd IF let IF	*A, B *C, D	Maximum output
2	250 mmfd. condenser	Antenna stator of tuning condenser	1620 KC	Gang fully open	Oscillator (on gang)	E	Maximum output
3	Loop of several turns of wire, or place genera- tor lead close to re- ceiver antenna for ade- quate signal pickup.	No actual connection (signal by radiation)	1400 KC	Tune in generator signal	Antenna (on gang)	F	Maximum output

\*Adjustments A and C made from the underside of the chassis. To avoid splitting the slotted head of the powdered iron core tuning slugs in IF transformers, use an alignment tool having a blade 1/8" wide.

## TUBE AND TRIMMER LOCATION

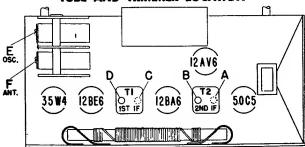


Adjustments A and C made from underside of chassis.

### **VOLTAGE DATA**

Voltages shown on schematic diagram.

- All readings made between tube socket terminals and B minus (negative of electrolytic condenser C13).
- Measured on 117 Volt AC line.
- Volume control minimum; dial turned to low frequency
- Voltages measured with Vacuum Tube Voltmeter.

C9 AND CID TOTAL 250 MMFD. WHEN REPLACING WITH MOVIDUAL COMPONENTS, USE ANY COMBINATION TOTALING 250 MMFD OR USE 250 MMFD ACROSS R6 IN PLACE OF C9 AND CID. R6 AND RT CAN BE 470 M.

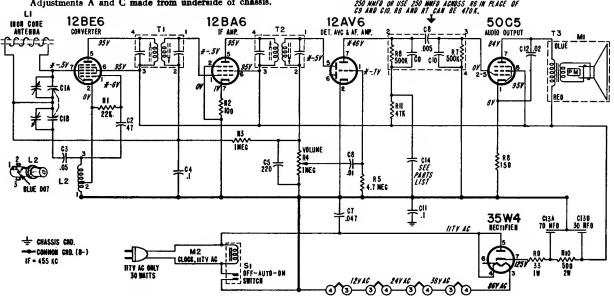

\*These voltage readings will be either lower or practically zero if taken with a 1000 ohm-per-volt meter.