



CBS Columbia

Model 525-526

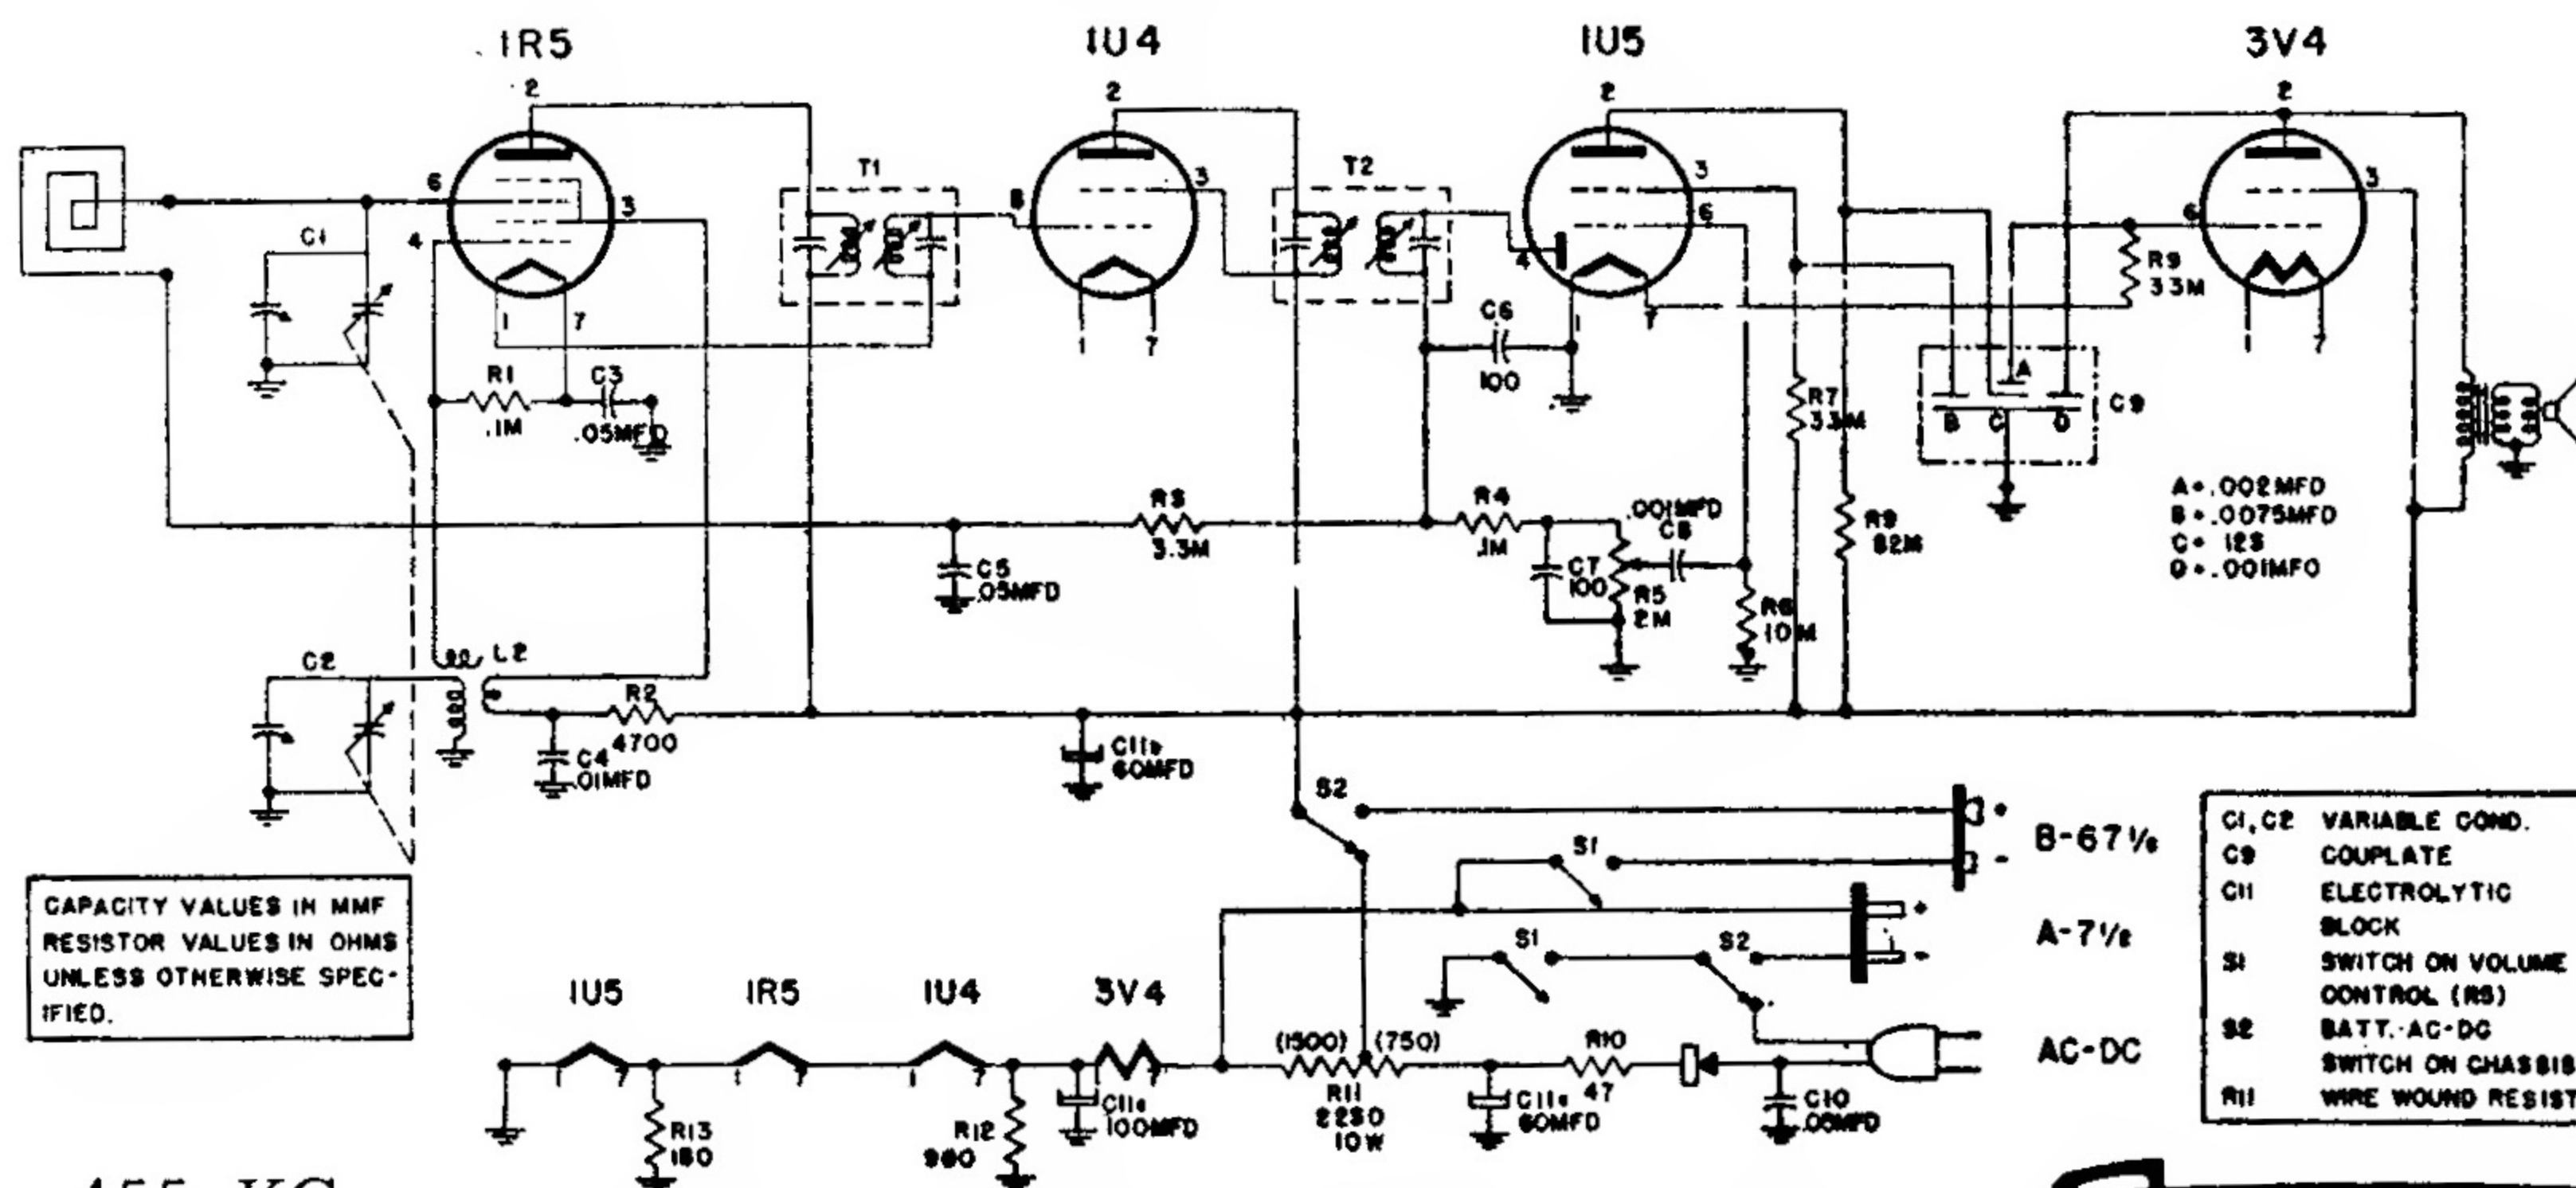

I. F. 455 KC.

Snap fiber battery clip into position on the "B" Battery (Ray-O-Vac No. 4367, General No. W45A, National Carbon No. 467 or equivalent) and place it in position as shown in illustration. Next, plug the "A" Battery Connector into the "A" Battery (National Carbon No. 713 or Ray-O-Vac No. P551 or equivalent) and place it in position by turning the battery clamp and slipping the battery into its location as shown in the illustration.

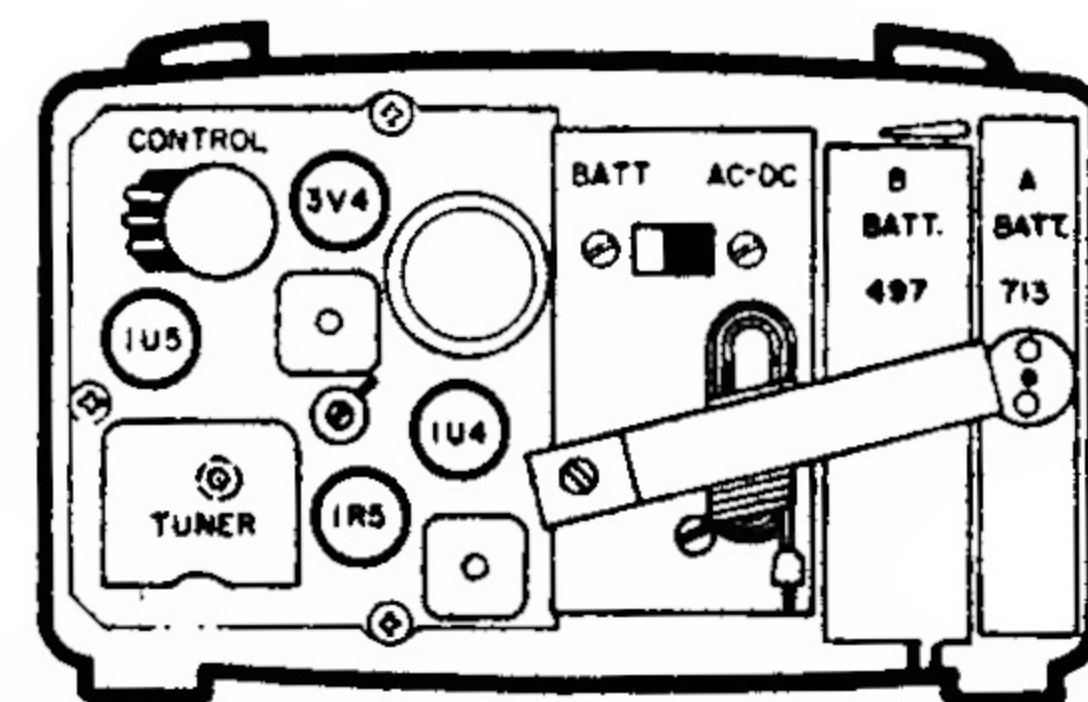

NOTE—Diagram has Eveready numbers.