

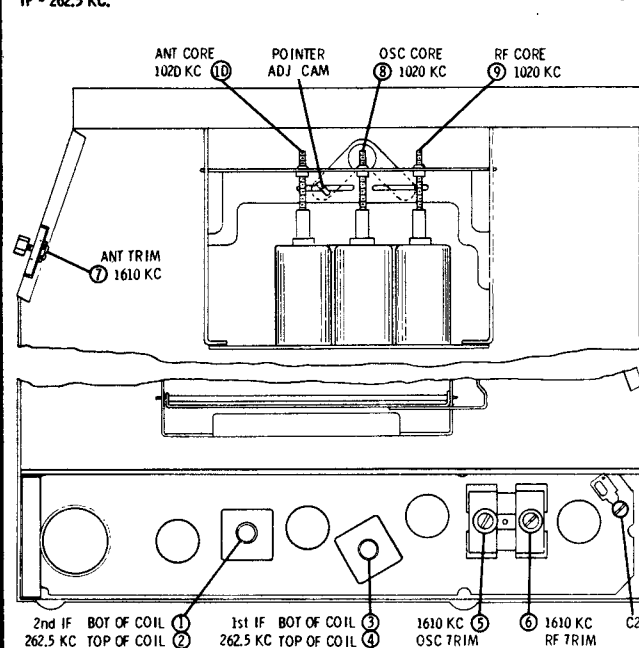


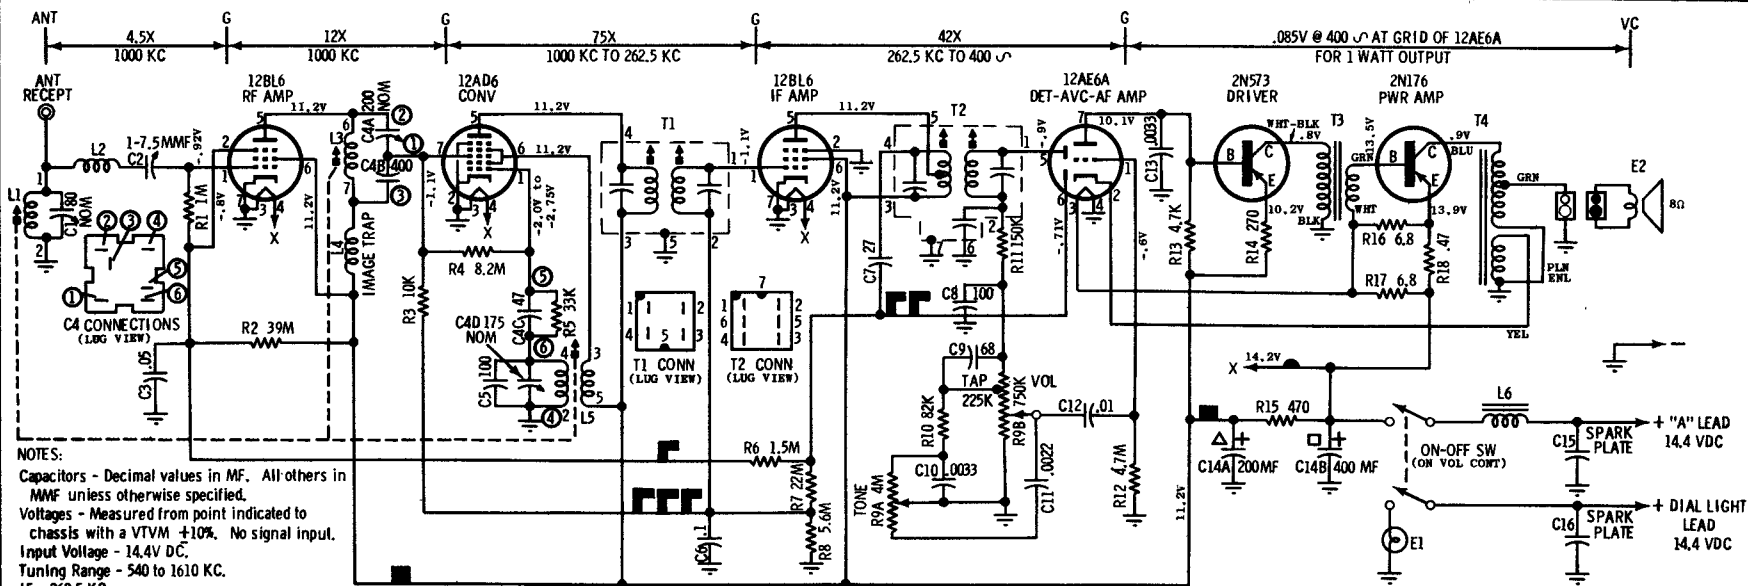

ALIGNMENT POINTS LOCATION DETAIL

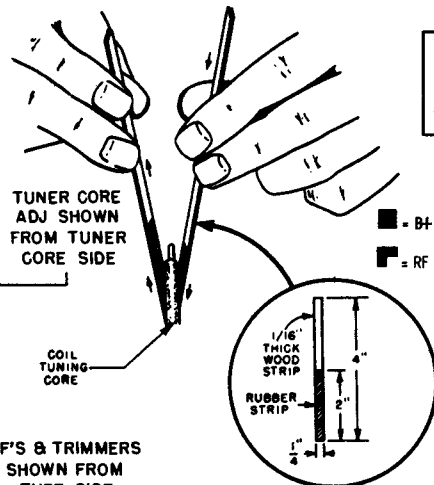

CORE ALIGNMENT TOOL DETAIL

DUMMY ANTENNA DETAIL



CAUTION

"A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE.

PLATED PANEL WIRING LEGEND

■ - B+ ◐ = FILAMENT

RF = RF AVC FF = AVC INPUT FFF = IF, CONV AVC

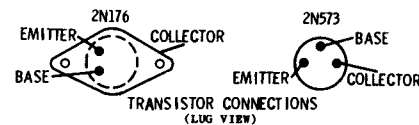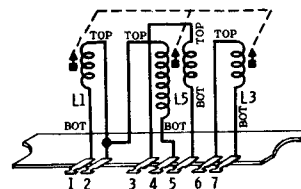

MOTOROLA MODELS


FORD

04MF COAF-18805-U

04MFM COAF-18805-T

04MD CODF-18805-D

MOTOROLA



MOTOROLA INC.

MODELS

MOTOROLA

FORD

14MF

C1AF-18805-D


14MFM

C1AF-18805-C

04MD

C0AF-18805-D

(Continued from preceding page)

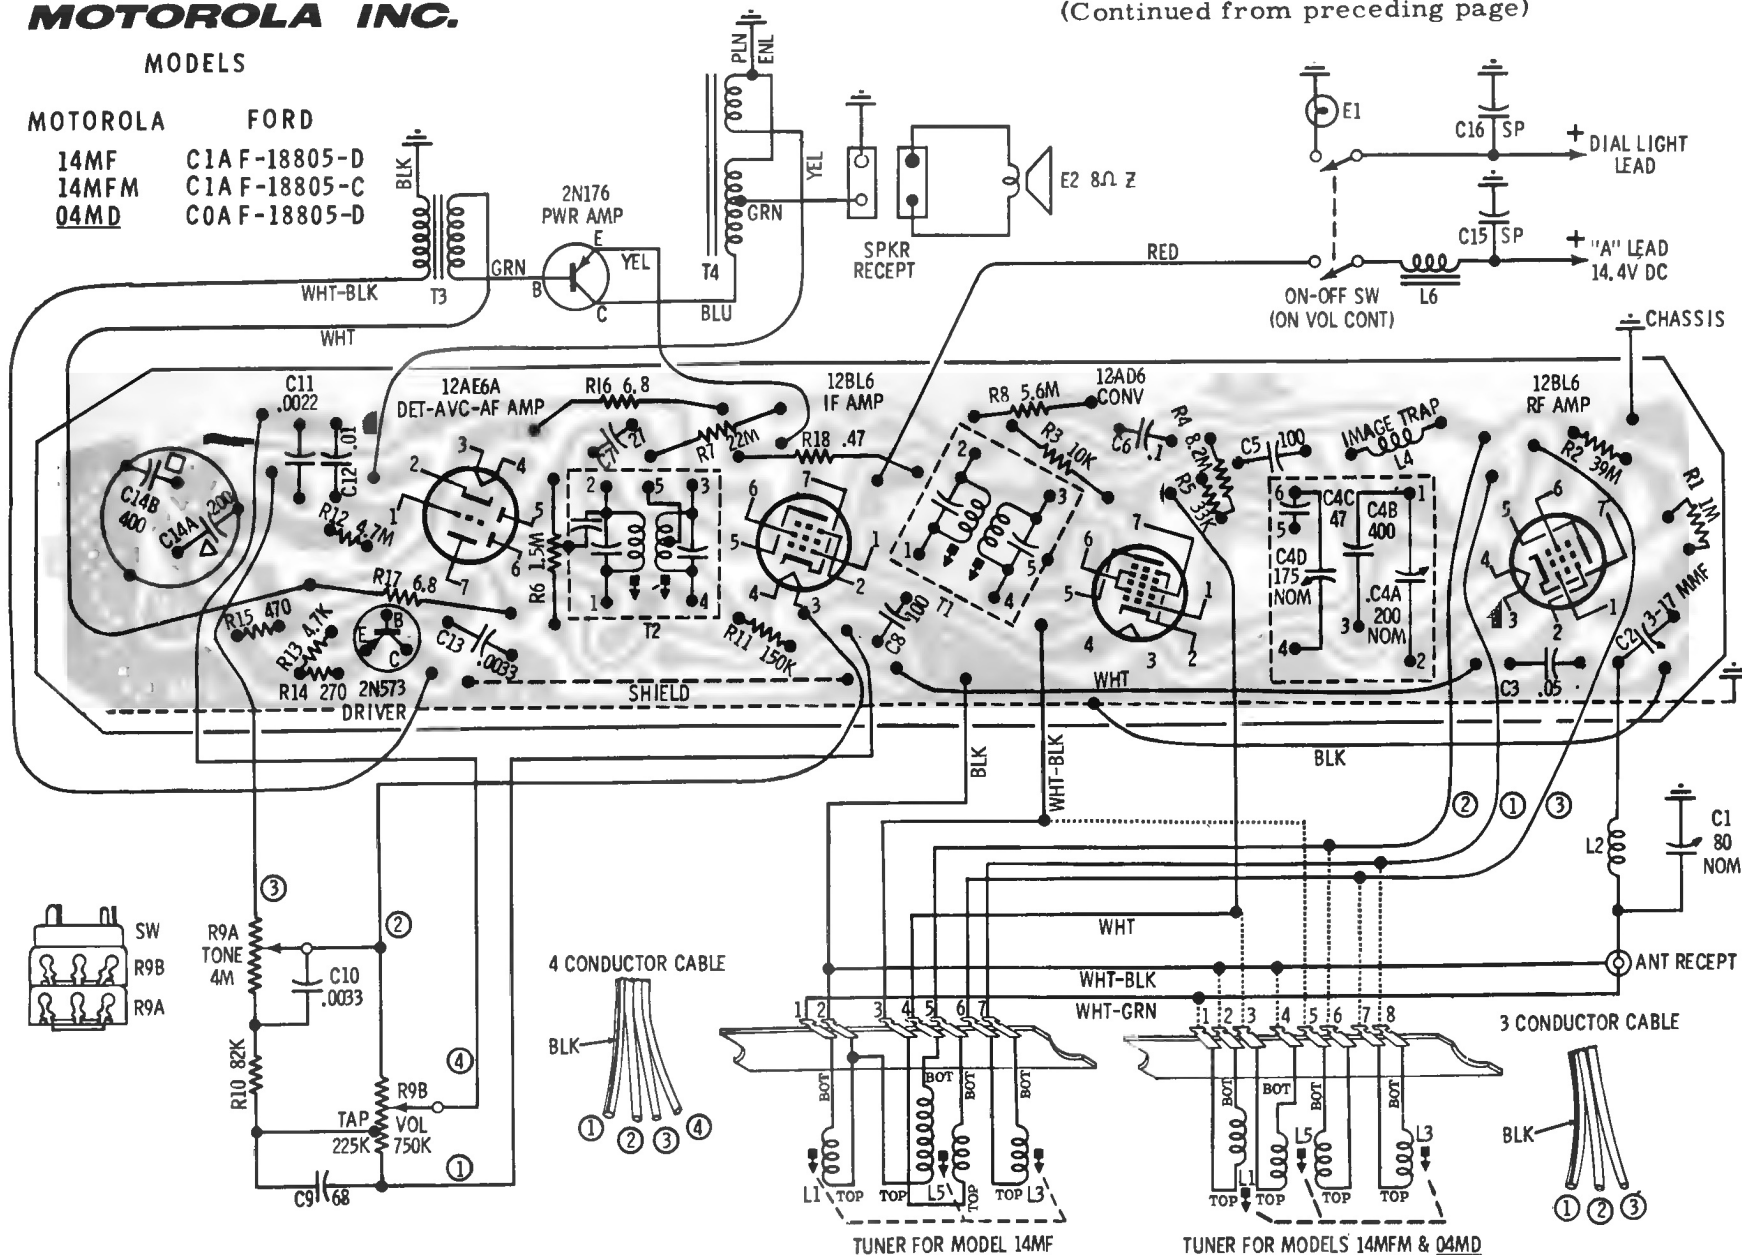

PLATED CHASSIS BOARD WIRING AS VIEWED FROM BOTTOM SIDE (COMPONENTS SHOWN ARE ON OPPOSITE SIDE)