

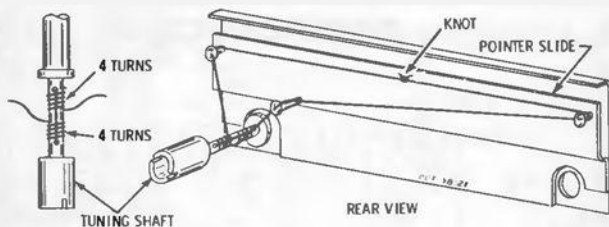


**MODEL
10MX**

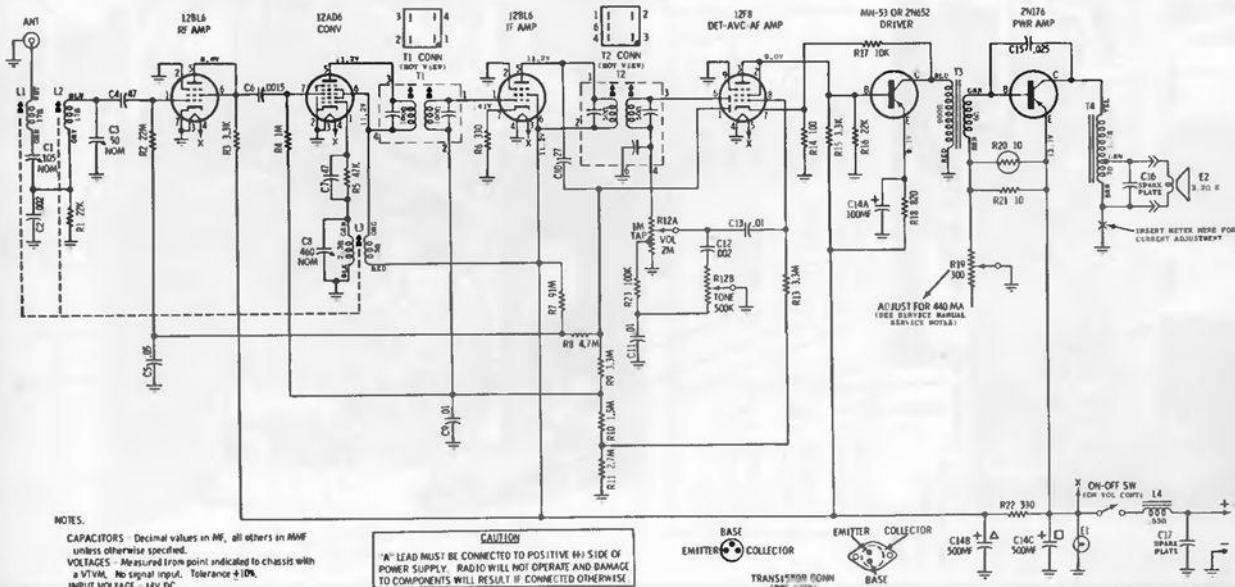

1. Thread a sufficient length of dial cord through two holes in shaft.
2. Wind 4 turns from each hole toward center of shaft as shown in detail.
3. Thread over guides and tie knot as shown.

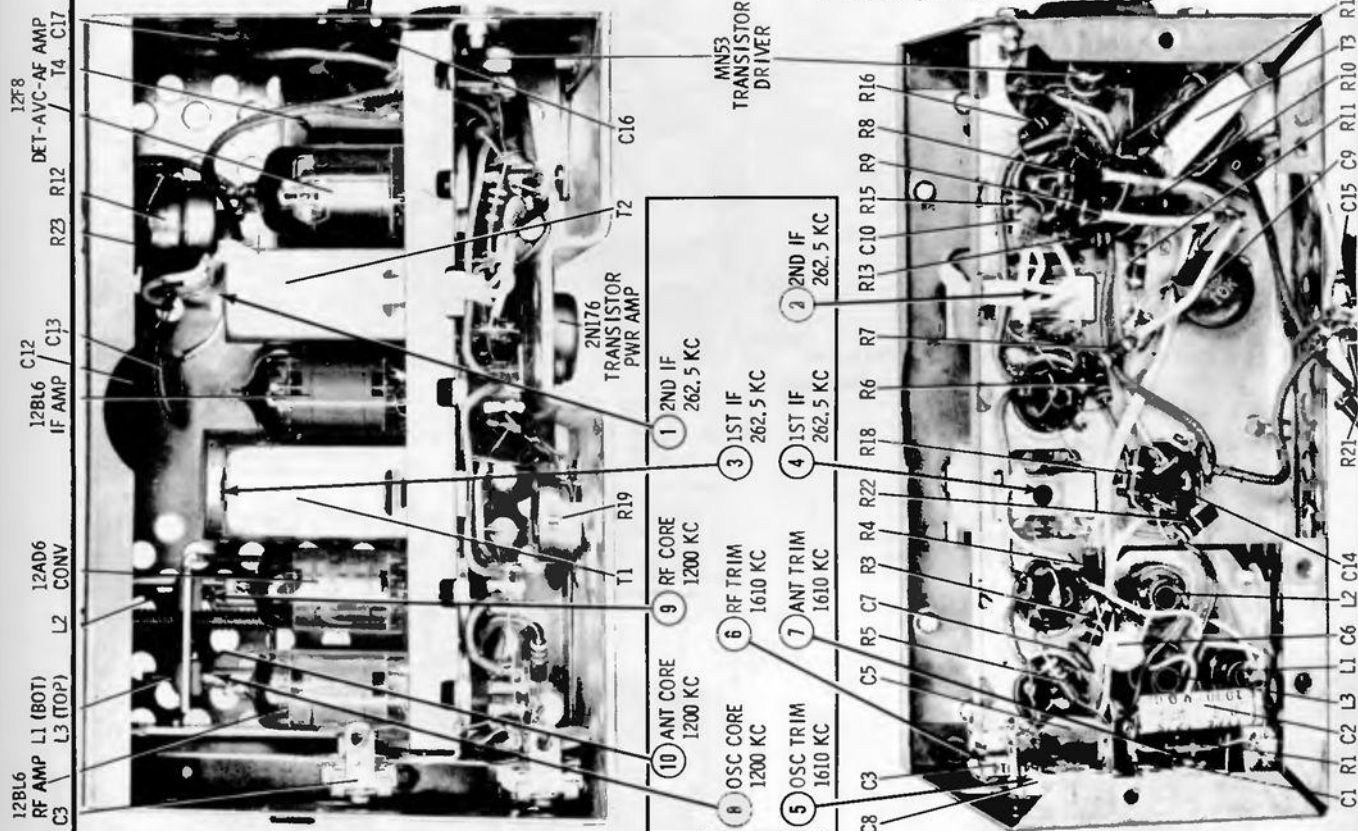

ALIGNMENT ADJUSTMENTS & PARTS LOCATION