


Admiral

Chassis 3K1

MODEL	COLOR	CHASSIS
HT2236	Mahogany	3K1
HT2237	Blond	3K1

12AU6
V1

50L6GT
V2

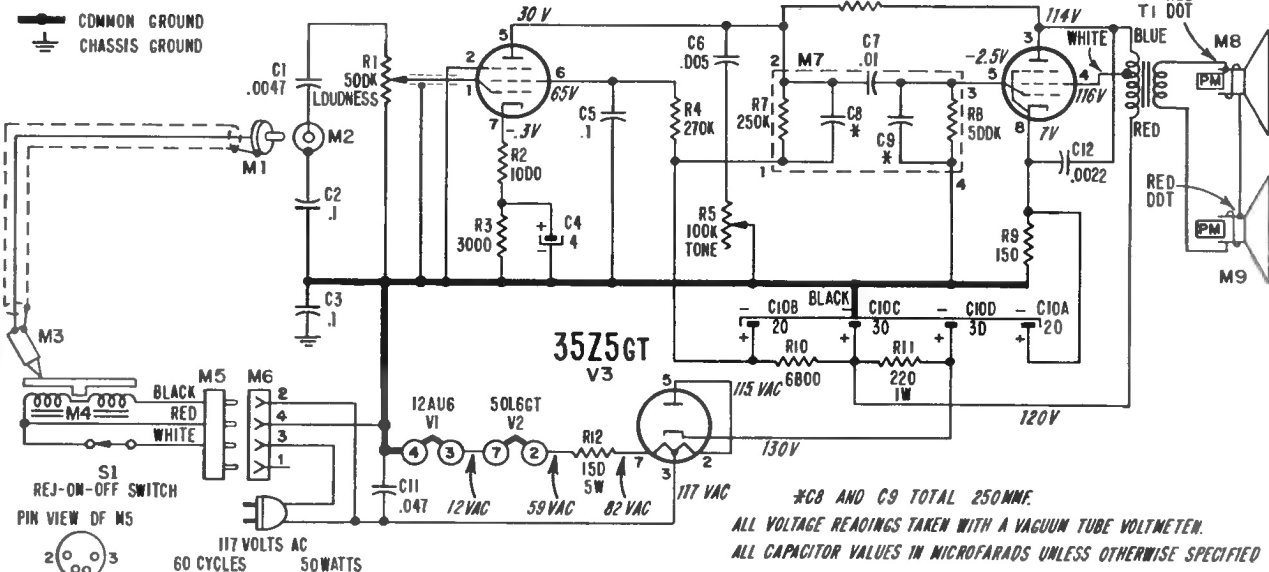

TO REMOVE THE CHASSIS

After removing the line cord plug from the wall outlet, clamp the TONE ARM to the tone arm rest. Carefully turn the phonograph upside down on a soft, padded surface. Remove the two screws mounting the chassis to the cabinet. Then turn the phonograph upright and remove the screw countersunk in the rear of the cabinet. Remove the speed-nuts holding the speaker to the cabinet. The output transformer leads are soldered to the speakers. Speakers and chassis must be removed as a unit. Disconnect the record changer motor plug (M5) and carefully lift the chassis and speaker assembly from the cabinet.

To Remove the Record Changer:

The record changer and its mounting board come out as a unit. Fasten the TONE ARM to the tone arm rest. Remove the six mounting board screws. Tilt the right edge of the mounting board until the record changer and mounting board clear the cabinet lid stay-arm mounting bracket. It should not be necessary to remove this bracket. If, however, it is ever necessary to remove this bracket, care must be taken to avoid damaging the cabinet lid hinges. Carefully lift the record changer and mounting board from the cabinet. For convenience, the motor plug and audio input plug may be disconnected from the chassis, and the record changer set aside.

Service Note:

The "REJ-ON-OFF" switch (S1) on the record changer operates both amplifier and record changer motor. To operate the amplifier and measure voltages with the record changer disconnected, a short, temporary jumper wire must be connected between common ground and the single lead from one side of the AC line on socket "M6". See schematic.

Amplifier voltage readings may also be taken by connecting the record changer motor plug (M5) to the socket (M6) on the tone arm rest and move the REJ-ON-OFF switch to the "ON" position.

Set LOUDNESS control for minimum and the TONE control to the center of its range. Do not play record while taking readings.

Chassis 3K1

MODEL	COLOR	CHASSIS
HT2236	Mahogany	3K1
HT2237	Blond	3K1

