

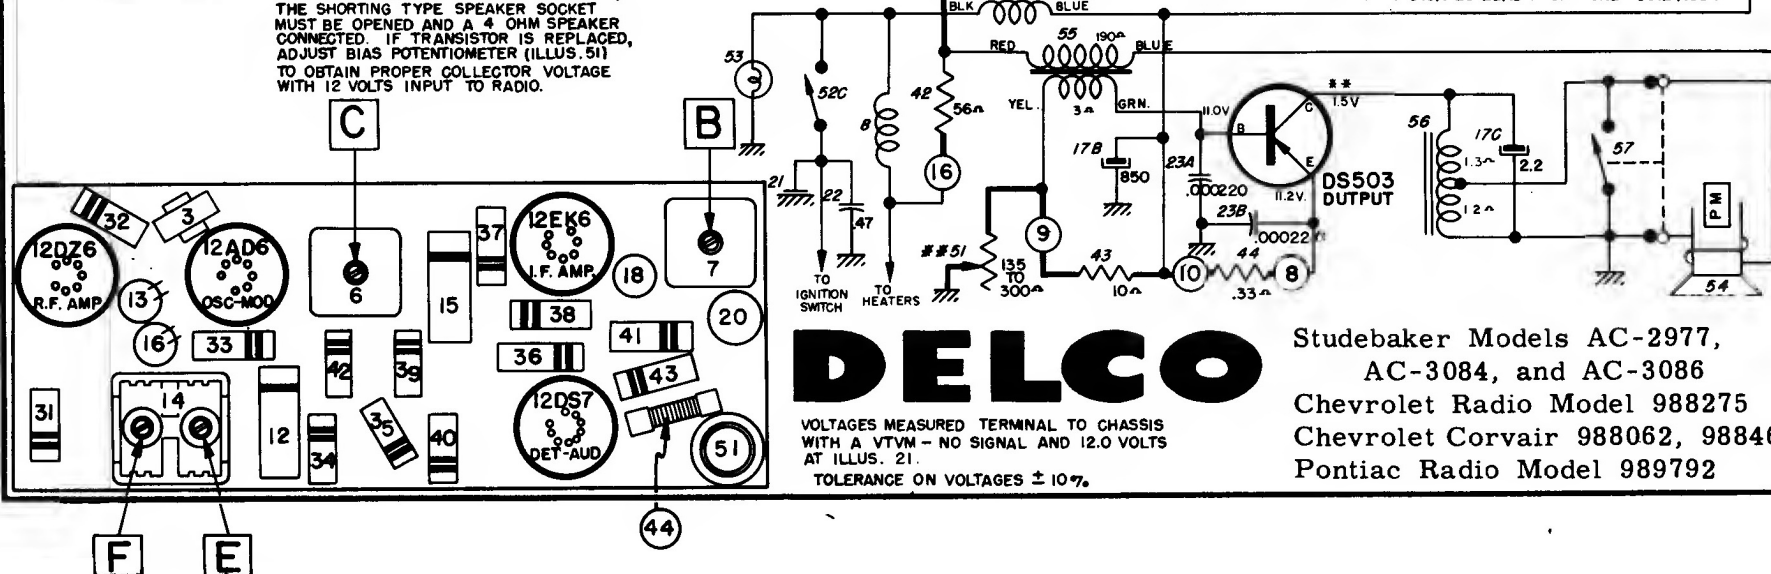


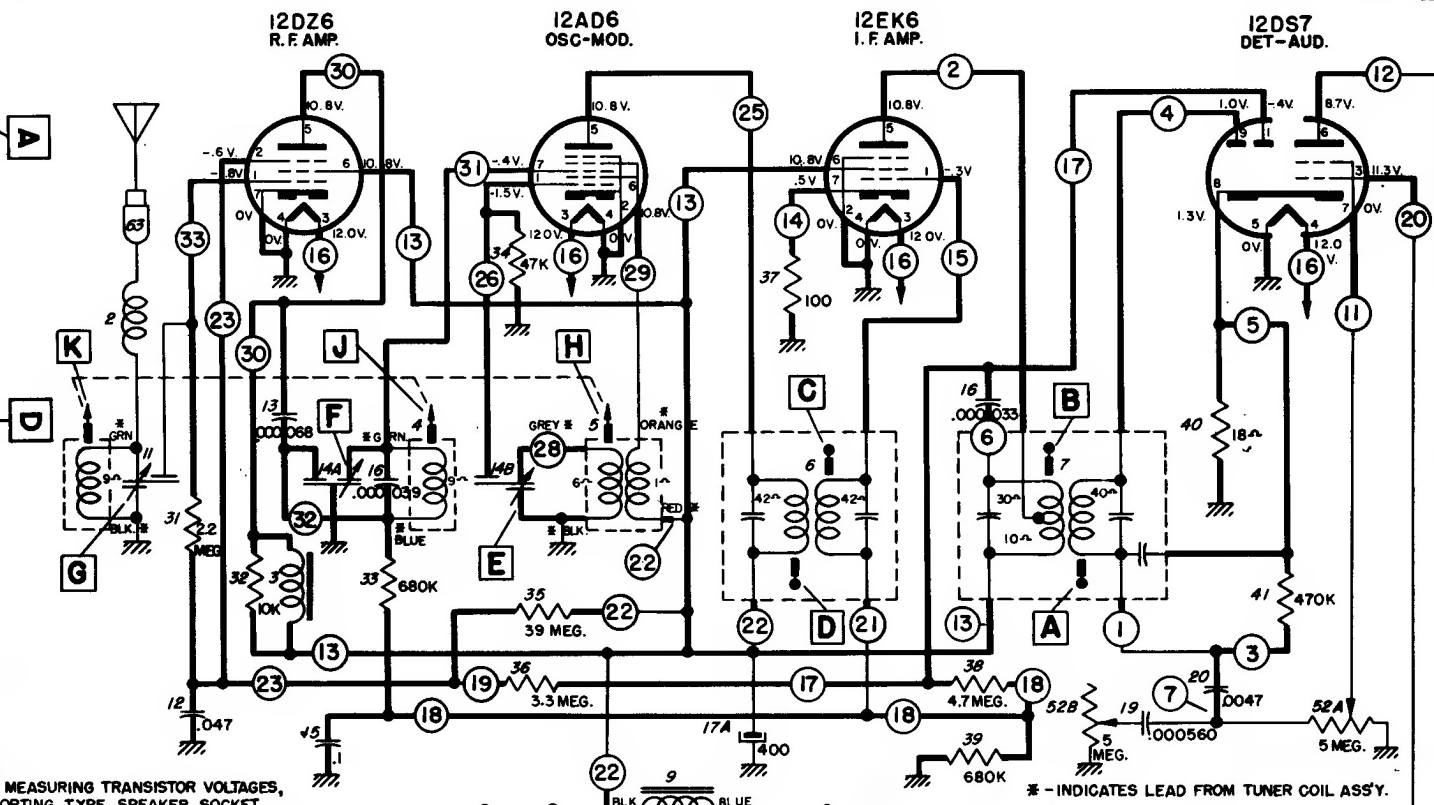

STEPS	SERIES CAPACITOR OR DUMMY ANTENNA	CONNECT SIGNAL GENERATOR TO	SIGNAL GENERATOR FREQUENCY	TUNE RECEIVER TO	ADJUST IN SEQUENCE FOR MAX. OUTPUT
1	0.1 Mfd.	12AD6 Grid (Pin #7)	262 KC.	High Frequency Stop	A, B, D, C,
2	0.000068 Mfd.	Antenna Connector	1615 KC.	High Frequency Stop	*E, F, G
3	0.000068 Mfd.	Antenna Connector	600 KC.	Signal Generator Signal	J, K
4	0.000068 Mfd.	Antenna Connector	1615 KC.	High Frequency Stop	F, G

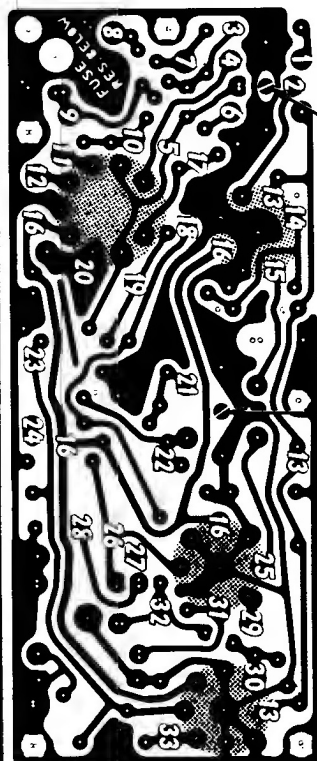