
FIRESTONE TIRE RUBBER



SPEAKER

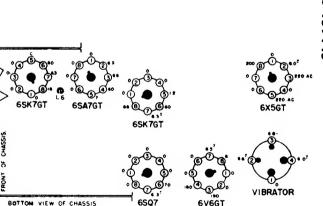

6X5GT RECTIFIER

6V6GT

POWER OUTPUT

65Q7

DIODE

POWER TRANS.



6SA7GT

OSC

OSC COIL

SPARK PLATE

6-8V

SWITCH

2ND IF TRIMMER

250×4

6SK7GT

BOTTOM VIEW OF SOCKETS SHOWING TERMINAL NUMBERING

FUSE

VALUES OF CAPACITORS IN MFD.

0000

BATT

ON-OFF SWITCH 8 VOL. CONT

ADJUST AT 1100 K C

6SK7GT

VIBRATOR

The bottom cover (the one with the speaker louvers) con be removed to permit servicing of major components, such as tubes and vibrator, by removing the eight (8) screws holding it to the top cover. There are three (3) screws on each side, one (1) in the rear, and one (1) in the front.

Socket Voltages

Voltages token from the different points of the circuit to the chassis are measured with volume cantrol in maximum position, oll tubes in their sockets, no signal applied, and with a volt meter having a resistance of 20,000 ohms per volt. These voltages are clearly shown on the voltage chart,