


## CORONADO "PAL" RADIO MODEL RA33-8115A

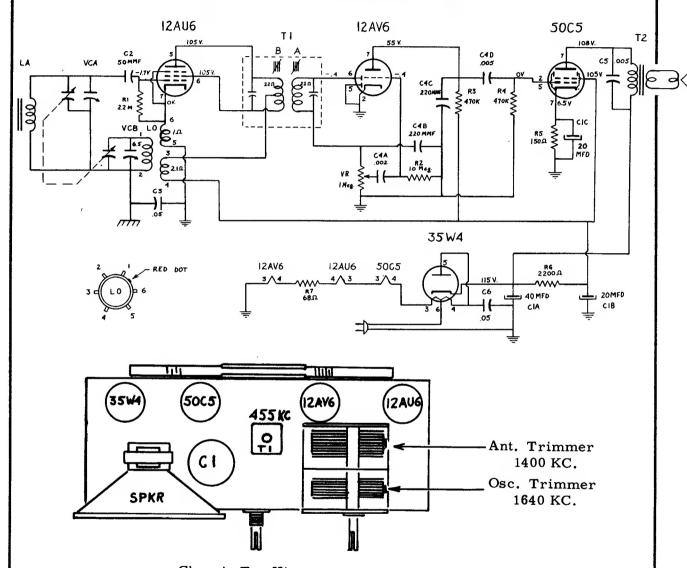

Chassis Top View

## ALIGNMENT INSTRUCTIONS

Adjust all trimmers for maximum output. Repeat the procedure given below as final check.

CAUTION: This is an AC-DC receiver, and when aligning the set it is necessary to isolate the signal generator or the receiver from the line by the use of an isolation transformer, or to place a .2MFD condenser in each test lead of the signal generator.

## SIGNAL GENERATOR

• • • • • • • • • • • • • • • • • • • •	O. 17 14 OZ. 1210 11 C	- 11			
Frequency	Dummy Antenna	Connection to set	POSITION OF VARIABLE	ADJUST FOR MAXIMUM	NOTES Attentuate gen.
455 KC	.05 MFD		Two-thirds open	TI A&B	for about .4
1640 KC		Stator of VCA	,	VCB	volt across
1400 KC	Radiate signal a loop of se		Tune in sig. generator	VCA	voice coil. Keep gen. low