


*"A" rated receivers have "X" connected to "Y" and R-10 is shorted. "C" rated receivers have "X" connected to "Z."

PARTS DESCRIPTION LIST

Symbol	Description	Symbol	Description	Symbol	Description
C2a C2b C4 C9 C10 C12 C13 C14 C15 C16 C17a	Antenna section of tuning condenser Oscillator section of tuning condenser 47 mmf. mica capacitor 470 mmf. mica capacitor .05 mfd. paper capacitor .005 mfd. paper capacitor .005 mfd. paper capacitor .005 mfd. paper capacitor .01 mfd. paper capacitor .01 mfd. paper capacitor .03 mfd. paper capacitor .03 mfd. paper capacitor .05 mfd. paper capacitor .05 mfd. paper capacitor .05 mfd. yaper capacitor .05 mfd. 150 V. dry electrolytic	C17b C19 C20 L1 L2 L3 L4 P1 R1 R2 R3	40 mfd. 150 V. dry electrolytic 0.2 mfd. paper capacitor .01 mfd. paper capacitor Beam-a-Scope Oscillator Coil 1st. I.F. transformer 2nd I.F. transformer Dial lamp, Mazba No. 47 33.000 ohms carbon resistor 470.000 ohms carbon resistor	R4 R5 R6 R7 R8 R9 R10 S1	0.5 megohms volume control 4.7 megohms carbon resistor 470,000 ohms carbon resistor 170,000 ohms carbon resistor 150 ohms carbon resistor 1200 ohms 1 W. carbon resisto 13 ohms carbon resistor Power switch Output transformer

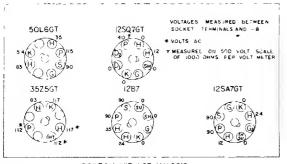

BOTTOM VIEW OF CHASSIS AC LINE VOLTS-117 MAX VOLUME GANG CLOSED

ALIGNMENT PROCEDURE

Alignment Frequencies 455 KC

> 0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180

0 C Y E 65 160

րախախախարարակակապատիակապատական 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180

Frequency-degree Reference Chart

GENERAL INFORMATION

Models J-51, J-53, J-54 and J-54W are compact, five-tube superheterodyne receivers which can be operated from either an AC or DC source of power. Model J-51 and J-53 cabinets are in matched walnut veneers. Model J-54 and J-54W cabinets are plastic in oak and gray-white respectively. All models incorporate the following design features: Built-in Beam-a-Scope, 5-inch dynapower speaker, increased dial length, automatic volume control, and beam power output.
The glass tubes used in the converter and detector stages

are interchangeable with metal tubes if the receiver is realigned following the change,

Precaution

If the signal generator is AC operated use an isolating transformer between the power supply and the radio receiver power input. The use of an isolating capacitor is not recommended as AC current through the capacitor will introduce hum modulation and/or create the possibility of a burned-out signal generator attenuator.

Special Service Information

The following information will be very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- Stage Gains R.F. on Converter Grid . . . 4.0 at 1000 KC Amplifier Grid Amplifier Grid...... 40 at 1000 KC I.F. on Converter Grid to I.F. on I.F.
 -50 at 455 KC Amplifier Grid..... I.F. Amplifier Grid to Detector Plate. . 50 at 455 KC
- (2) 0.15-volt, 400-cycle signal across the volume control will give 1/2-watt speaker output.* (Volume control turned to maximum.)
- Average DC voltage developed across oscillator grid

^{*} Variations of \pm 20% permissible. All readings obtained with enough signal input to give ½-watt speaker output.