


MONTGOMERY WARD & CO.
Models GEN-1850A, GEN-1851A



ALIGNMENT INSTRUCTIONS

DUMMY ANTENNA	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST
.05MFD	High side to antenna stator lug on tuning gang. Low side to B-	455 KC (400 Mod.)	Tuning gang fully open.	Across voice coil.	A2, A4 (Bottom) A1, A3 (Top) of I. F.
	Loop	1640 KC	"	"	A6
	"	1400 KC	Tune to 1400 KC signal	"	A5

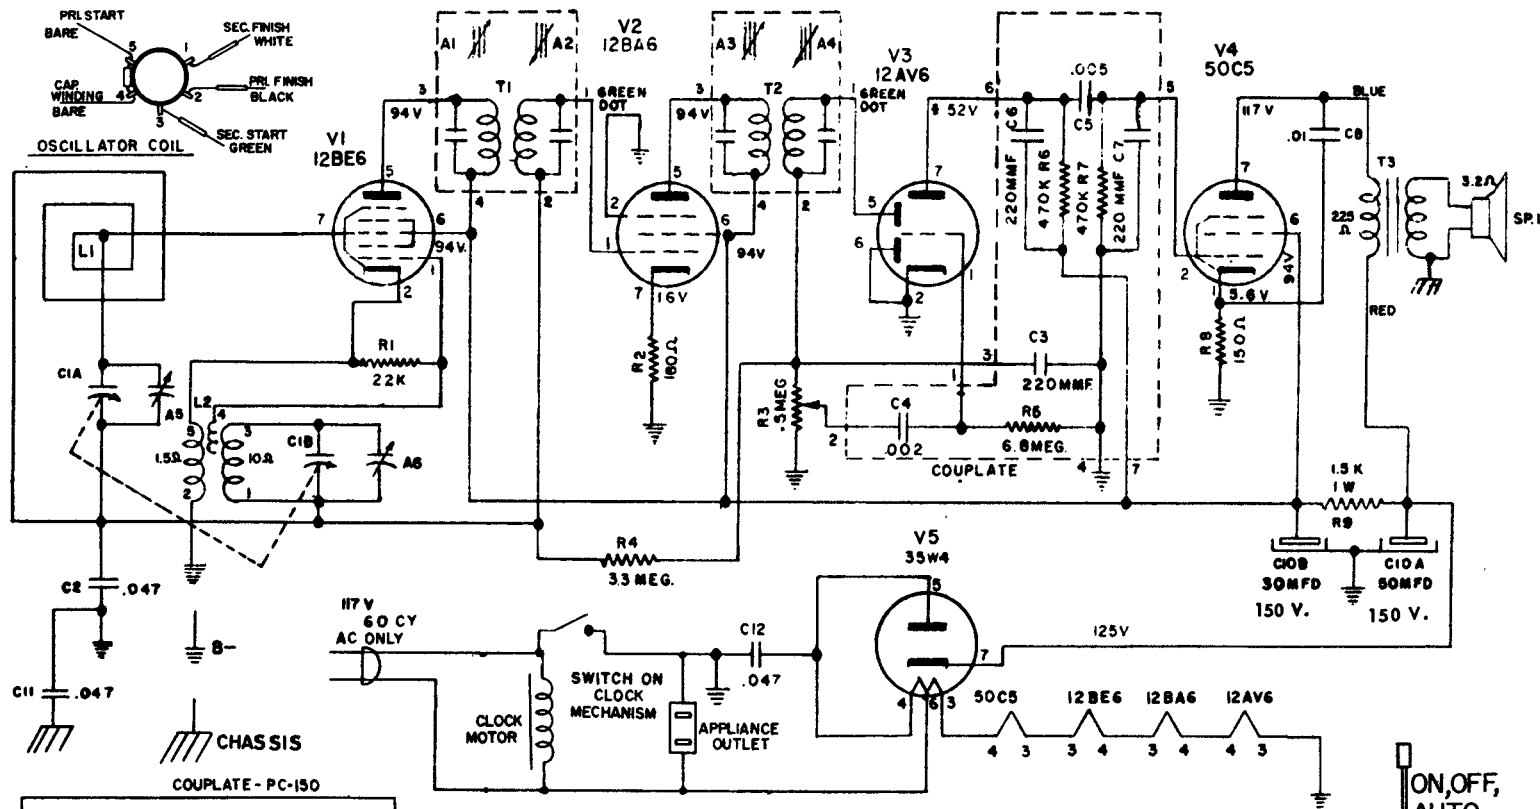