
LS1 3.2 N


Model 34F1, Chassis HS-444

and

34F1C, Chassis HS-467

Model

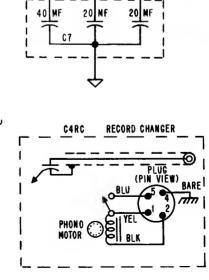

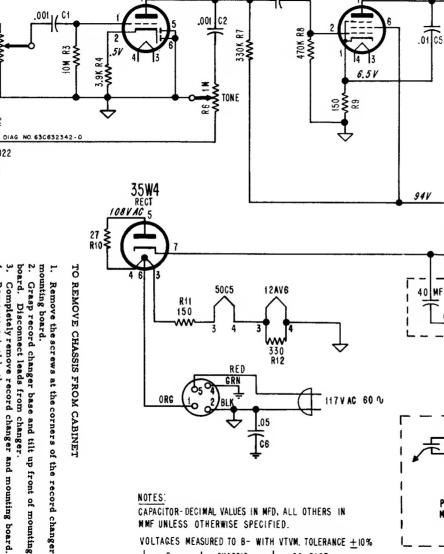

MMF UNLESS OTHERWISE SPECIFIED.

+ CHASSIS

MEASURED TO 8- WITH VTVM. TOLERANCE \pm 10%

RC BASE

.021/04

5005

PWR AMP

95V

BC TI

RED

108 V

R13

220

BARE

R14

1800

GRN

12AV6

VOLTAGE AMP

65 V

mounting board. Grasp record changer Completely remove record changer and mounting board. Disconnect leads from changer base and tilt up front of mounting

.0022

Remove control

Knobs

REMOVE RECORD CHANGER FROM MOUNTING BOARD cabinet and remove Turn the Remove the three changer mounting screws screws chassis from cabinet. that mount the amplifier chassis to down flush with

From the parallel with bottom of changer, the screws ends of the base and lift up. mounting screws, turn the three Tinnerman so they

PHONO INPUT