

MOTOROLA


MODELS
57HFP1 Tan
57HFP2 Gray
CHASSIS
HS-543

NOTES:

CAPACITORS - Decimal values in MF, all others in MMF unless otherwise specified.

VOLTAGES - $\pm 10\%$. Measured to B- with a VTVM. No signal input.

= B-
 = Chassis
 = RC Base

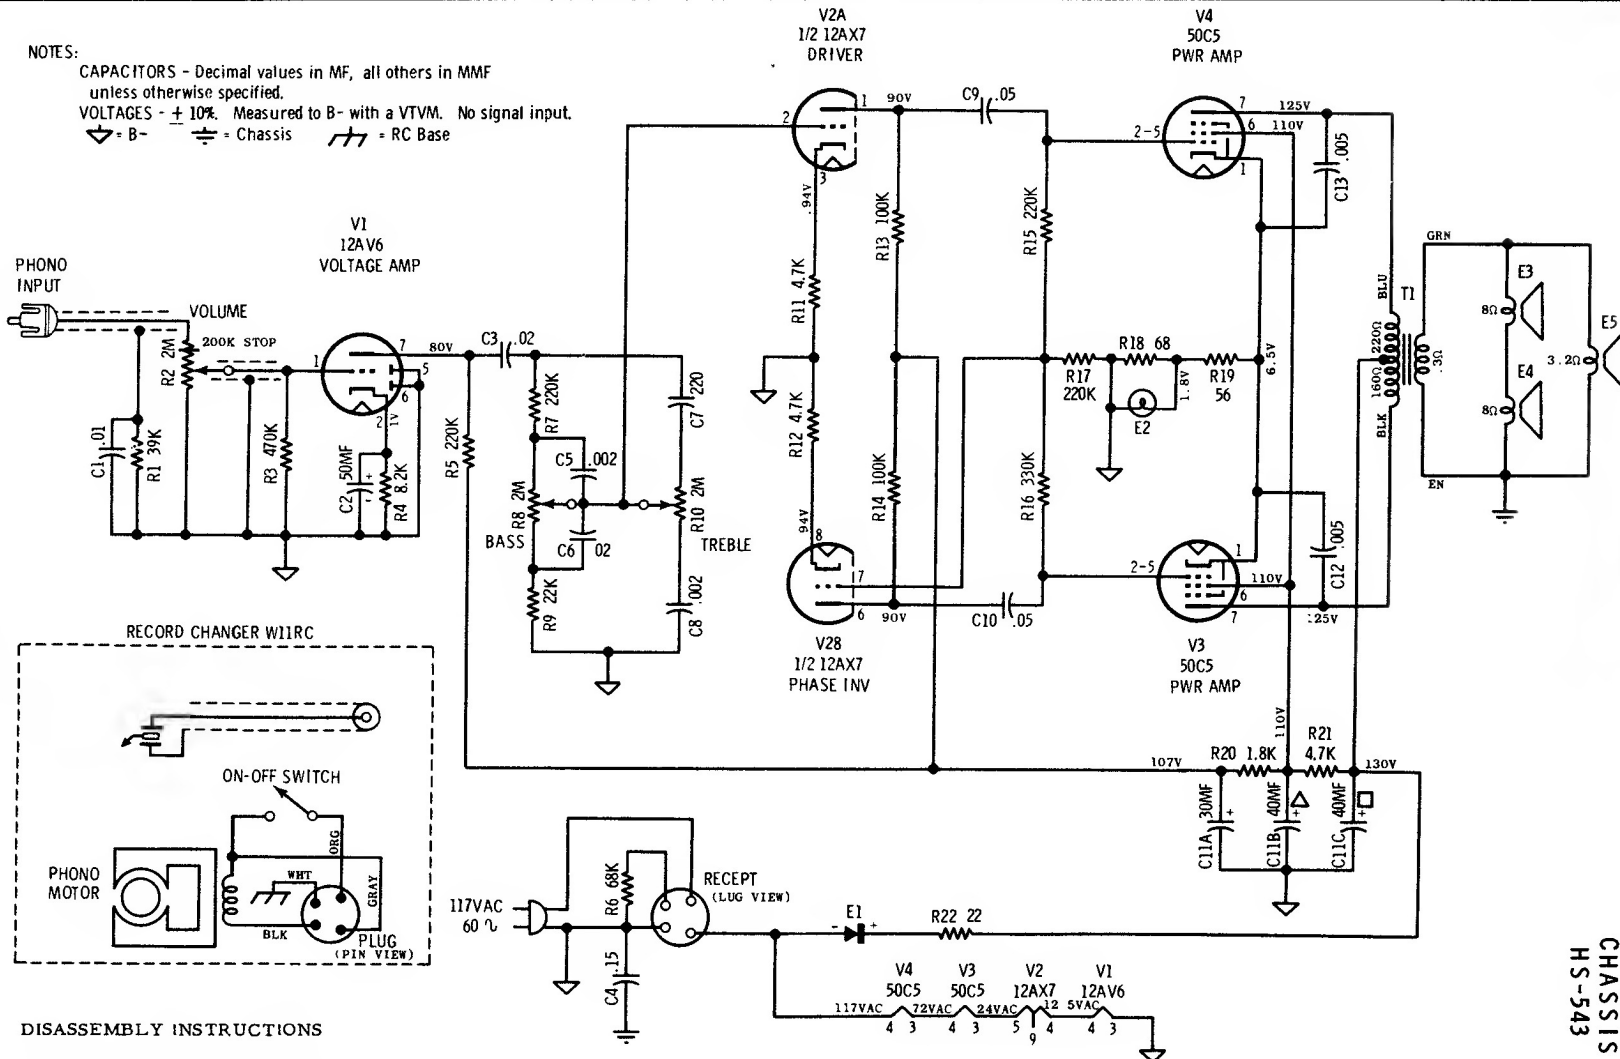

DISASSEMBLY INSTRUCTIONS

To Remove Chassis from Cabinet

1. Remove the four screws which hold the perforated panel in place and remove the panel.
2. Remove the four screws which hold the changer mounting board in place and remove changer board (disconnect all leads from changer).
3. Pull knobs off from front of cabinet.
4. Remove nuts which mount chassis to cabinet and disconnect speaker leads.
5. Remove chassis from cabinet.

To Remove Record Changer from Mounting Board

1. Turn the record changer mounting screws down flush with the record changer base.
2. From bottom of changer, turn the Tinnermann nuts located at the ends of the mounting screws so they are parallel with the screws.
3. Lift record changer off of the mounting board.