


MOTOROLA

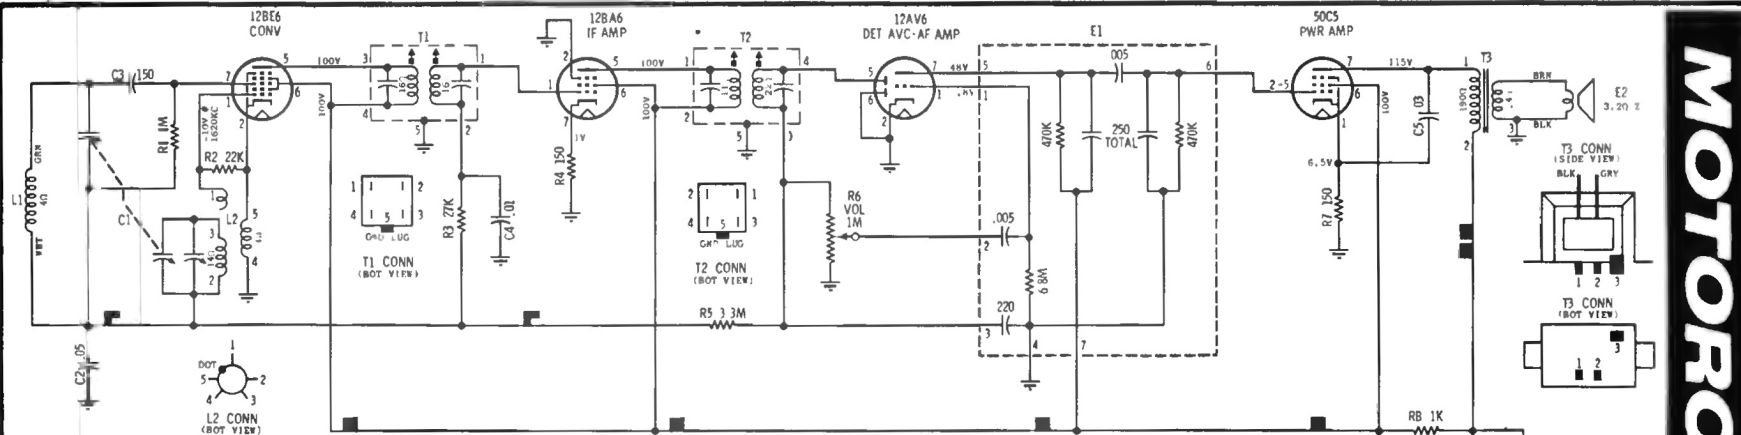

CAPACITORS - Decimal values in MF, all others in MMF unless otherwise specified.

VOLTAGES - Measured from point indicated to chassis with a VTVM, $\pm 10\%$. No signal input.

INPUT VOLTAGE - 120V AC ONLY.




TUNING RANGE - 535 KC to 1620 KC.
 IF - 455 KC.

PLATED PANEL WIRING LEGEND

■ = B+
 ■ = AVC
 ■ = FILAMENT

LOOP LEAD (GRID SIDE)

LOOP LEAD (AVC SIDE)

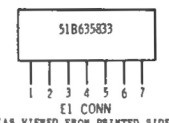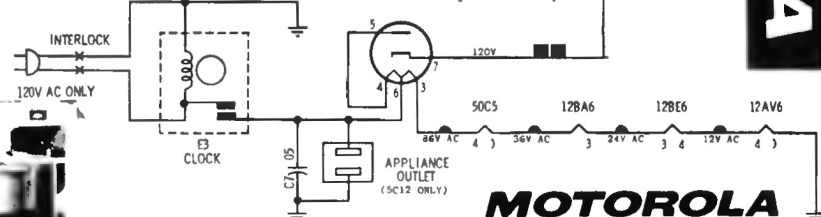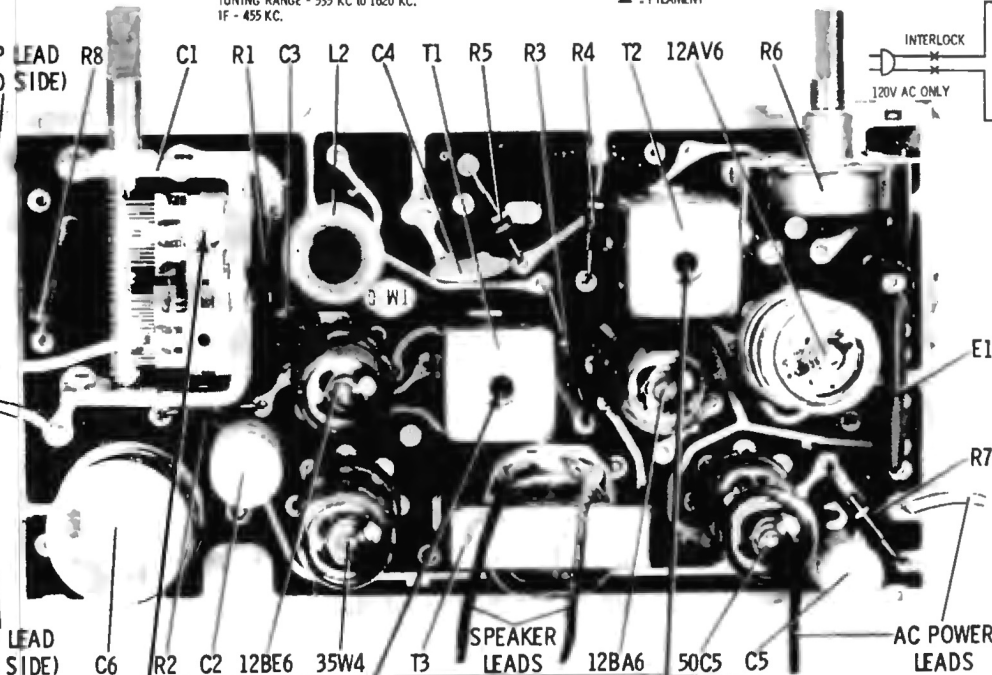

MOTOROLA

MODELS	CHASSIS
5C11E	HS-658
5C12M	HS-658
5C12P	HS-658
5C12W	HS-658

To Remove Chassis

1. Remove cabinet back screws and remove cabinet back.
2. Pull off the two control knobs from the front of the radio.
3. From front, remove the Phillips head screw near tuning shaft.
4. From rear, remove chassis mounting screw from the ear of the volume control.
5. Unsolder power leads from connector strip located behind clock and also unsolder speaker leads from speaker.
6. Remove chassis from cabinet.

To Remove Clock Crystal

1. Pull off clock knobs. Insert a screwdriver between the cabinet and the right-hand edge of the clock crystal (near number 3) to release catch.
2. Pry the crystal out with the screwdriver.