


MOTOROLA

MODELS CHASSIS
5R14N HS-670


To Remove Chassis From Cabinet

1. Pull off control knobs.
2. Remove 3 antenna panel mounting screws.
3. Remove antenna panel (disconnect line cord from interlock).
4. Disconnect antenna and speaker leads.
5. Remove 4 record changer board mounting screws.
6. Lift changer and mounting board up and out of the way.

7. Loosen 2 screws which hold interlock to cabinet; remove interlock from cabinet.
8. "Uncrimp" ends of chassis mounting brackets and melt solder at these points. CAUTION: Apply only enough heat to allow chassis to slide out of brackets; too much heat may damage the plated circuit board.
9. Slide chassis out of the brackets.
10. Disconnect record changer leads from chassis.

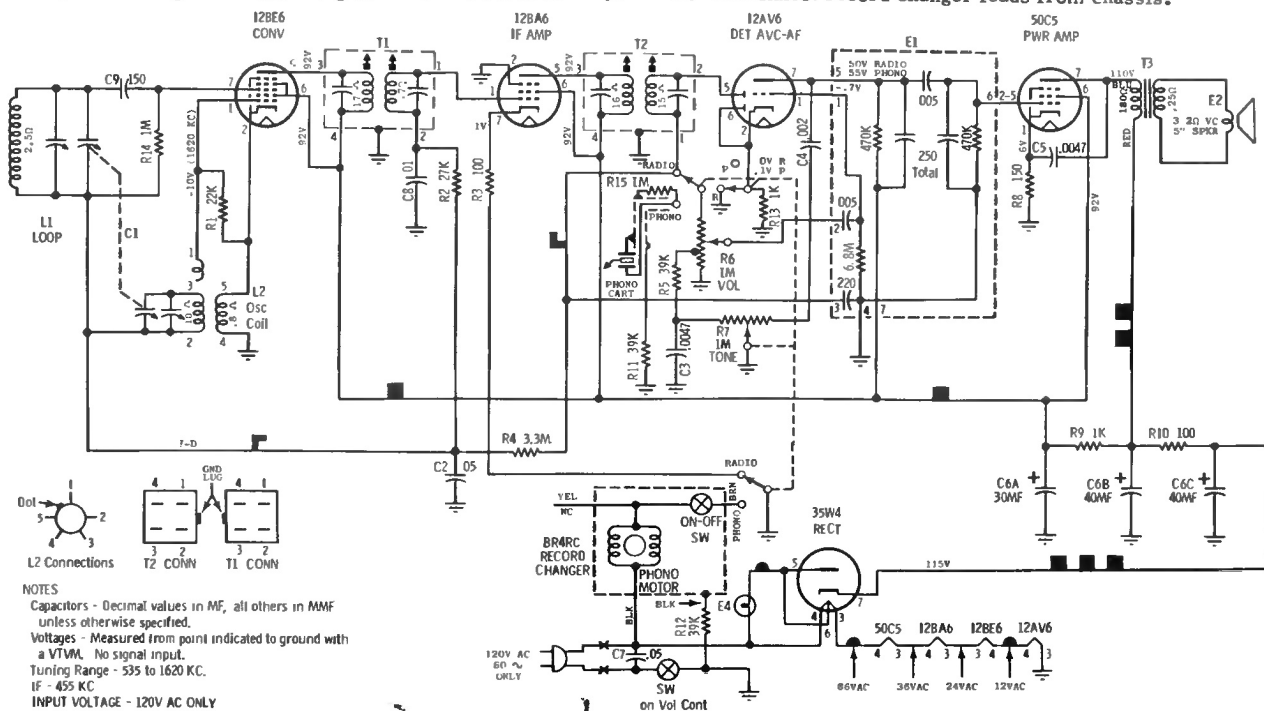

NOTES
Capacitors - Decimal values in MF, all others in MMF unless otherwise specified.
Voltages - Measured from point indicated to ground with a VTVM. No signal input.
Tuning Range - 535 to 1620 KC.
IF - 455 KC.
INPUT VOLTAGE - 120V AC ONLY
PLATED PANEL WIRING LEGEND
■ = B+ ■ = AVC ▲ = FILAMENT

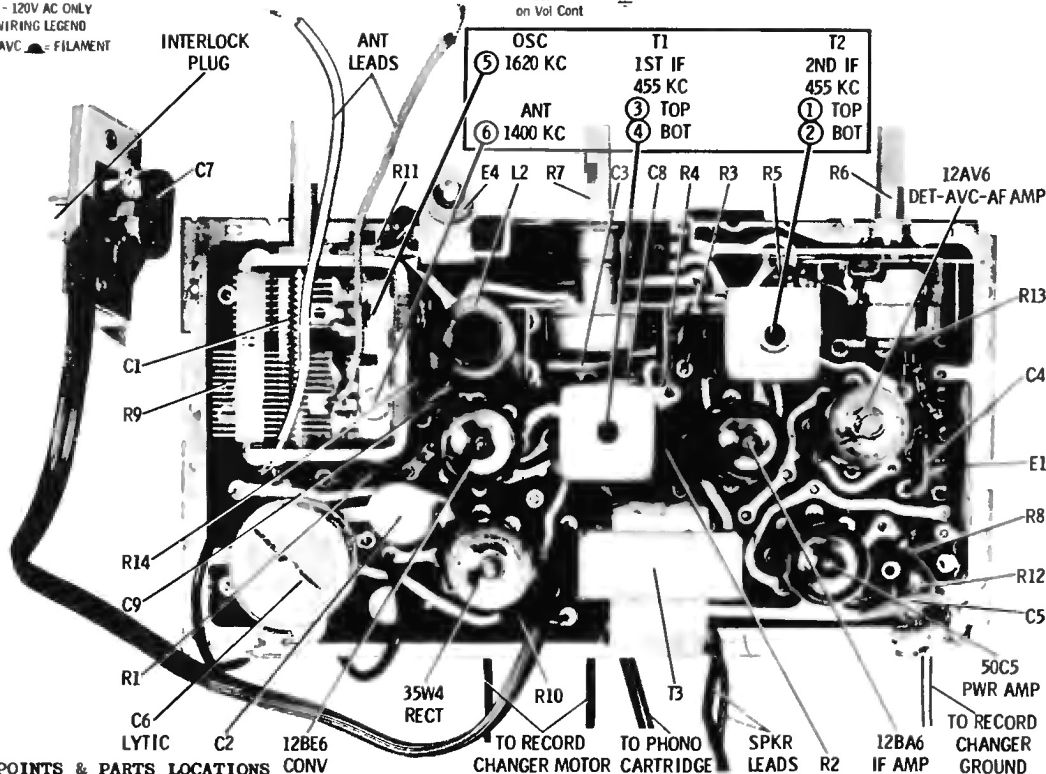

ALIGNMENT POINTS & PARTS LOCATIONS