



MOTOROLA

MODELS AC4B, AC43B, AT30B, AT31B CHASSIS HS-67201 & HS-68202

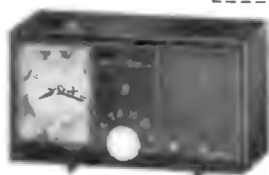

MODEL AC43B

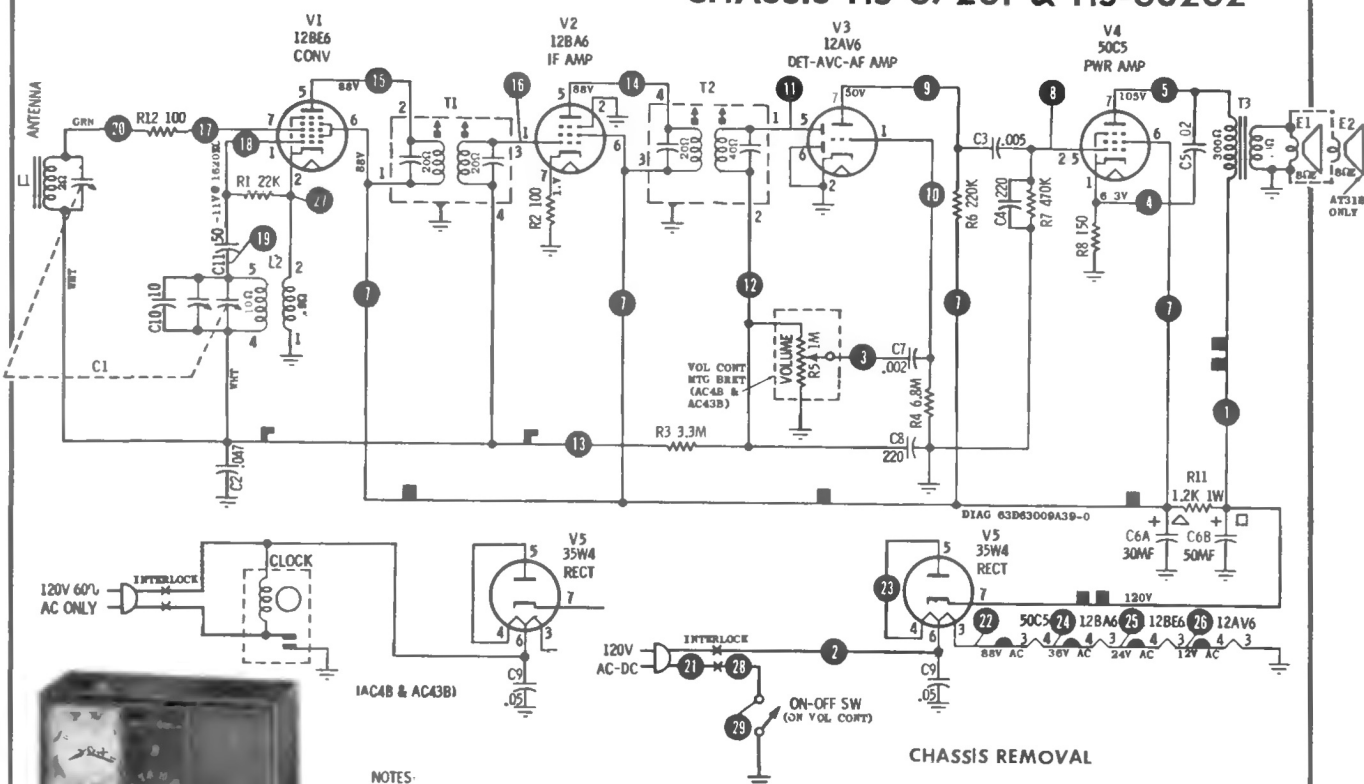

MODEL AT31B

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF, ALL OTHERS IN PF.
RESISTORS - 1/2 WATT FIXED COMPOSITION, 20% UNLESS OTHERWISE SPECIFIED.
VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM. $\pm 10\%$ NO SIGNAL INPUT
TUNING RANGE - 535KC TO 1620KC (IF-455KC)

BOARD WIRING LEGEND

$\square$ = B+ $\square$ = AVC $\square$ = FIL $\square$ = B-



CHASSIS REMOVAL

1. Remove cabinet back - 4 screws hold it in place.
2. Remove chassis mounting screw at base of chassis and screw at tuning gang mounting bracket.
3. Pull off volume knob ONLY. (Do not pull captivated tuning knob.)
4. Unsolder appropriate leads to slide chassis out of tuning knob and cabinet.

