



MOTOROLA

MODEL CHASSIS
SK43 HS-835
SK43-1 HS-835

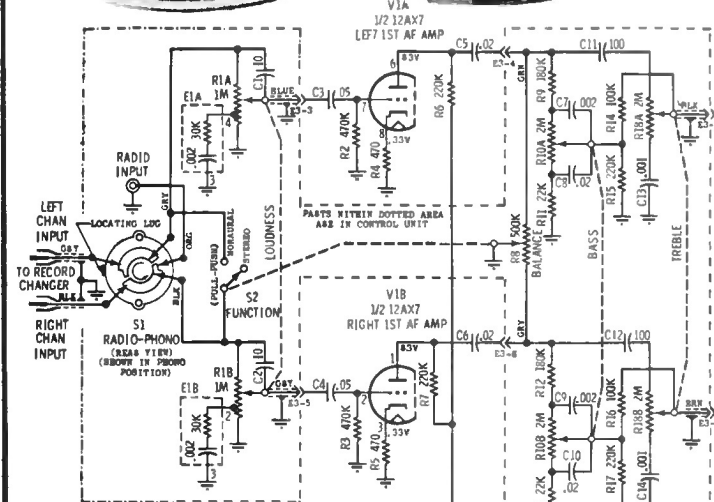

NOTES:
CAPACITORS - Unless otherwise specified, decimal values in MF, all others in MMF.
VOLTAGES - Measured from point indicated to chassis with a VTVM, $\pm 10\%$ No signal input

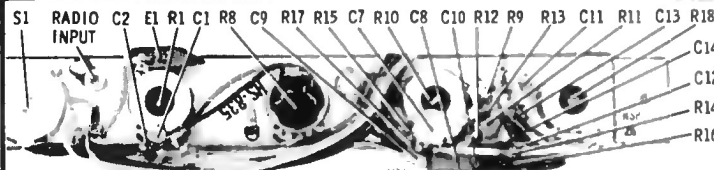

TO IMPROVE 450 CYCLE AUDIO RESPONSE:
R-26 and R-27 (both 820 ohms), changed to 2.2K.

TO REMOVE CHASSIS

1. Remove cabinet back cover - 17 screws hold it in place.
2. Disconnect and unsolder all leads connected to chassis.
3. Remove 6 chassis mounting screws.
4. Remove chassis from cabinet.


TO REMOVE CONTROL STRIP

1. Remove cabinet back cover - 17 screws hold it in place.
2. Unplug all cables emanating from control strip.
3. Remove control knobs.
4. Remove escutcheon - 2 cup nuts hold it in place.
5. Remove 2 control strip mounting screws and remove control strip.

TO REMOVE RECORD CHANGER

1. Turn the 2 changer mounting screws clockwise until flush with the changer base.
2. Remove cabinet back cover - 17 screws hold it in place.
3. Unplug power and audio cables from record changer.
4. Turn the mounting clips, located at the ends of the mounting screws, so they are parallel with the mounting screws, then lift changer out of cabinet.

TO REPLACE STYLUS,
GRASP SELECTOR BAR
AND PULL STRAIGHT
OUT. WHEN INSTALLING
NEW STYLUS, MAKE CERTAIN
SHANK ENGAGES "V" IN
YOKE.

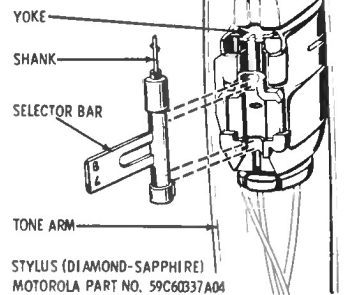

STYLUS REPLACEMENT SK43-1 SERIES

